



Service Manual



# Service Manual

## MG320\_KG320

Model : MG320\_KG320



---

# Table Of Contents

<b>1. INTRODUCTION.....</b>	<b>5</b>	4.11 Receiver Trouble .....	85
1.1 Purpose .....	5	4.12 Microphone Trouble.....	87
1.2 Regulatory Information .....	5	4.13 RTC Trouble .....	89
1.3 Abbreviations .....	7	4.14 Camera and Flash Trouble.....	91
<b>2. PERFORMANCE .....</b>	<b>9</b>	<b>5. DOWNLOAD AND CALIBRATION.....</b>	<b>94</b>
2.1 H/W Features.....	9	5.1 Download.....	94
2.2 Technical Specification .....	10	<b>6. BLOCK DIAGRAM .....</b>	<b>99</b>
<b>3. TECHNICAL BRIEF .....</b>	<b>15</b>	<b>7. Circuit Diagram.....</b>	<b>101</b>
3.1 Transceiver (SI4210, U401).....	15	<b>8. pcb layout .....</b>	<b>108</b>
3.2 Power Amplifier (SKY77328, U400) .....	20	<b>9. ENGINEERING MODE.....</b>	<b>115</b>
3.3 26 MHz Clock (VCTCXO, X400).....	22	9.1 BB Test [MENU 1] .....	116
3.4 FEM for Triband(FL400) .....	22	9.2 RF Test [MENU 2] .....	118
3.5 Digital Main Processor (AD6527B, U102) .....	24	9.3 MF mode [MENU 3] .....	118
3.5 Analog Main & Power Management Processor (AD6535, U101).....	29	9.4 Trace option [MENU 4] .....	119
3.6 Charging IC (ISL6299, U205) .....	37	9.5 Call timer [MENU 5] .....	119
3.7 CAMERA IC(AIT811T,U103) .....	40	9.6 Fact. Reset [MENU 6].....	119
3.8 MIDI IC(YMU787,U202).....	42	9.7 S/W version .....	119
3.9 Keypad Switches and Scanning .....	46	<b>10. STAND ALONE TEST .....</b>	<b>130</b>
3.10 Microphone .....	47	10.1 Introduction .....	120
3.11 Main Speaker.....	47	10.2 Setting Method.....	120
3.12 Headset Interface .....	48	10.3 Means of Test.....	121
3.13 MEMORY(TOSHIBA, U204).....	49	<b>11. AUTO CALIBRATION .....</b>	<b>123</b>
3.14 BLUETOOTH(LBMA-2C67B2,U202).....	50	11.1 Calibration.....	123
3.15 CAMERA CONNECTOR, CAMERA LDO(CN202,U201) .....	51	11.2 AGC .....	127
3.16 KEY BACKLIGHT .....	52	11.3 APC .....	127
3.17 WHITE/FLASH LED LDO .....	52	11.4 ADC .....	127
3.18 FLIP SWITCH (U105) .....	53	11.5 Setting.....	127
3.19 VIBRATOR .....	53	11.6 How to do calibration .....	127
<b>4. TROUBLE SHOOTING .....</b>	<b>54</b>	<b>12. EXPLODED VIEW &amp; REPLACEMENT     PART LIST .....</b>	<b>129</b>
4.1 RX Trouble.....	54	12.1 Exploded View .....	129
4.2 TX Trouble .....	60	12.2 Replacement Parts .....	131
4.3 Power On Trouble.....	67	12.3 Accessory .....	147
4.4 Charging Trouble .....	69		
4.5 Vibrator Trouble .....	71		
4.6 LCD Trouble .....	73		
4.7 BT Trouble .....	76		
4.8 Speaker Trouble .....	79		
4.9 SIM Card Interface Trouble .....	81		
4.10 Earphone Trouble .....	83		



# 1. INTRODUCTION

## 1.1 Purpose

This manual provides the information necessary to repair, calibration, description and download the features of this model.

## 1.2 Regulatory Information

### A. Security

Toll fraud, the unauthorized use of telecommunications system by an unauthorized part (for example, persons other than your company's employees, agents, subcontractors, or person working on your company's behalf) can result in substantial additional charges for your telecommunications services. System users are responsible for the security of own system. There are may be risks of toll fraud associated with your telecommunications system. System users are responsible for programming and configuring the equipment to prevent unauthorized use. The manufacturer does not warrant that this product is immune from the above case but will prevent unauthorized use of common-carrier telecommunication service of facilities accessed through or connected to it.

The manufacturer will not be responsible for any charges that result from such unauthorized use.

### B. Incidence of Harm

If a telephone company determines that the equipment provided to customer is faulty and possibly causing harm or interruption in service to the telephone network, it should disconnect telephone service until repair can be done. A telephone company may temporarily disconnect service as long as repair is not done.

### C. Changes in Service

A local telephone company may make changes in its communications facilities or procedure. If these changes could reasonably be expected to affect the use of the this phone or compatibility with the network, the telephone company is required to give advanced written notice to the user, allowing the user to take appropriate steps to maintain telephone service.

### D. Maintenance Limitations

Maintenance limitations on this model must be performed only by the manufacturer or its authorized agent. The user may not make any changes and/or repairs except as specifically noted in this manual. Therefore, note that unauthorized alternations or repair may affect the regulatory status of the system and may void any remaining warranty.

# 1. INTRODUCTION

---

## E. Notice of Radiated Emissions

This model complies with rules regarding radiation and radio frequency emission as defined by local regulatory agencies. In accordance with these agencies, you may be required to provide information such as the following to the end user.

## F. Pictures

The pictures in this manual are for illustrative purposes only; your actual hardware may look slightly different.

## G. Interference and Attenuation

Phone may interfere with sensitive laboratory equipment, medical equipment, etc. Interference from unsuppressed engines or electric motors may cause problems.

## H. Electrostatic Sensitive Devices

### ATTENTION

**Boards, which contain Electrostatic Sensitive Device (ESD), are indicated  by the sign.**

**Following information is ESD handling:**

- Service personnel should ground themselves by using a wrist strap when exchange system boards.
- When repairs are made to a system board, they should spread the floor with anti-static mat which is also grounded.
- Use a suitable, grounded soldering iron.
- Keep sensitive parts in these protective packages until these are used.
- When returning system boards or parts like EEPROM to the factory, use the protective package as described.

## 1.3 Abbreviations

For the purposes of this manual, following abbreviations apply:

APC	Automatic Power Control
BB	Baseband
BER	Bit Error Ratio
CC-CV	Constant Current - Constant Voltage
DAC	Digital to Analog Converter
DCS	Digital Communication System
dBm	dB relative to 1 milli watt
DSP	Digital Signal Processing
EEPROM	Electrical Erasable Programmable Read-Only Memory
ESD	Electrostatic Discharge
FPCB	Flexible Printed Circuit Board
GMSK	Gaussian Minimum Shift Keying
GPIO	General Purpose Interface Bus
GSM	Global System for Mobile Communications
IPUI	International Portable User Identity
IF	Intermediate Frequency
LCD	Liquid Crystal Display
LDO	Low Drop Output
LED	Light Emitting Diode
OPLL	Offset Phase Locked Loop

# 1. INTRODUCTION

---

PAM	Power Amplifier Module
PCB	Printed Circuit Board
PGA	Programmable Gain Amplifier
PLL	Phase Locked Loop
PSTN	Public Switched Telephone Network
RF	Radio Frequency
RLR	Receiving Loudness Rating
RMS	Root Mean Square
RTC	Real Time Clock
SAW	Surface Acoustic Wave
SIM	Subscriber Identity Module
SLR	Sending Loudness Rating
SRAM	Static Random Access Memory
PSRAM	Pseudo SRAM
STMR	Side Tone Masking Rating
TA	Travel Adapter
TDD	Time Division Duplex
TDMA	Time Division Multiple Access
UART	Universal Asynchronous Receiver/Transmitter
VCO	Voltage Controlled Oscillator
VCTCXO	Voltage Control Temperature Compensated Crystal Oscillator
WAP	Wireless Application Protocol

## 2. PERFORMANCE

### 2.1 H/W Features

Item	Feature	Comment
Standard Battery	Li-Poly, 600mAh Battery Size : 36 (W) × 24(H) × 6.5(T) [mm] Battery Weight : TBD	
Stand by Current	Under the minimum current consumption environment (such as paging period 9), the level of standby current is below 4mA.	
Talk time	Up to 2 hours (GSM TX Level 5)	
Stand by time	Up to 200 hours (Paging Period: 9, RSSI: -85 dBm)	
Charging time	Approx. Under 3.00 hours	
RX Sensitivity	GSM, EGSM: -104dBm, DCS: -104dBm	
TX output power	GSM, EGSM : 33dBm(Level 5), DCS, PCS : 30dBm(Level 0)	
GPRS compatibility	Class 10	
SIM card type	3V Small Only	
Display	LCD : TFT 176 × 220 pixel 260K Color	
Status Indicator	Hard icons. Key Pad 0 ~ 9, #, *, Menu Key, Confirm Key, Shot Key Send Key, END/PWR Key, Left, Right, Up, Down Key Soft Key(Left/Right), Hot Key(Left/Right)	
ANT	Internal	
EAR Phone Jack	Yes (stereo)	
PC Synchronization	Yes	
Speech coding	EFR/FR/HR	
Data and Fax	Yes	
Vibrator	Yes	
Loud Speaker	Yes	
Voice Recoding	Yes	
Microphone	Yes	
Speaker/Receiver	Speaker/Receiver	
Travel Adapter	Yes	
MIDI	64 Poly (Stereo SPK)	
MP3/AAC	Yes	
Options	Data Cable	

## 2. PERFORMANCE

### 2.2 Technical Specification

Item	Description	Specification
1	Frequency Band	<b>EGSM</b> • TX: $890 + (n-1024) \times 0.2$ MHz • RX: $935 + (n-1024) \times 0.2$ MHz (n=975~1024)  <b>DCS</b> • TX: $1710 + (n-512) \times 0.2$ MHz • RX: $1805 + (n-512) \times 0.2$ MHz (n=512~885)  <b>PCS</b> • TX: $1810 + (n-512) \times 0.2$ MHz • RX: $1905 + (n-512) \times 0.2$ MHz (n=512~885)
2	Phase Error	RMS < 5 degrees Peak < 20 degrees
3	Frequency Error	< 0.1 ppm
4	Power Level	<b>GSM, EGSM</b>
		Level   Power   Toler.   Level   Power   Toler.
		5   33 dBm   ±2dB   13   17 dBm   ±3dB
		6   31 dBm   ±3dB   14   15 dBm   ±3dB
		7   29 dBm   ±3dB   15   13 dBm   ±3dB
		8   27 dBm   ±3dB   16   11 dBm   ±5dB
		9   25 dBm   ±3dB   17   9 dBm   ±5dB
		10   23 dBm   ±3dB   18   7 dBm   ±5dB
		11   21 dBm   ±3dB   19   5 dBm   ±5dB
		12   19 dBm   ±3dB
		<b>DCS, PCS</b>
		Level   Power   Toler.   Level   Power   Toler.
		0   30 dBm   ±2dB   8   14 dBm   ±3dB
		1   28 dBm   ±3dB   9   12 dBm   ±4dB
		2   26 dBm   ±3dB   10   10 dBm   ±4dB
		3   24 dBm   ±3dB   11   8 dBm   ±4dB
		4   22 dBm   ±3dB   12   6 dBm   ±4dB
		5   20 dBm   ±3dB   13   4 dBm   ±4dB
		6   18 dBm   ±3dB   14   2 dBm   ±5dB
7   16 dBm   ±3dB   15   0 dBm   ±5dB		

## 2. PERFORMANCE

Item	Description	Specification	
5	Output RF Spectrum (due to modulation)	<b>GSM, EGSM</b>	
		Offset from Carrier (kHz).	Max. dBc
		100	+0.5
		200	-30
		250	-33
		400	-60
		600~ <1,200	-60
		1,200~ <1,800	-60
		1,800~ <3,000	-63
		3,000~ <6,000	-65
		6,000	-71
		<b>DCS, PCS</b>	
		Offset from Carrier (kHz).	Max. dBc
		100	+0.5
		200	-30
		250	-33
		400	-60
		600~ <1,200	-60
		1,200~ <1,800	-60
		1,800~ <3,000	-65
3,000~ <6,000	-65		
6,000	-73		
6	Output RF Spectrum (due to switching transient)	<b>GSM, EGSM</b>	
		Offset from Carrier (kHz)	Max. (dBm)
		400	-19
		600	-21
		1,200	-21
		1,800	-24

## 2. PERFORMANCE

Item	Description	Specification		
6	Output RF Spectrum (due to switching transient)	<b>DCS, PCS</b>		
		Offset from Carrier (kHz).		Max. (dBm)
		400		-22
		600		-24
		1,200		-24
1,800		-27		
7	Spurious Emissions	Conduction, Emission Status		
8	Bit Error Ratio	<b>GSM, EGSM</b> BER (Class II) < 2.439% @-102 dBm		
		<b>DCS, PCS</b> BER (Class II) < 2.439% @-100 dBm		
9	RX Level Report Accuracy	$\pm 3$ dB		
10	SLR	$8 \pm 3$ dB		
11	Sending Response	Frequency (Hz)	Max.(dB)	Min.(dB)
		100	-12	-
		200	0	-
		300	0	-12
		1,000	0	-6
		2,000	4	-6
		3,000	4	-6
		3,400	4	-9
4,000	0	-		
12	RLR	$2 \pm 3$ dB		
13	Receiving Response	Frequency (Hz)	Max.(dB)	Min.(dB)
		100	-12	-
		200	0	-
		300	2	-7
		500	*	-5
		1,000	0	-5
		3,000	2	-5
		3,400	2	-10
		4,000	2	
		* Mean that Adopt a straight line in between 300 Hz and 1,000 Hz to be Max. level in the range.		

## 2. PERFORMANCE

Item	Description	Specification	
14	STMR	13 ±5 dB	
15	Stability Margin	> 6 dB	
16	Distortion	dB to ARL (dB)	Level Ratio (dB)
		-35	17.5
		-30	22.5
		-20	30.7
		-10	33.3
		0	33.7
		7	31.7
10	25.5		
17	Side Tone Distortion	Three stage distortion < 10%	
18	System frequency (13 MHz) tolerance	≤ 2.5ppm	
19	32.768KHz tolerance	≤ 30ppm	
20	Ringer Volume	At least 65 dBspl under below conditions: 1. Ringer set as ringer. 2. Test distance set as 50 cm	
21	Charge Current	Fast Charge : < 440 mA Slow Charge : < 66 mA	
22	Antenna Display	Antenna Bar Number	Power
		5	-85 dBm ~
		4	-90 dBm ~ -86 dBm
		3	-95 dBm ~ -91 dBm
		2	-100 dBm ~ -96 dBm
		1	-105 dBm ~ -101 dBm
		0	~ -105 dBm
23	Battery Indicator	Battery Bar Number	Voltage
		0	3.36 ~ 3.54 V
		1	3.55 ~ 3.66 V
		2	3.67 ~ 3.72 V
		3	3.73 ~ 3.84 V
		4	3.85 V ~
24	Low Voltage Warning	3.55 ±0.03V (Call)	
		3.48 ±0.03V (Standby)	

## 2. PERFORMANCE

---

Item	Description	Specification
25	Forced shut down Voltage	$3.35 \pm 0.03$ V
26	Battery Type	1 Li-Poly Battery Standard Voltage = 3.7 V Battery full charge voltage = 4.2 V Capacity: 800mAh
27	Travel Charger	Switching-mode charger Input: 100 ~ 240 V, 50/60 Hz Output: 5.2 V, 800 mA

### 3. TECHNICAL BRIEF

#### 3.1 Transceiver (SI4210, U401)

The RF parts consist of a transmitter part, a receiver part, a digitally-controlled crystal oscillator. The Aero® II transceiver is a complete RF front end for multi-band GSM and GPRS wireless communications. The receive section interfaces between the RF band-select SAW filters and the baseband subsystem. The Aero II receiver leverages a proven digital low-IF architecture and enables a universal baseband interface without the need for complex dc offset compensation. The transmit section of Aero II provides a complete upconversion path from the baseband subsystem to the power amplifier (PA) using an offset phase-locked loop (OPLL) integrated with Silicon Laboratories' patented synthesizer technology. All sensitive components, such as TX/RV VCOs, loop filters, tuning inductors, and varactors are completely integrated into a single integrated circuit. The Aero II transceiver includes a digitally-controlled crystal oscillator (DCXO) and completely integrates the reference oscillator and varactor functionality.

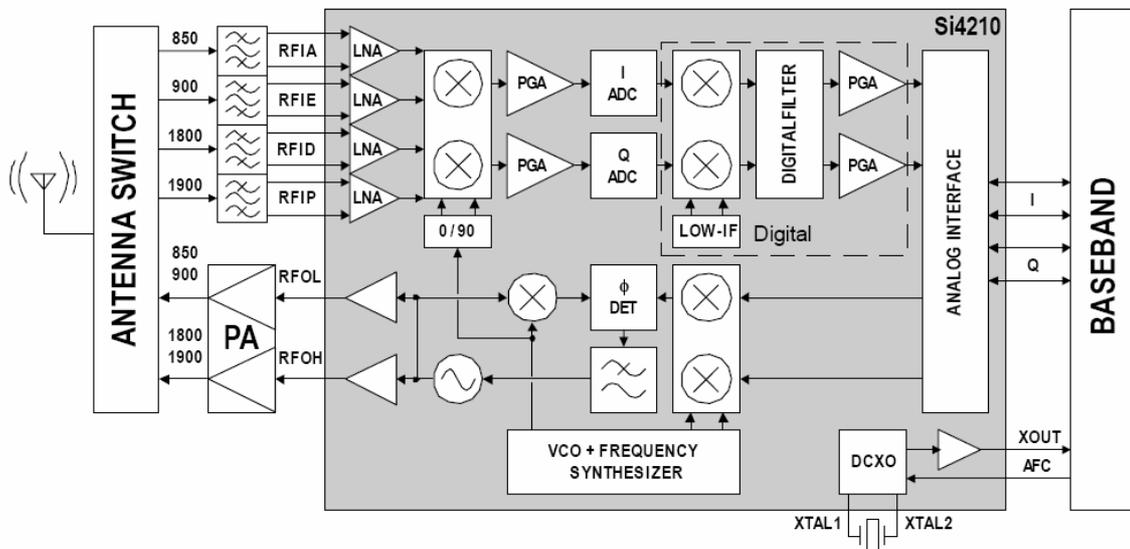


Figure. 3-1 SI4210 TRANSCEIVER BLOCK DIAGRAM

### 3. TECHNICAL BRIEF

#### (1) Receiver Part

The Aero II transceiver uses a digital low-IF receiver architecture that allows for the on-chip integration of the channel selection filters, eliminating the external RF image reject filters, and the IF SAW filter required in conventional superheterodyne architectures. Compared with direct-conversion architectures, the digital low-IF architecture has a much greater degree of immunity to dc offsets that can arise from RF local oscillator (RFLO) self-mixing, second-order distortion of blockers (AM suppression), and device  $1/f$  noise.

The digital low-IF receiver's immunity to dc offsets has the benefit of expanding part selection and improving manufacturing. At the front end, the common-mode balance requirements on the input SAW filters are relaxed, and the PCB board design is simplified. At the radio's opposite end, the BBIC is one of the handset's largest BOM contributors. It is not uncommon for a direct conversion solution to be compatible only with a BBIC from the same supplier in order to address the complex dc offset issues. However, since the Aero II transceiver has no requirement for BBIC support of complex dc offset compensation, it is able to interface to all of the industry leading baseband ICs.

The receive (RX) section integrates four differential input low noise amplifiers (LNAs) supporting the GSM 850 (869-894 MHz), E-GSM 900 (925-960 MHz), DCS 1800 (1805-1880 MHz), and PCS 1900 (1930-1990 MHz) bands. The LNA inputs are matched to 150 or 200 balanced-output SAW filters through external LC matching networks. See "AN150: Aero II Transceiver PCB Design Guide" for implementation details. The active LNA input is automatically selected by the ARFCN[9:0] bits and the BANDIND bit in Register 21h. If performing LNA swapping, the LNASWAP bit in Register 05h is also needed. Please refer to section 4.1.1 for details. The LNA gain is controlled with the LNAG bit in Register 20h.

A quadrature image-reject mixer downconverts the RF signal to a low intermediate frequency (IF). The mixer output is amplified with an analog programmable gain amplifier (PGA) that is controlled with the AGAIN[2:0] bits in Register 20h. The quadrature IF signal is digitized with high resolution analog-todigital converters (ADCs).

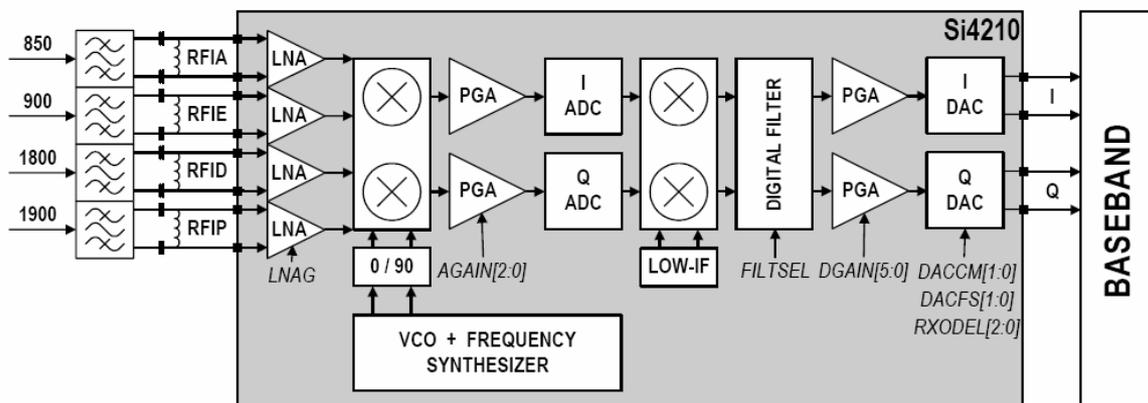


Figure 3-2 SI4210 RECEIVER PART

The ADC output is downconverted to baseband with a digital quadrature local oscillator signal. Digital decimation and FIR filters perform digital filtering, and remove ADC quantization noise, blockers, and reference interferers. The response of the FIR filter is programmable to a flat pass band setting (FILTSEL = 0, Register 08h) and a linear phase setting (FILTSEL = 1, Register 08h). After filtering, the digital output is scaled with a PGA, which is controlled with the DGAIN[5:0] bits in Register 20h.

The LNAG, AGAIN[2:0], and DGAIN[5:0] register bits should be set to provide a constant amplitude signal to the baseband receive inputs. See “AN153: Aero II Transceiver AGC Strategy” for more details. Digital-to-analog converters (DACs) drive differential I and Q analog signals onto the BIP, BIN, BQP, and BQN pins to interface to standard analog-input baseband ICs.

The receive DACs are updated at 1.083 MHz and have a first-order reconstruction filter with a 1 MHz bandwidth. No special processing is required in the baseband for dc offset compensation. The receive and transmit baseband I/Q pins are multiplexed together in a 4-wire interface (BIP, BIN, BQP, and BQN). The common mode level at the receive I and Q outputs is programmable with the DACCM[1:0] bits, and the full scale level is programmable with the DACFS[1:0] bits in Register 05h.

#### **(2) Transmit section**

The transmit section consists of an I/Q baseband upconverter, an offset phase-locked loop (OPLL), and two 50  $\Omega$  output buffers that can drive an external power amplifier (PA). One output is for the GSM 850 (824-849 MHz) and E-GSM 900 (880-915 MHz) bands and one output is for the DCS 1800 (1710-1785 MHz) and PCS 1900 (1850-1910 MHz) bands.


The OPLL requires no external filtering to attenuate transmitter noise and spurious signals in the receive band, saving both cost and power. The output of the transmit VCO (TXVCO) is a constant-envelope signal that reduces the problem of spectral spreading caused by non-linearity in the PA. Additionally, the TXVCO benefits from isolation provided by the transmit output buffers. This significantly minimizes any load pull effects and eliminates the need for off-chip isolation networks.

A quadrature mixer upconverts the differential in-phase (BIP, BIN) and quadrature (BQP, BQN) baseband signals to an intermediate frequency (IF) that is filtered and which is used as the reference input to the OPLL. The OPLL consists of a feedback mixer, a phase detector, a loop filter, and a fully integrated TXVCO. Low-pass filters before the OPLL phase detector reduce the harmonic content of the quadrature modulator and feedback mixer outputs.

The transmit I/Q interface must have a non-zero input no later than 94 quarter bits after PDN is asserted for proper operation. If the baseband is unable to provide a sufficient TX I/Q non-zero input preamble, then the CWDUR bits in Register 05h can be used to provide a preamble extension.

The receive and transmit baseband I/Q pins are multiplexed together in a 4-wire interface (BIP, BIN, BQP, and BQN). In transmit mode, the BIP, BIN, BQP, and BQN pins provide the analog I/Q input from the baseband subsystem. The full-scale level at the baseband input pins is programmable with the BBG[1:0] bits in Register 05h. The I and Q signals are automatically swapped within the Aero II transceiver when switching bands. The transmit output path is automatically selected by the ARFCN[9:0] bits and the BANDIND bits in Register 21h. As an option for multislot applications, direct control of the output transmit buffers during a burst is offered through the PDTXO bit in Register 23h.

### 3. TECHNICAL BRIEF

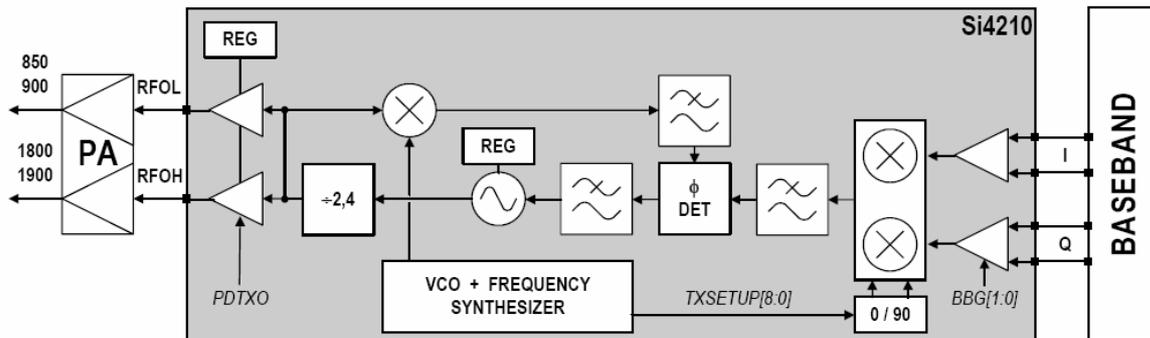

**Figure. 3-3 SI4210 TRANSMITTER PART**

#### (3) Digitally-controlled crystal oscillator

The Aero II transceiver integrates the DCXO circuitry required to generate a precise system reference clock using only an external crystal resonator. The DCXO replaces a discrete VC-TCXO module. The DCXO allows for the use of a standard 26 MHz crystal, which reduces both cost and area compared to using a VCTCXO module. There are no external varactors or trim capacitors required. This simplifies the design, programming, and manufacturing compared to less integrated solutions.

The DCXO uses the CDAC and CAFC arrays to correct for both static and dynamic frequency errors, respectively. An internally digitally programmable capacitor array (CDAC) provides a coarse method of adjusting the reference frequency in discrete steps. The CDAC[6:0] bits in Register 03h are programmed to compensate for static variations in PCB design, manufacturing, and crystal tolerance, and are typically set to center the oscillator frequency during production. A second capacitor array (CAFC) allows for fine and continuous dynamic adjustment of the reference frequency by an external control voltage (AFC). This control voltage is supplied by the AFC DAC of the baseband and should be connected to the transceiver AFC pin (pin 27). The baseband determines the appropriate frequency adjustment based on the receipt of the FCCH burst. The baseband then adjusts the AFC voltage to correct for frequency variations caused by temperature drift.


The transceiver can be adjusted for the corresponding baseband AFC input full-scale voltage by setting the AFCREF bit in Register 04h. Additionally, the Aero II transceiver supports an optional Digital AFC mode for DCXO operation that is selected by the AFCC bit in Register 04h. In digital mode, the connection between the baseband and transceiver is eliminated. AFC control is performed directly by a register write operation. This has the benefit of further easing PCB design and enabling a DAC in the baseband to be allocated to another function.

### 3. TECHNICAL BRIEF

The Aero II transceiver can be configured in DCXO mode or VC-TCXO mode by the XMODE pin. To use the transceiver in DCXO mode, the XMODE pin is tied high. The XTAL1 and XTAL2 pins are then connected directly to the 26 MHz crystal. No additional components are required. The use of an external VCTCXO module is also supported by tying the XMODE pin low. The VC-TCXO output should be input into XTAL1, and XTAL2 should be tied low.

A buffer is available to provide a reference clock output from the XOUT pin to the baseband input. The XOUT buffer is enabled when the XEN pin is set high, independent of the PDN pin. To achieve complete powerdown during sleep, the XEN pin should be set low to disable the XOUT buffer. The XOUT buffer is specified to drive a maximum load of 10 pF. The reference clock should be set to 13 MHz or 26 MHz by the XDIV pin. When XDIV is tied low, XOUT is 26 MHz, and when it is tied high, XOUT is 13 MHz.

For a simple to follow methodology and detailed instructions on crystal selection, see "AN152: Selecting a Crystal for Aero II Designs," or contact Silicon Laboratories Applications Support for assistance.

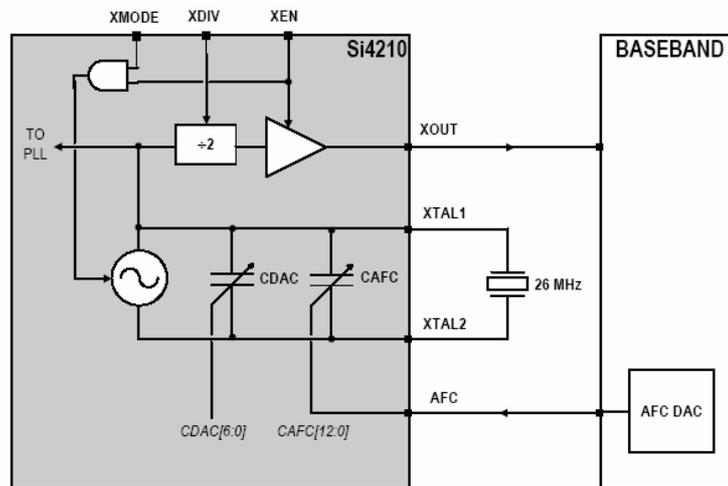

**Figure. 3-4 DCXO BLOCK DIAGRAM**

### 3. TECHNICAL BRIEF


---

#### 3.2 Power Amplifier (SKY77328, U400)

The RF parts consist of a transmitter part, a receiver part, a frequency synthesizer part, a voltage supply part, and a VCTCXO part.

The SKY77328 Power Amplifier Module (PAM) is designed in a low profile (1.2 mm), compact form factor for quad-band cellular handsets comprising GSM850/900, DCS1800, and PCS1900 operation. The PAM also supports Class 12 General Packet Radio Service (GPRS) multi-slot operation. The module consists of separate GSM850/900 PA and DCS1800/PCS1900 PA blocks, impedance-matching circuitry for 50  $\Omega$  input and output impedances, and a Power Amplifier Control (PAC) block with an internal current-sense resistor. The custom BiCMOS integrated circuit provides the internal PAC function and interface circuitry. Fabricated onto a single Gallium Arsenide (GaAs) die, one Heterojunction Bipolar Transistor (HBT) PA block supports the GSM850/900 bands and the other supports the DCS1800 and PCS1900 bands. Both PA blocks share common power supply pins to distribute current. The GaAs die, the Silicon (Si) die, and the passive components are mounted on a multi-layer laminate substrate. The assembly is encapsulated with plastic overmold. RF input and output ports of the SKY77328 are internally matched to a 50  $\Omega$  load to reduce the number of external components for a quad-band design. Extremely low leakage current (2.5  $\mu$ A, typical) of the dual PA module maximizes handset standby time. The SKY77328 also contains band-select switching circuitry to select GSM (logic 0) or DCS/PCS (logic 1) as determined from the Band Select (BS) signal. In Figure 1 below, the BS pin selects the PA output (DCS/PCS OUT or GSM850/900 OUT) and the Analog Power Control (VAPC) controls the level of output power. The VBATT pin connects to an internal current-sense resistor and interfaces to an integrated power amplifier control (iPAC™) function, which is insensitive to variations in temperature, power supply, process, and input power. The ENABLE input allows initial turn-on of PAM circuitry to minimize battery drain.

### 3. TECHNICAL BRIEF

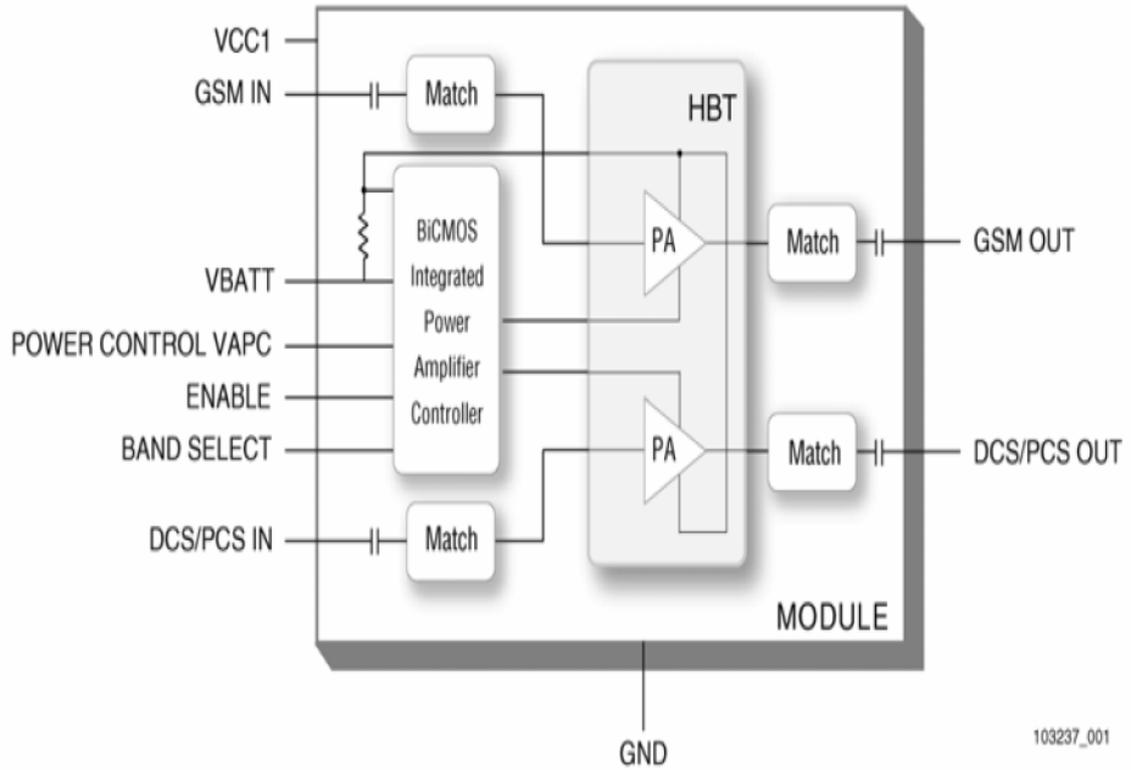


103237\_001

**Figure. 3-5 SKY77328 FUNCTIONAL BLOCK DIAGRAM**

### 3. TECHNICAL BRIEF

#### 3.3 26 MHz Clock (VCTCXO, X400)

The 26 MHz clock(X501) consists of a TCXO(Temperature Compensated Crystal Oscillator) which oscillates at a frequency of 26 MHz. It is used within the SI4210, analog base band chipset (U101, AD6535ABCZ), digital base band chipset (U102, AD6527BABCZ).

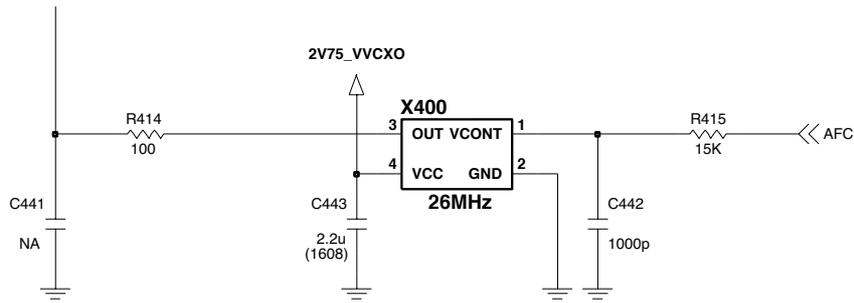


**Figure 3-6 VCTCXO CIRCUIT DIAGRAM**

#### 3.4 FEM for Triband(FL400)

Select Mode	Vc(EGSM)	Vc(DCS/PCS)
EGSM-Rx	Low	Low
EGSM-Tx	High	Low
DCS-Rx	Low	Low
PCS-Rx	Low	Low
DCS/PCS-Tx	Low	High

**Table 3-1 FEM CONTROL LOGIC**

### 3. TECHNICAL BRIEF

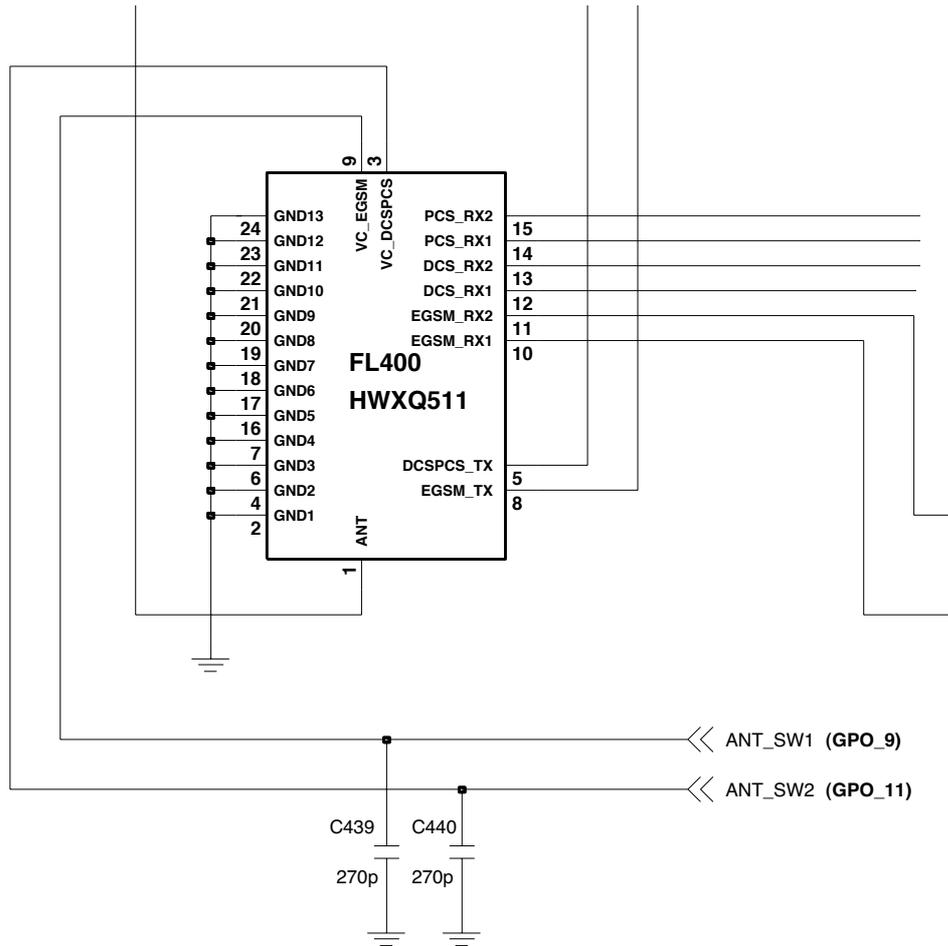

**Figure 3-7 FEM CIRCUIT DIAGRAM**

### 3. TECHNICAL BRIEF

#### 3.5 Digital Main Processor (AD6527B, U102)

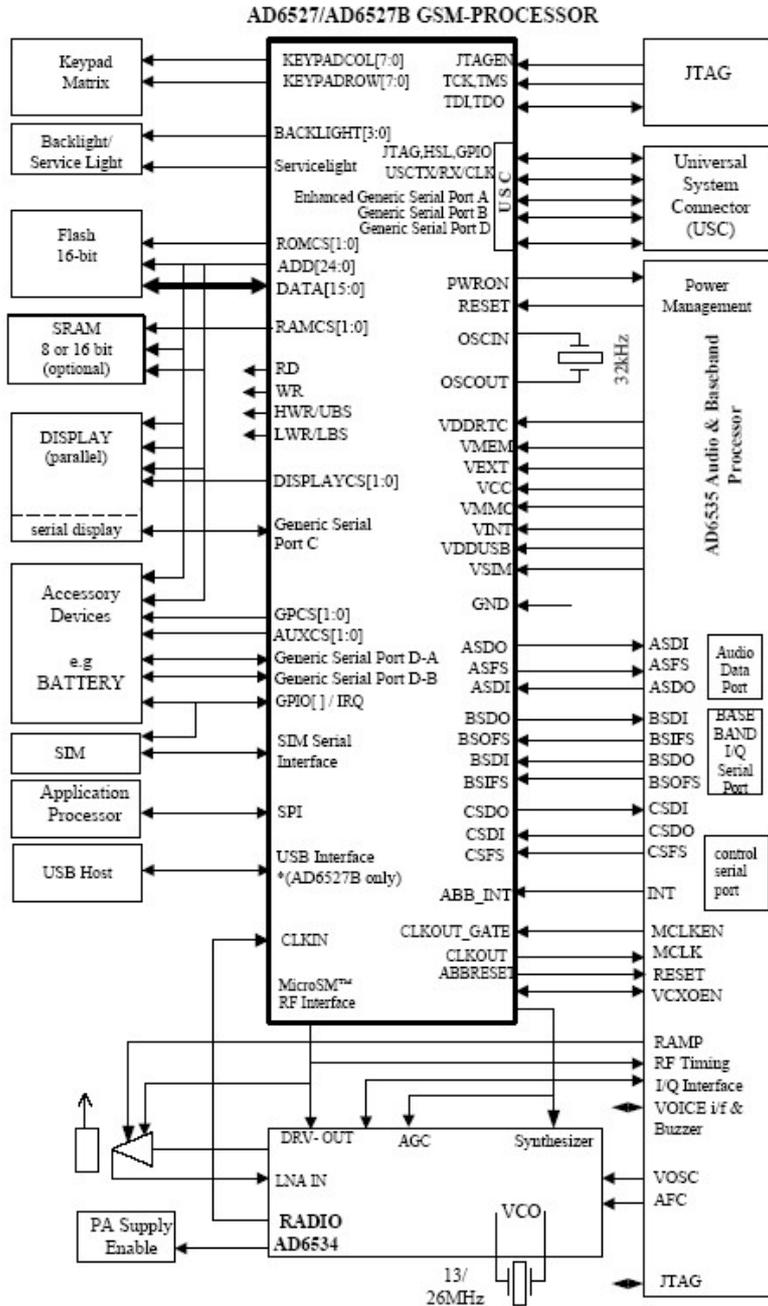


Figure 3-5. SYSTEM INTERCONNECTION OF AD6527 EXTERNAL INTERFACE

- AD6527 is an ADI designed processor.
  
- AD6527 consists of
  1. Control Processor Subsystem
    - 32-bit ARM7TDMI Control Processor
    - 58.5 MHz operation at 1.7V
    - On-board 16KB instruction/Data Cache
    - 1 Mbits of on-chip System SRAM
  
  2. DSP Subsystem
    - 16-bit Fixed Point DSP Processor
    - 91 MIPS at 1.7V
    - 16K word Data and 16K word Program SRAM
    - 4K word Program Instruction Cache
    - Architecture supports Full Rate, Enhanced Full Rate, Half Rate, and AMR Speech Encoding/Decoding Algorithms
  
  3. Peripheral Subsystem
    - Shared on-chip peripheral and off-chip interface:
    - Support for Burst and Page Mode Flash
    - Support for Pseudo SRAM
    - Ciphering module for GPRS supporting GAE1 and GAE2 encryption algorithms
    - Parallel and Serial Display Interface
    - 8 x 8 Keypad Interface
    - Four independent programmable backlight plus One Service Light
    - 1.8V and 3.0V, 64 kbps SIM interface
    - Universal System Connector Interface
    - Slow, Medium and Fast IrDA transceiver interface
    - Enhanced Generic Serial Port
    - Dedicated SPI interface
    - Thumbwheel Interface
    - JTAG Interface for Test and In-Circuit Emulation
  
  4. Other
    - Supports 13 MHz and 26 MHz Input Clocks
    - 1.8V Typical Core Operating Voltages
    - 204-Ball LFBGA(mini-BGA) Package
  
  5. Applications
    - GSM900/DCS1800/PCS1900/PCS850 Wireless Terminals
    - GSM Phase 2+ Compliant
    - GPRS Class 12 Compliant
    - Multimedia Services(MMS)
    - Extended Messaging System(EMS)

### 3. TECHNICAL BRIEF

---

#### 3.4.1 Interconnection with external devices

##### A. RTC block interface

Countered by external X-TAL  
The X-TAL oscillates 32.768KHz

##### B. RF interface

The AD6527B control RF parts through PA\_BAND, ANT\_SW1, ANT\_SW2, ANT\_SW3 , CLKON , PA\_EN, S\_EN, S\_DATA, S\_CLK, RF\_PWR\_DWN.

Signals	Description
PA_BAND (GPO 17)	PAM Band Select
ANT_SW1 (GPO 9)	Antenna switch Band Select
ANT_SW2 (GPO 11)	Antenna switch Band Select
CLKON	RF LDO Enable/Disable
PA_EN (GPO 16)	PAM Enable/Disable
S_EN (GPO 19)	PLL Enable/Disable
S_DATA (GPO 20)	Serial Data to PLL
S_CLK (GPO 21)	Clock to PLL
RF_PWR_DWN(GPO 4)	Power down Input

**Table 3-4. RF CONTROL SIGNALS DESCRIPTION**


#### C. SIM interface

The AD6527B provides SIM Interface Module. The AD6527B checks status periodically during established call mode whether SIM card is inserted or not, but it doesn't check during deep Sleep mode. In order to communicate with SIM card, 3 signals SIM\_DATA, SIM\_CLK, SIM\_RST(GPIO\_23) are required. The descriptions about the signals are given by bellow Table 3-6 in detail.

Signals	Description
SIM_DATA	This pin receives and sends data to SIM card. This model can support only 3.0 volt interface SIM card.
SIM_CLK	Clock 3.25MHz frequency.
SIM_RST (GPIO_23)	Reset SIM block

**Table 3-5. SIM CONTROL SIGNALS DESCRIPTION**

#### SIM CONNECTOR

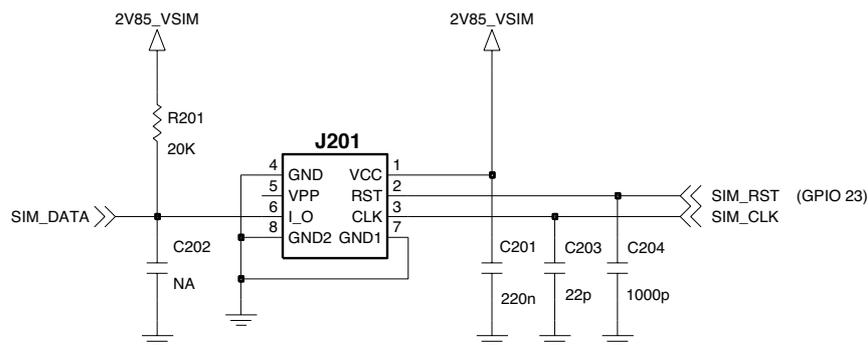

**Figure 3-6. SIM Interface of AD6527B**

#### D. Key interface


Include 5 column , 5 row. The AD6527B detects whether key is pressed or not by using interrupt method.

#### E. AD6535 Interrupt

AD6535 provides an active-high interrupt output signal. Interrupt signals are generated by the Auxiliary ADC, audio, and charger modules.

### 3. TECHNICAL BRIEF

#### 3.4.2 AD6527B Architecture

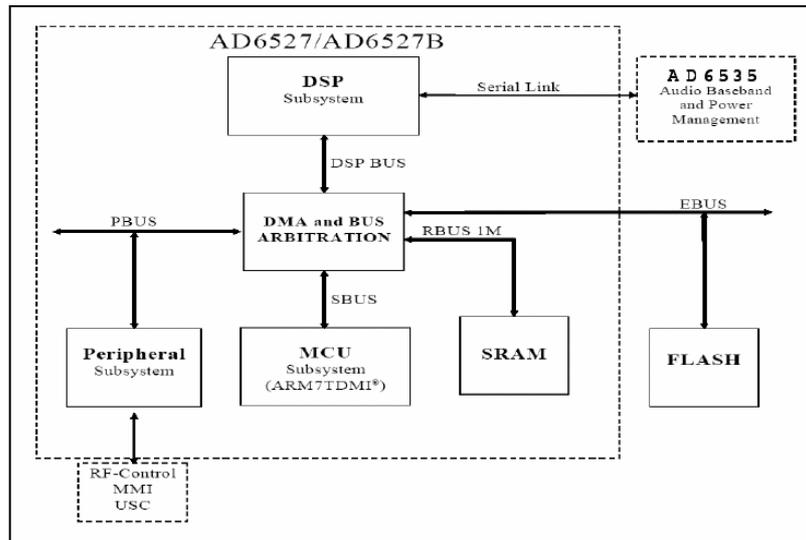

**Figure 3-7. AD6527B Architecture**

The internal architecture of AD6527B is shown above Figure 3-7. AD6527 regroups three main subsystems connected together through a dynamic and flexible communication bus network. It also includes onboard system RAM (SRAM) and interfaces with external Flash Memory, Baseband converter functions, and terminal functions like MMI, SIM and Universal System Connector (USC).

The Digital Signal Processing (DSP) subsystem primarily hosts all the speech processing, channel equalization and channel codec functions. The code used to implement such functions can be stored in external Flash Memory and dynamically downloaded on demand into the DSP's program RAM and Instruction Cache. The micro-controller subsystem supports all the GSM terminal software, including the layer 1, 2 and 3 of the GSM protocol stack, the MMI, and applications software such as data services, test and maintenance. It is tightly associated with on-chip system SRAM and also includes boot ROM memory with a small dedicated routine to facilitate the initialization of the external Flash Memory via code download using the on-chip serial interface to the external Flash Memory interface. The peripheral subsystem is composed of system peripherals such as interrupt controller, real time clock, watch dog timer, power management and a timing and control module. It also includes peripheral interfaces to the terminal functions: keyboard, battery supervision, radio and display. Both the DSP and the MCU can access the peripheral subsystem via the peripheral bus (PBUS). For program and data storage, both the MCU subsystem and the DSP subsystem can access the on chip system SRAM and external memory such Flash Memory. The access to the SRAM module is made through the RAM Bus (RBUS) under the control of the bus arbitration logic. Similarly, access to the Flash Memory is through the parallel External Bus (EBUS).

### 3.5 Analog Main & Power Management Processor (AD6535, U101)

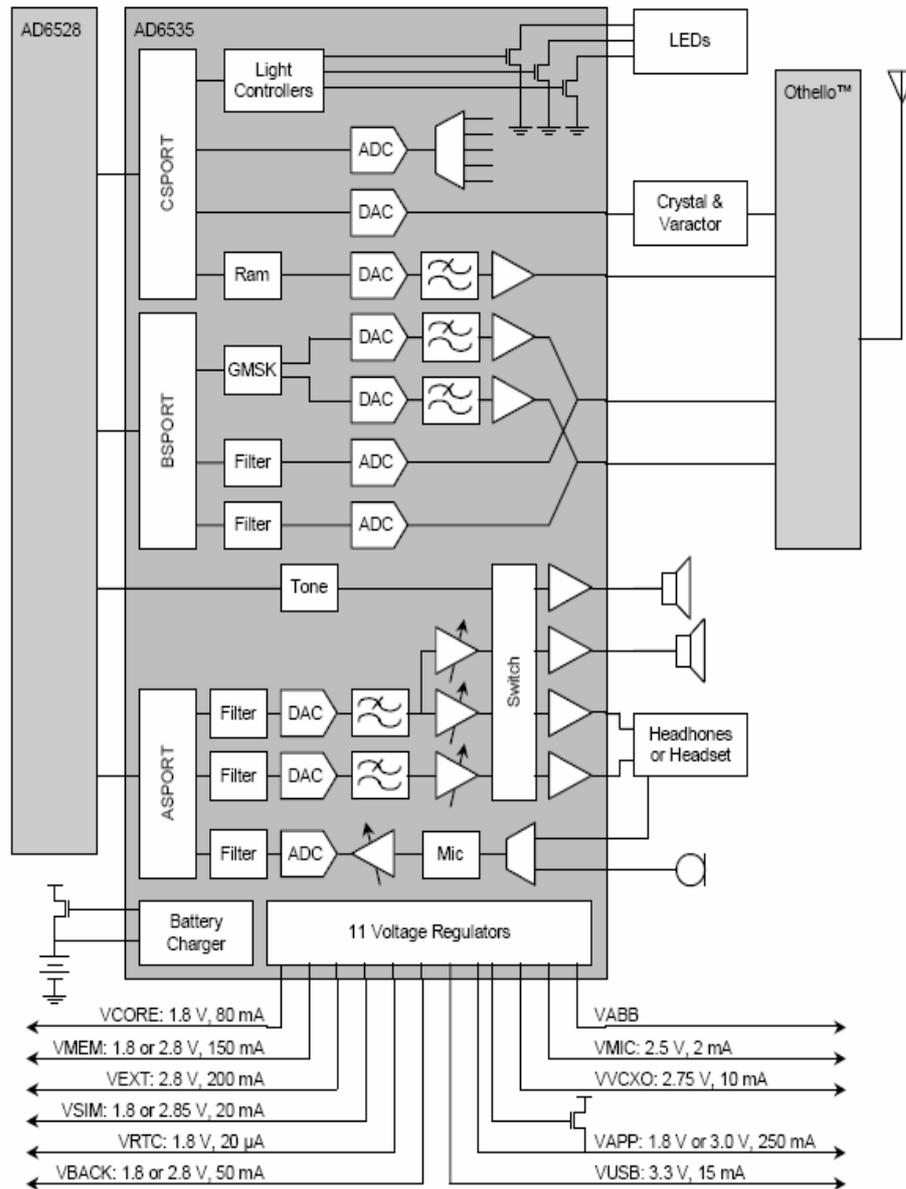


Figure 3-8. AD6535 FUNCTIONAL BLOCK DIAGRAM

### 3. TECHNICAL BRIEF

---

- AD6535 is an ADI designed Analog Baseband processor. AD6535 covers the processing GMSK modulation interface, Aux ADC, Voice signal processing and Power Management.

- AD6535 consists of

1. BB Transmit section

- GMSK Modulation
- I-channel & Q-channel Transmit DACs and Filters
- Power Ramping DAC

2. BB Receive section

- I-channel & Q-channel Receive ADCs and Filters

3. Auxiliary section

- Voltage Reference
- Automatic Frequency Control DAC
- Auxiliary ADC
- Light Controllers

4. Audio Section

- 8 kHz & 16 kHz Voiceband Codec
- 48 kHz Monophonic DAC
- Power Amplifiers

5. Power Management section


- Voltage Regulators
- Battery Charger
- Battery Protection

6. Digital Processor section

- Control, Baseband, and Audio Serial Ports
- Interrupt Logic

#### 3.5.1 Baseband Transmit Section


1. The AD6537B Baseband Transmit Section is designed to support GMSK for both single-slot and multi-slot application.
2. The AD6535 includes a digital GMSK modulator which is used for GSM application. The GMSK modulator uses a ROM lookup table to modulate the serial data stream from the BSPORT. The GMSK modulator is based on 3GPP TS 45.004 ver.5.1.0 Release 5

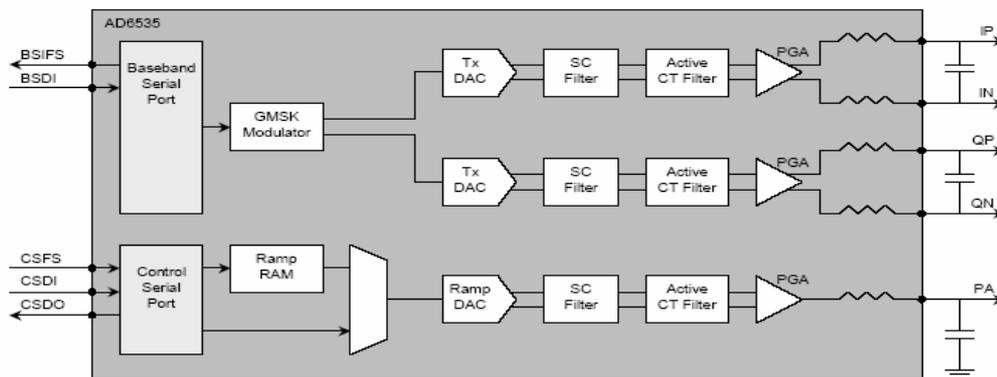

**Figure 3-9. AD6535 BASEBAND TRANSMIT SECTION**

#### 3.5.2 Baseband Receive Section

1. This section consists of two identical ADC channels that process baseband in-phase(I) and quadrature(Q) input signals.

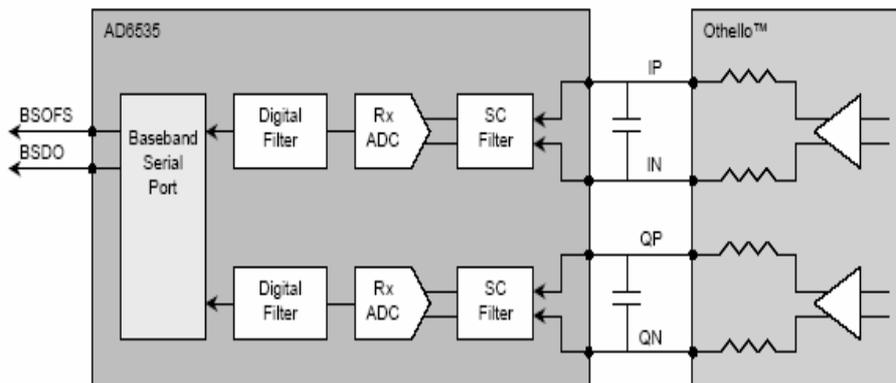

**Figure 3-10. AD6535 BASEBAND RECEIVER SECTION**

### 3. TECHNICAL BRIEF

#### 3.5.3 Auxiliary Section

1. This section includes an Automatic Frequency Control(AFC) DAC, voltage reference buffers, an Auxiliary ADC, and light controllers.
  - AFC DAC: 13 bits
2. This section also contains AUX ADC and Voltage Reference
  - IDAC: 10 bits
  - The Auxiliary ADC provides :
    - Two differential inputs for temperature sensing.
    - A differential input for the battery charger current sensor

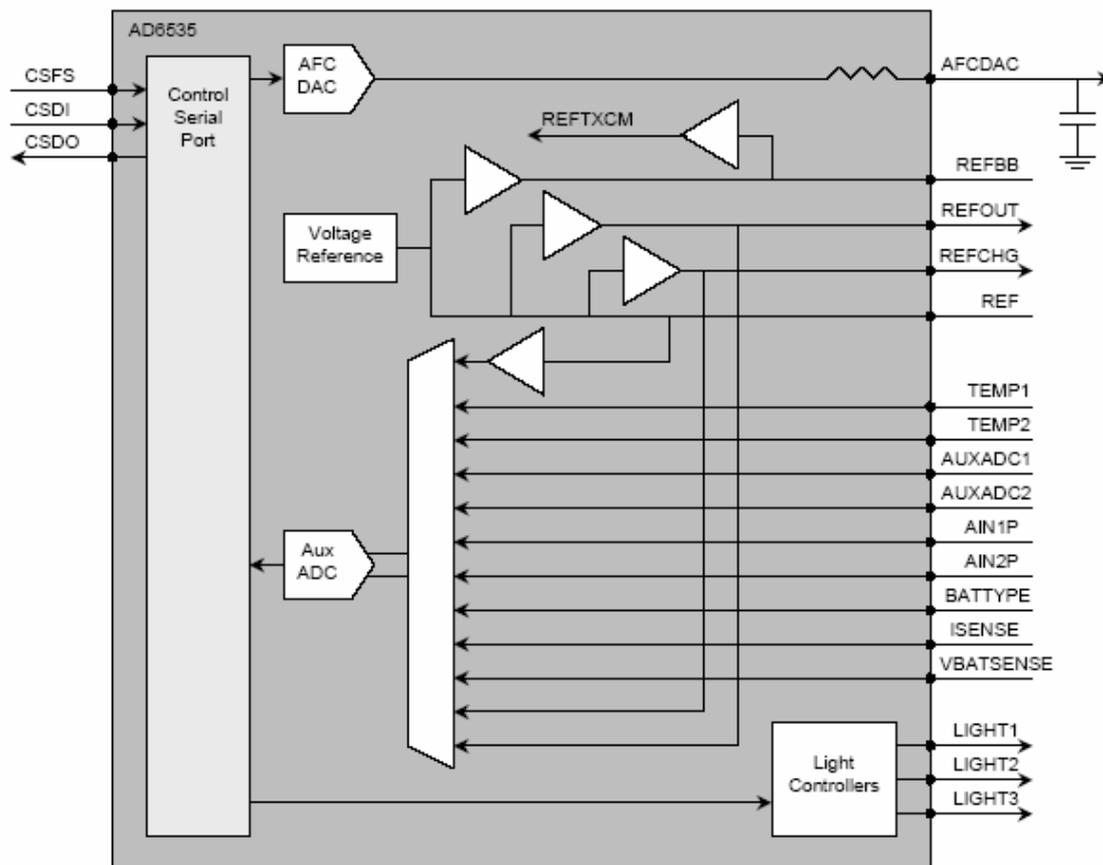


Figure 3-11. AD6535 AUXILIARY SECTION

### 3.5.4 Audio Section

1. The AD6535 Audio section supports communications and personal audio applications.
2. The Audio Section provides an audio codec with two digital-to-analog converter, a ring tone volume controller, a microphone interface, and analog input and output channels.


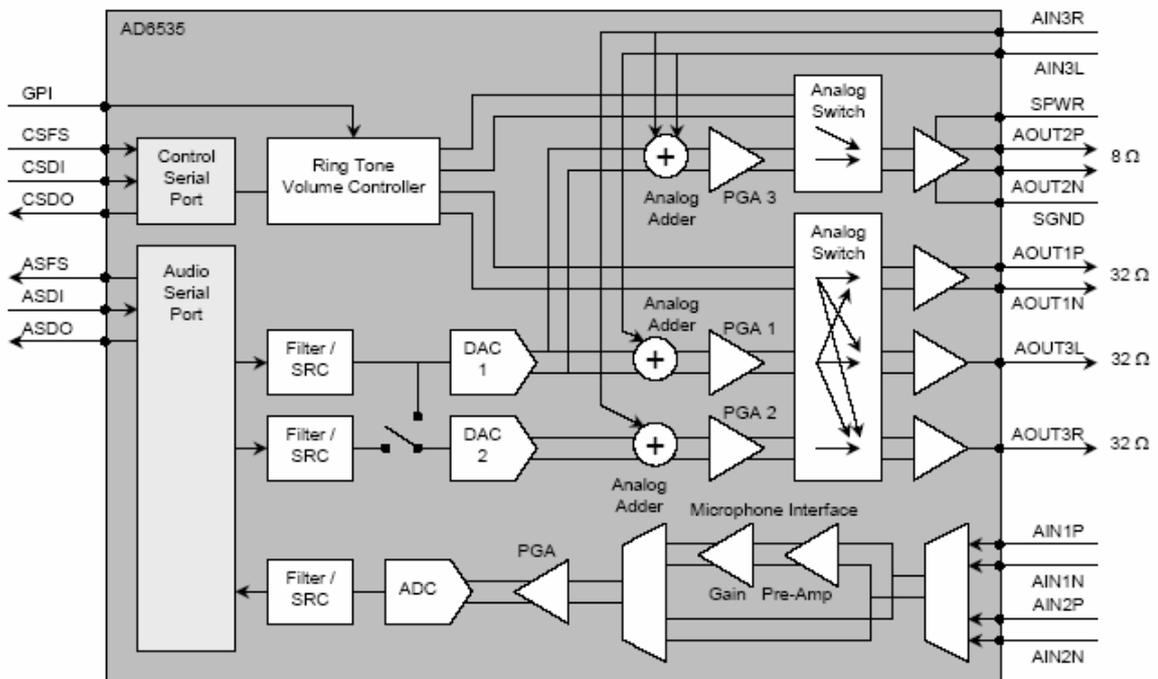


Figure 3-12. AD6535 AUDIO SECTION

### 3. TECHNICAL BRIEF


#### 3.5.5 Power Management

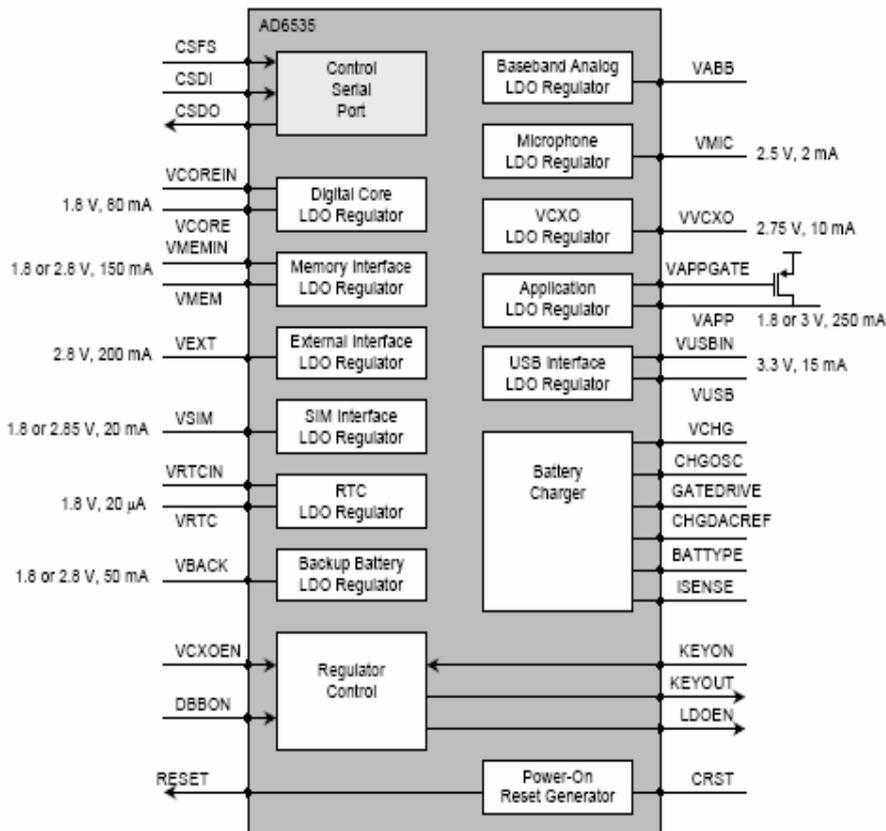

**Figure 3-13. AD6535 POWER MANAGEMENT SECTION**

#### 1. Power up sequence logic

1. The AD6535 controls power on sequence
2. Power on sequence
  - If a battery is inserted, the battery powers the 8 LDOs.
  - Then if PWRONKEY is detected, the LDOs output turn on.
  - REFOUT is also enabled
  - Reset is generated and send to the AD6527B

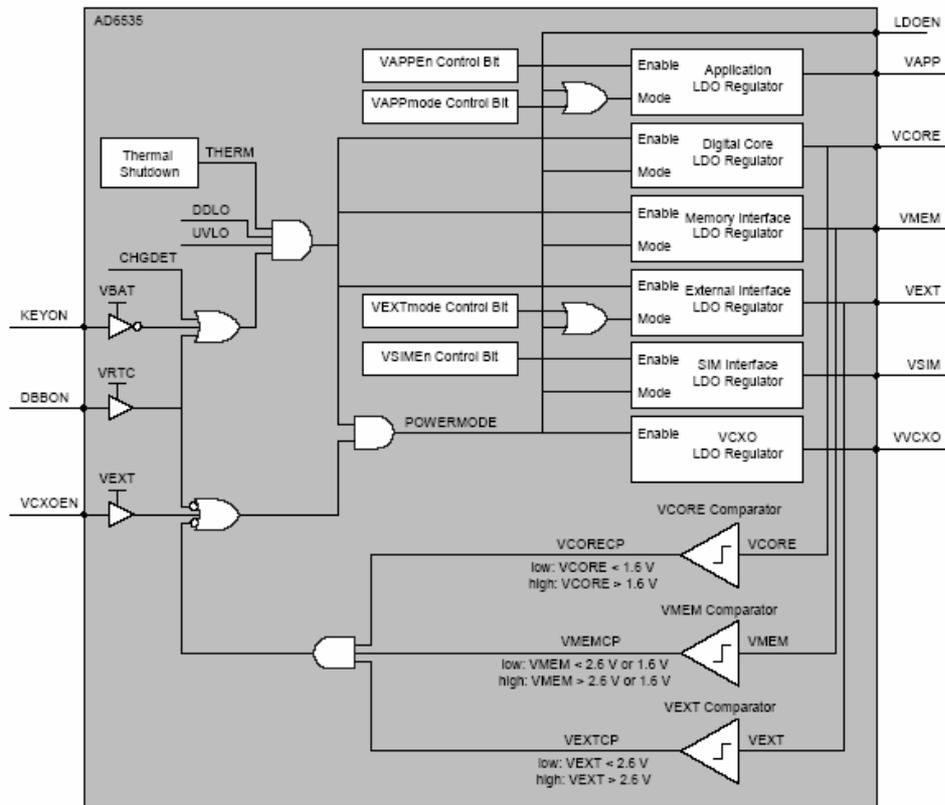

**Figure 3-14. AD6535 POWER MODE LOGIC**

## 2. LDO Block

1. There are 8 LDOs in the AD6535.

- V CORE : supplies Digital baseband Processor core and AD6535 digital core
- VMEM : supplies external memory and the interface to the external memory on the digital baseband processor (1,8V or 2.8V, 150mA)
- VEXT : supplies Radio digital interface and high voltage interface (2.8V, 170mA)
- VSIM : supplies the SIM interface circuitry on the digital processor and SIM card (2.85V, 20mA)
- VRTC : supplies the Real-Time Clock module (1.8 V, 20  $\mu$ A)
- VABB : supplies the analog portions of the AD6537B
- VMIC : supplies the microphone interface circuitry (2.5 V, 1 mA)
- VVCXO : supplies the voltage controlled crystal oscillator ( 2.75 V, 10 mA)
- VBACK : charges the backup battery and supplies the RTC regulator (2.8V, 1.8V)
- VAPP : supplies application co-processors such as a touch screen digitizer (3.0V, 1.8V)
- VUSB : supplies the USB interface.

### 3. TECHNICAL BRIEF

#### 3. Battery Charging Block

1. It can be used to charge Lithium Ion batteries. Charger initialization, trickle charging, and Li-Ion charging control are implemented in hardware.
2. Charging Process
  - Check charger is inserted or not
  - If AD6535 detects that Charger is inserted, the CC-CV charging starts.
  - Exception : When battery voltage is lower than 3.2V, the precharge(low current charge mode) starts firstly.
  - And the battery voltage reach to 3.2V the CC-CV charging starts.
3. Pins used for charging
  - VCHG : charger supply.
  - GATEDRIVE : charge DAC output
  - ISENSE : charge current sense input
  - VBATSENSE : battery voltage sense input.
  - BATTTYPE : battery type identification input
  - REFCHG : voltage reference output
4. TA (Travel Adaptor)
  - Input voltage: AC 85V ~ 260V, 50~60Hz
  - Output voltage: DC 5.2V ( 0.2 V )
  - Output current: Max 800mA ( 50mA )
5. Battery
  - Li-ion battery (Max 4.2V, Nom 3.7V)
  - Standard battery: Capacity - 830mAh


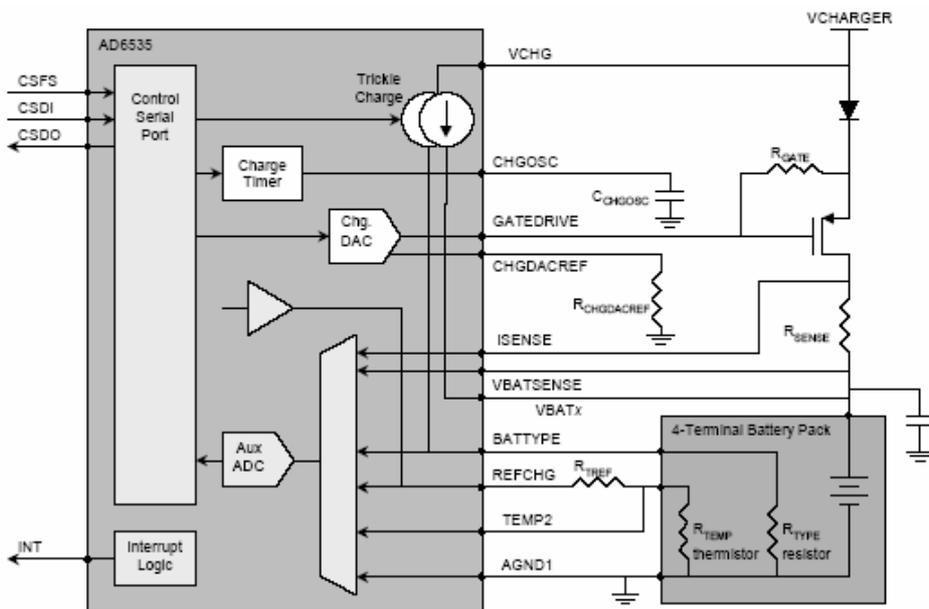


Figure 3-15. AD6535 BATTERY CHARGING BLOCK

## 3.6 Charging IC (ISL6299, U205)

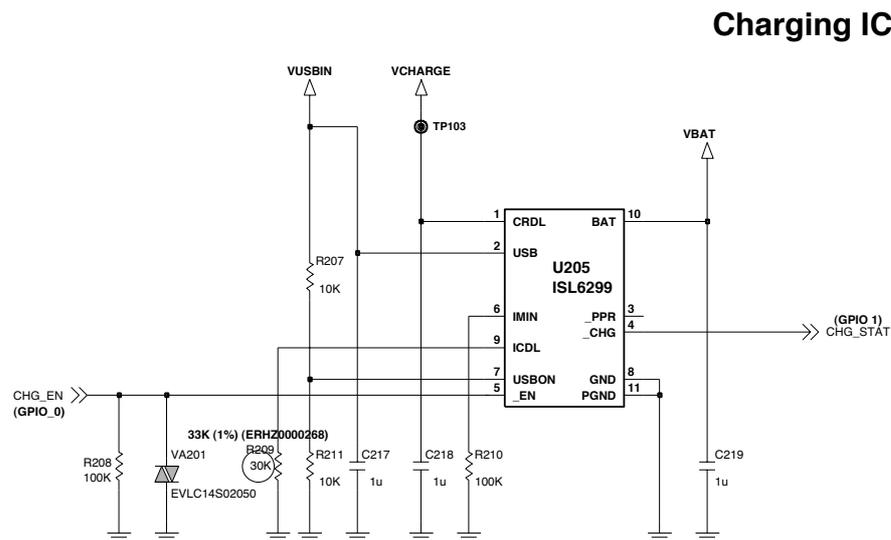

**Figure 3-16. CIRCUIT FOR BATTERY CHARGING**

The ISL6299 is designed for a single-cell Li-ion or Li-polymer battery charging circuit that accepts both a USB port and a desktop cradle as its power source.


### Input Auto Selection

When both input sources are present, the charger selects only one power source to charge the battery. When the CRDL input is higher than the POR threshold, CRDL is selected as the power source. Otherwise the USB input is selected. If the CRDL input voltage is below the battery voltage but the USB input voltage is higher than the battery voltage, then the USB input is used to charge the battery. The control circuit always breaks both internal power devices before switching from one power source to the other to avoid a cross conduction of both power MOSFETs.

### USB Charge Current

When the USB port is selected as the power source, the charge current enabled by the logic input at the USBON pin. When the USBON is driven to logic LOW, the charger is disabled. When the USBON is driven to logic HIGH, the charge current is fixed at a typical value of 380mA. Thus for the USB input, the USBON pin has a similar function as the EN pin. The following table describes the USB charge control by both the USBON pin and EN pin. The USBON pin is equivalent to a logic LOW when left floating. Typically the P-channel MOSFET for the USB input has an  $r_{DS(ON)}$  of 700m $\Omega$  at room temperature. With a 380mA charge current, the typical head room is 260mV. Thus, if the input voltage drops to a level that the voltage difference between the USB pin and the BAT pin is less than 260mV, the  $r_{DS(ON)}$  becomes a limiting factor of the charge current; and the charger drops out the constant current regulation.

### 3. TECHNICAL BRIEF

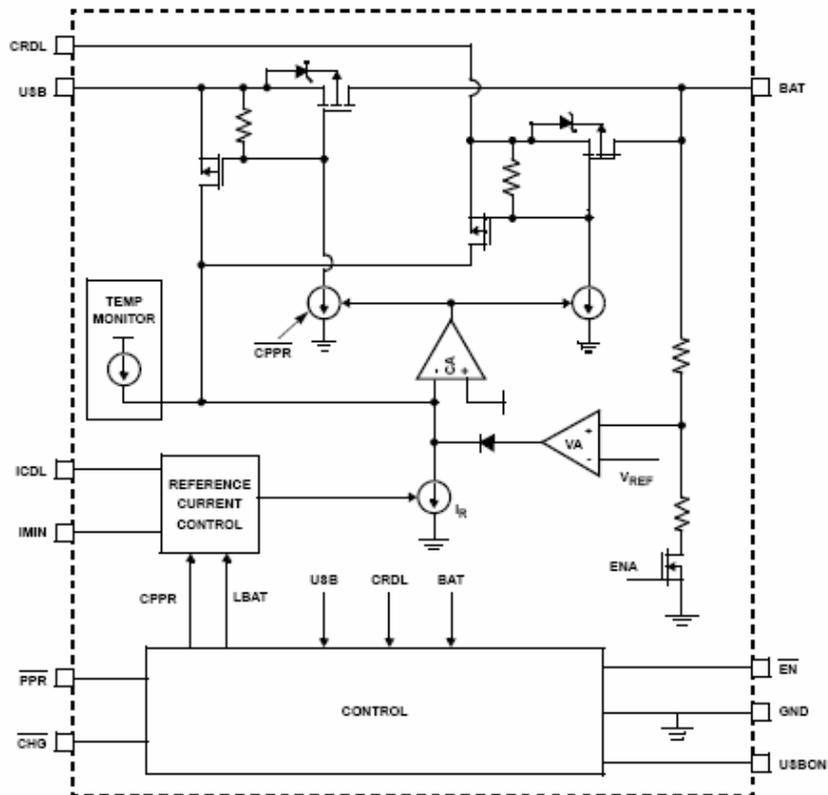

**Figure 3-17. BLOCKDIAGRAM**

#### **Cradle Charge Current**

The cradle charge current is enabled by the EN pin only, the USBON pin has no control on the cradle charge current. The cradle charge current is programmed with the external resistor connected between the ICDL pin and the GND pin. The current can be calculated with one of the equations given in the ICDL pin description. Two equations are used for the cradle current calculation, each corresponds to a different range of currents. The typical  $r_{DS(ON)}$  of the P-channel MOSFET for the CRDL input is 600m $\Omega$  at room temperature. When the head room between the input and output voltages is small, the actual charge current, similar to the USB case, could be limited by the  $r_{DS(ON)}$ . On the other hand, if the head room between the input and output voltages is large, the charge current may be limited by the thermal foldback threshold.

#### **Floating Charge Voltage**

The floating voltage during the constant voltage phase is 4.2V. The floating voltage has an 1% accuracy over the ambient temperature range of -40°C to 70°C.

### **Trickle Charge Current**

When the battery voltage is below the minimum battery voltage  $V_{MIN}$  given in the electrical specification, the charger operates in a trickle/preconditioning mode, where the charge current is typically 14% of the programmed charge current for the cradle input. If power comes from the USB input, the trickle mode current is approximately 53mA.

### **End-of-Charge Indication**

The CHG pin internal open-drain MOSFET turns off when the charge current falls below the  $I_{MIN}$  threshold, which is programmable for the cradle input and fixed for the USB input. Once the end-of charge-current is reached, the CHG status will be latched. The latch can be reset at one of the following conditions:

1. The part is disabled and re-enabled
2. The selected input source has been removed and reapplied
3. The USBON turns LOW and turns back to HIGH for the USB input
4. The BAT pin voltage falls below the CV mode threshold

Regardless of the CHG pin status, however, the charger does not turn off as long as an input power source is attached.

### **Power Presence Indication**

When either the USB or the cradle input voltage is above the POR threshold, the PPR pin internal open-drain MOSFET turns on indicating the presence of input power.

### **Power-Good Range**

Even if there is a power present, the charger will not deliver any current to the output if the powergood conditions are not met. The following two conditions together define the power-good voltage range:

1.  $V_{CDRL}$  or  $V_{USB} > V_{POR}$
2.  $V_{CDRL}$  or  $V_{USB} - V_{BAT} > V_{OS}$

where the  $V_{OS}$  is the offset voltage for the input and output voltage comparator, discussed shortly. Both  $V_{POR}$ ,  $V_{OS}$  have hysteresis, as given in the Electrical Specification table.

The charger will not charge the battery if the input voltage does not meet the power-good conditions.


### **Thermal Foldback (Thermaguard™)**

The thermal foldback function reduces the charge current when the internal temperature reaches the thermal foldback threshold, which is typically 100°C. This protects the charger from excessive thermal stress at high input voltages.

### 3. TECHNICAL BRIEF

---

#### 3.7 CAMERA IC(AIT811T,U103)

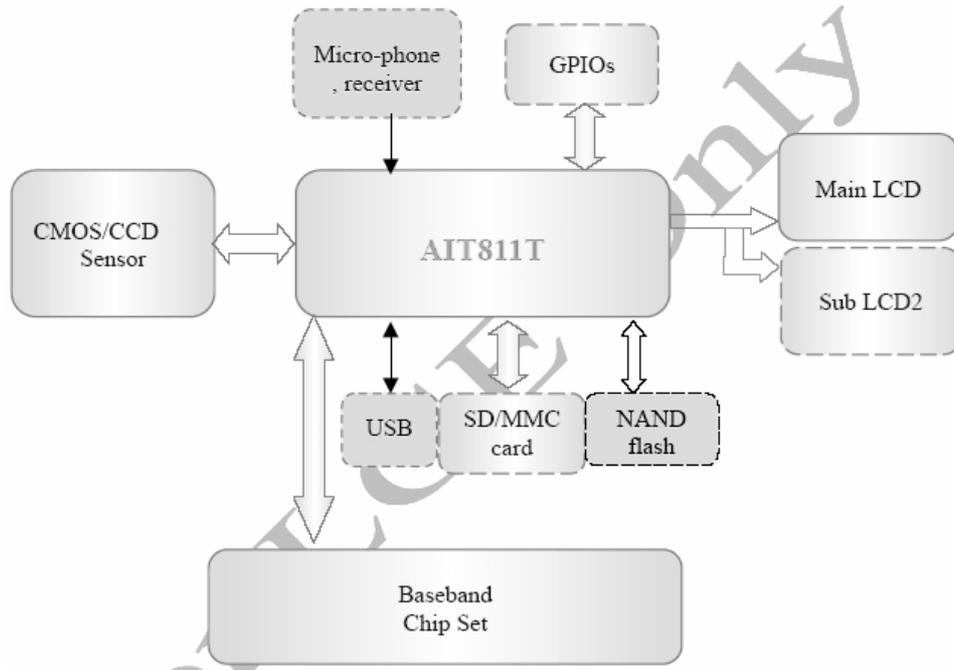

**Figure 3-18. AIT811T APPLICATION BLOCKDIAGRAM**



### 3. TECHNICAL BRIEF

#### 3.8 MIDI IC(YMU787,U202)


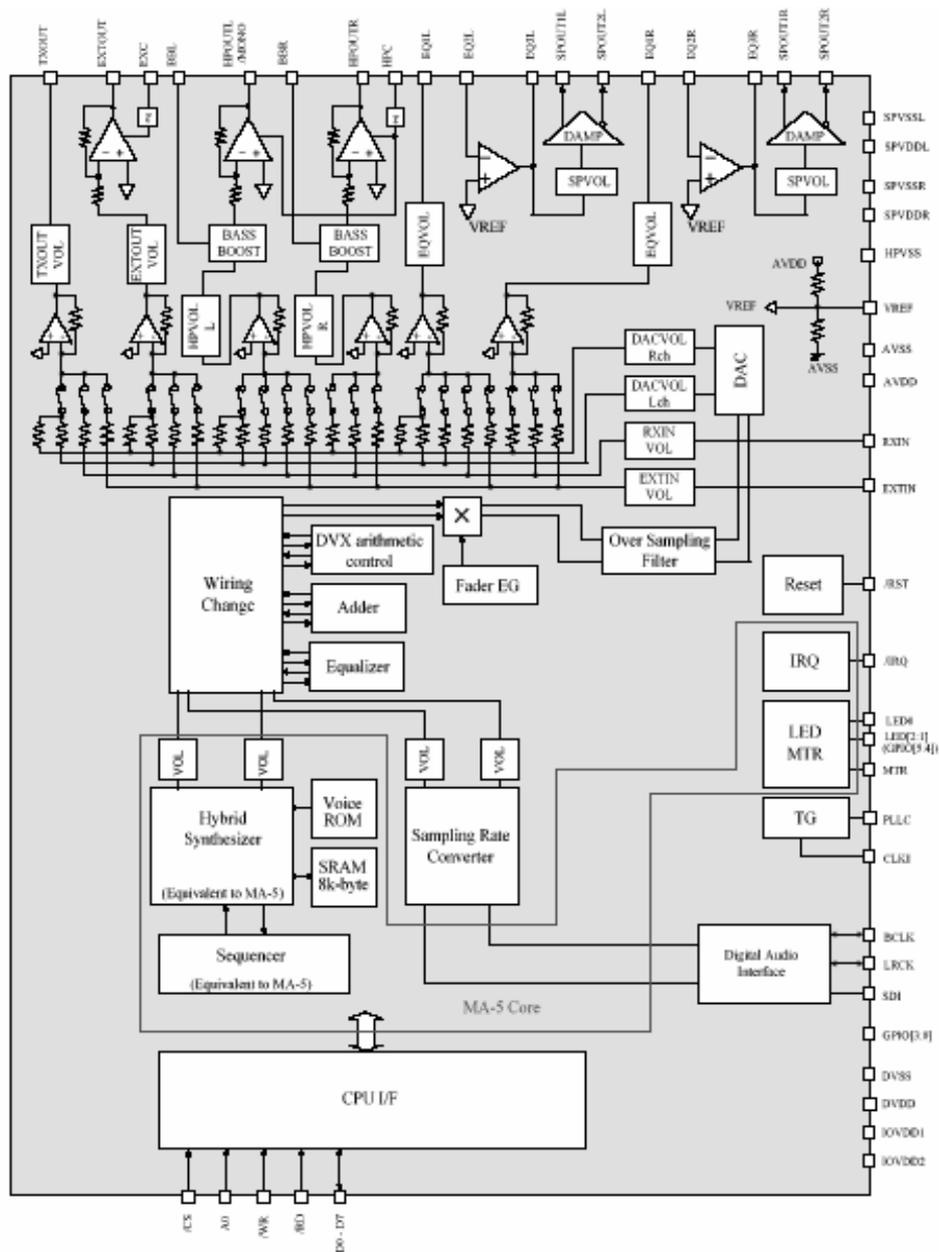


Figure 3-20. YMU787 BLOCKDIAGRAM

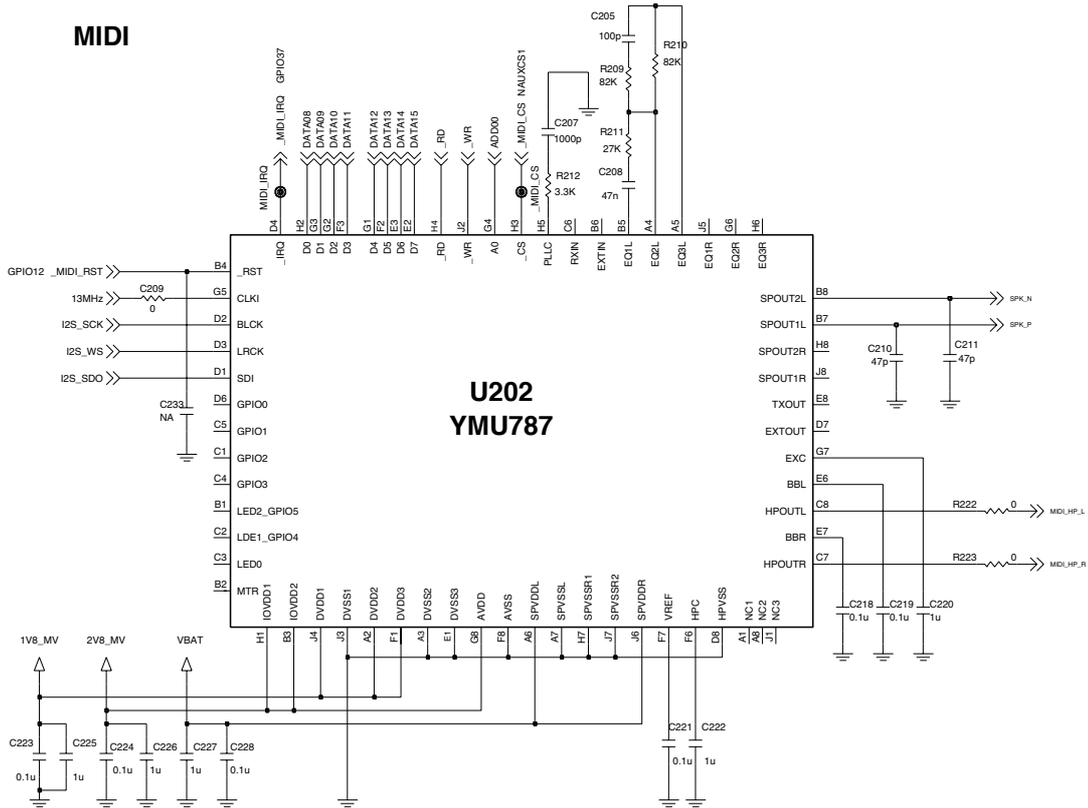

**Figure 3-21. YMU787 CIRCUIT DIAGRAM**

#### CPU INTERFACE

CPU interface is an 8-bit parallel.

4 control signal(/wr,/rd,/cs,A0 pin), 8 data bit(D0 to D7), and 1 interrupt pin(/IRQ), totaling 13 pins are connected to the external CPU. This block controls the writing and reading of data by the input polarity of control signal

#### INTERFACE REGISTER

This register is able to access directly from the external CPU. There are 2 bytes spaces. The Intermediate register can be accessed through the interface register.

#### INTERMEDIATE REGISTER

This register is accessed through the Interface register.

It is composed to access a latter control register and ROM/SRAM through Intermediate register. This register is called "Intermediate register" since this exists in the middle of the interface register and the Control register. In the Intermediate register, there are some registers to control various functions.

### 3. TECHNICAL BRIEF

---

#### **CONTROL REGISTER;ROM/SRAM**

The Control register and ROM/SRAM are accessed from "Instantaneous write register", "Delayed write register", and "Instantaneous read register" in the intermediate register.

In the control register, there is a register to control the following synthesizer mainly. The voice parameter for FM(GM 128 voices+DRUM 40 voices)and wave data for WT are stored in ROM. SRAM is used at the download of arbitrary FM voice parameter and Wave data for WT. moreover, it is used as storing buffer at the stream playback of PCM/ADPCM.

#### **FIFO**

This is an abbreviation of "First Input First Output" means the memory from which data is read in order of data written. There are 2 paths to write into FIFO in the Intermediate register. The "instantaneous write path" is for accessing the control register and ROM/SRAM immediately, also "Delayed write path" is for accessing the control register after managing time through the sequencer. FIFO size of Instantaneous path is 64 byte, and its size of Delayed path is 512-byte.

#### **SEQUENCER**

This is for interpreting the contents of data which is written into the "Delayed write path" Generally, "Music data" is written into the Delayed write path. It interprets the contents of music data and controls the synthesizer after sequencer, and then plays the music.

#### **Hybrid synthesizer**

This device contains a built in polyphonic synthesizer that adopts a stereophonic hybrid system that generate up to 64tones.

FM synthesizer, WT synthesizer, stream playback, HV synthesizer, and AL synthesizer are available.

#### **DIGITAL AUDIO INPUT INTERFACE**

This is a three wires type serial interface. The data length is 16bits.

#### **DPLL SECTION/SAMPLING RATE CONVERTER SECTION**

Sampling frequencies of signals from the digital audio interface section are changed into 48Khz.

#### **DIGITAL EQUALIZER SECTION**

This is a digital equalizer. Voice of signals from the Hybrid Synthesizer section and voice of digital audio signals are adjusted.

#### **DVX ARITHMETIC CONTROL**

Two-channel virtual speaker image function that is based on DVX technology makes it possible to create natural stereo sound under the two closely spaced speakers.

#### **OVER SAMPLING FILTER**

4 Times of over sampling filter. It converts a signal of sampling frequency 48Khz into a signal of 192Khz, and then send to DAC

#### **GENERAL PARALLEL I/O PORT SECTION(GPIO)**

There are six general parallel I/O ports. It is possible to read and write from the Intermediate register.

### **LED,VIBRATOR CONTROL**

It is possible to synchronize an LED and vibrator with a play, and to control. Asynchronous control With a play is also supported. It supports 3 color LED control and it is possible to display 7 colors In maximum.

### **CLOCK GENERATING BLOCK**

This device supports a clock input ranging from 1.5Mhz to 27Mhz.

It is a block to generate a clock which is needed inside of LSI in the PLL.

### **DAC**

It converts digital signals from a synthesizer and a digital audio section into analog signals.

Its resolution is 16bits.

### **ANALOG LINE INPUT SECTION(EXTIN,RXIN)**

External audio signal and receiver audio signal are inputted.

There is a Volume to adjust the level in each.

### **MIXER SECTION**

Selection of an input source(DAC output, RXIN, and EXTIN) against each analog output(SPOUT, HPOUT,EXTOUT,TXOUT) and mixing are performed.

### **EQ AMPLIFIER SECTION**

The change of filter characteristic and gain is possible by adjusting the resistors and external parts.

### **SPEAKER AMPLIFIER SECTION**

The two digital speakers amplifier, which has a maximum output power of 500mW at SPVDDL/R=3.6V and RL=8ohm, is integrated in this device. There is a volume to adjust output level in the first stage of amplifier.

### **HEADPHONE AMPLIFIER SECTION(HPOUT)**

This is an amplifier for stereophonic headphone(RL=16ohm)output.

When it is used as a monaural output, Rch becomes power-down.

In the previous part of it, there are a volume and a bass-boost circuit.

### **EXTERNAL OUTPUT AMPLIFIER SECTION(EXTOUT)**

This is an amplifier for external output(RL=600ohm)

In the previous part of it, there is a volume to adjust the output level


### **ANALOG LINE OUTPUT SECTION(TXOUT)**

This is monaural line output(RL=10kohm)

There is a volume to adjust the output level.

### 3. TECHNICAL BRIEF


## 3.9 Keypad Switches and Scanning

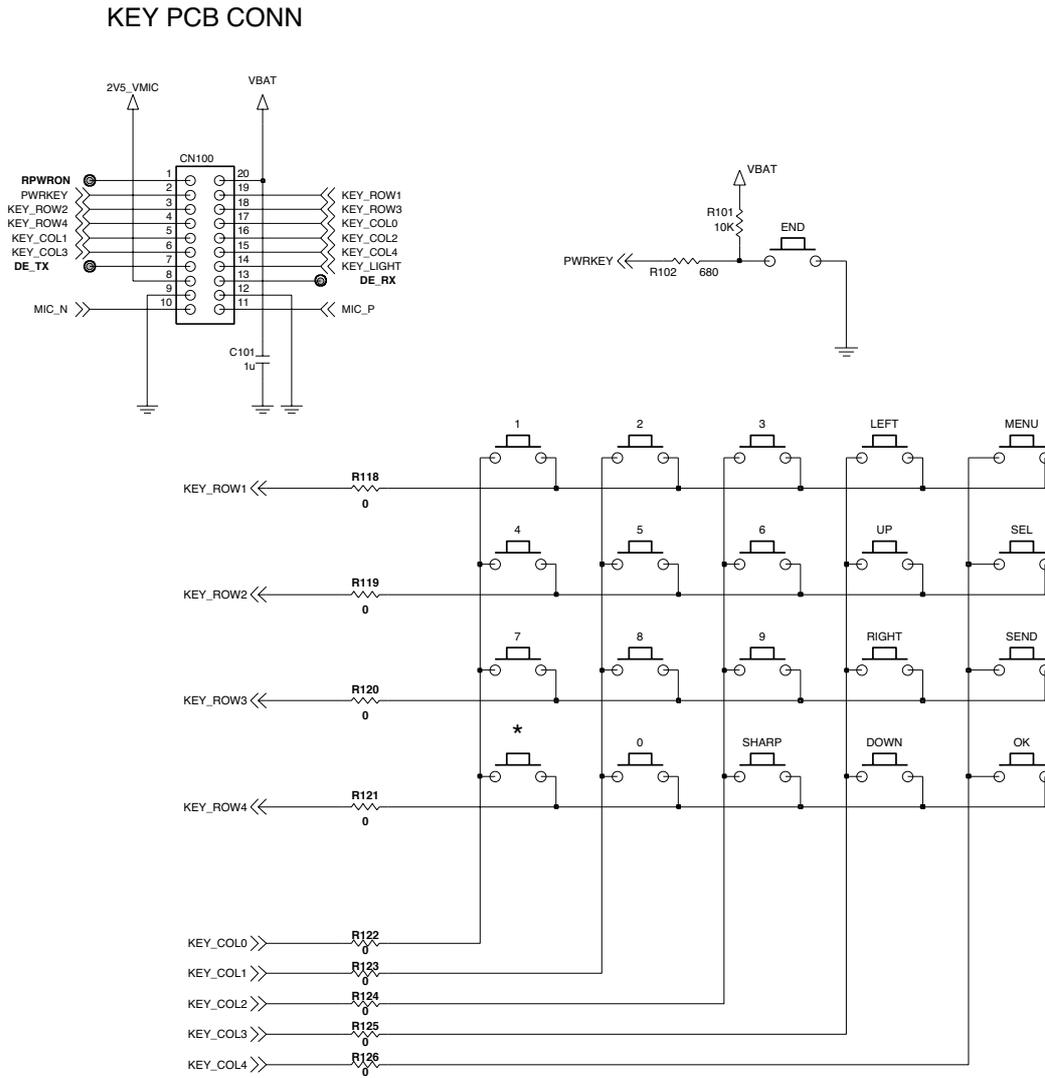

**Figure 3-22. KEYPAD SWITCHES AND SCANNING**


### 3.10 Microphone

The microphone is placed to the front cover and contacted to main PCB. The audio signal is passed to AIN1P and AIN1N pins of AD6535. The voltage supply VMIC is output from AD6535, and is a biased voltage for the AIN1P. The AIN1P and AIN1N signals are then A/D converted by the voiceband ADC part of AD6535. The digitized speech (PCM 8KHz , 16KHz) is then passed to the DSP section of AD6527B for processing (coding, interleaving etc).

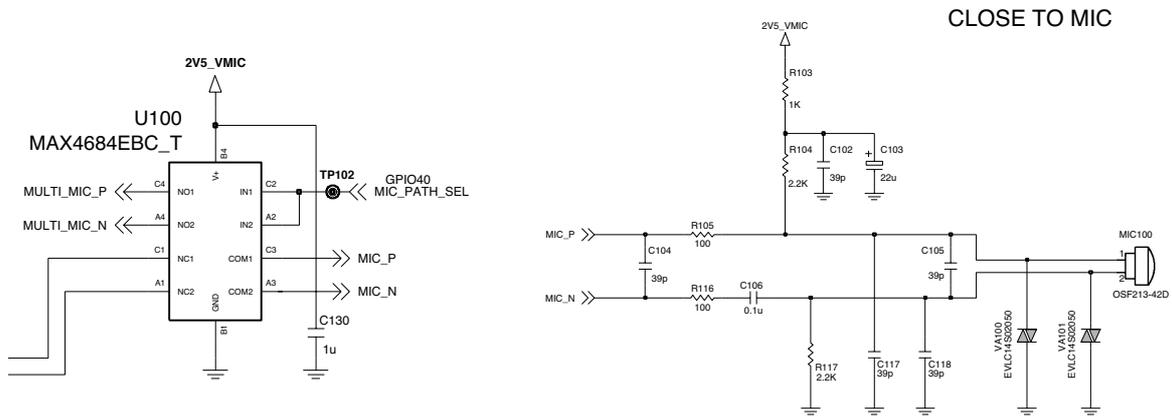

**Figure 3-23. Connection between Microphone and AD6535**

### 3.11 Main Speaker

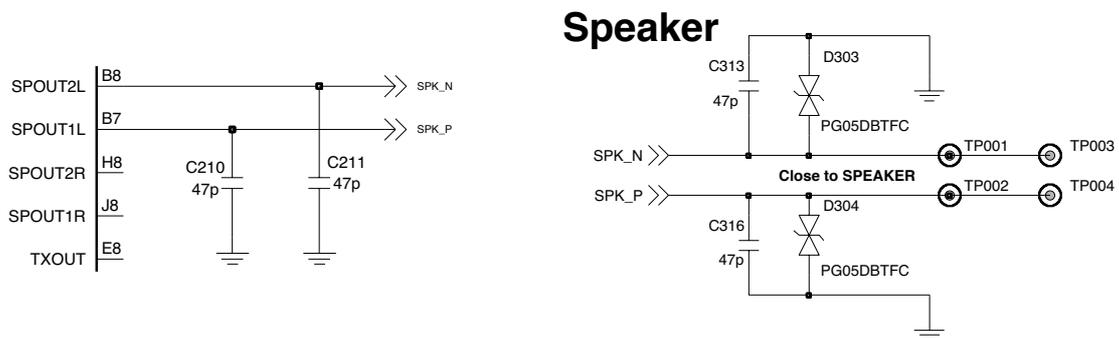

**Figure 3-24. MAIN SPEAKER**

### 3. TECHNICAL BRIEF

#### 3.12 Headset Interface

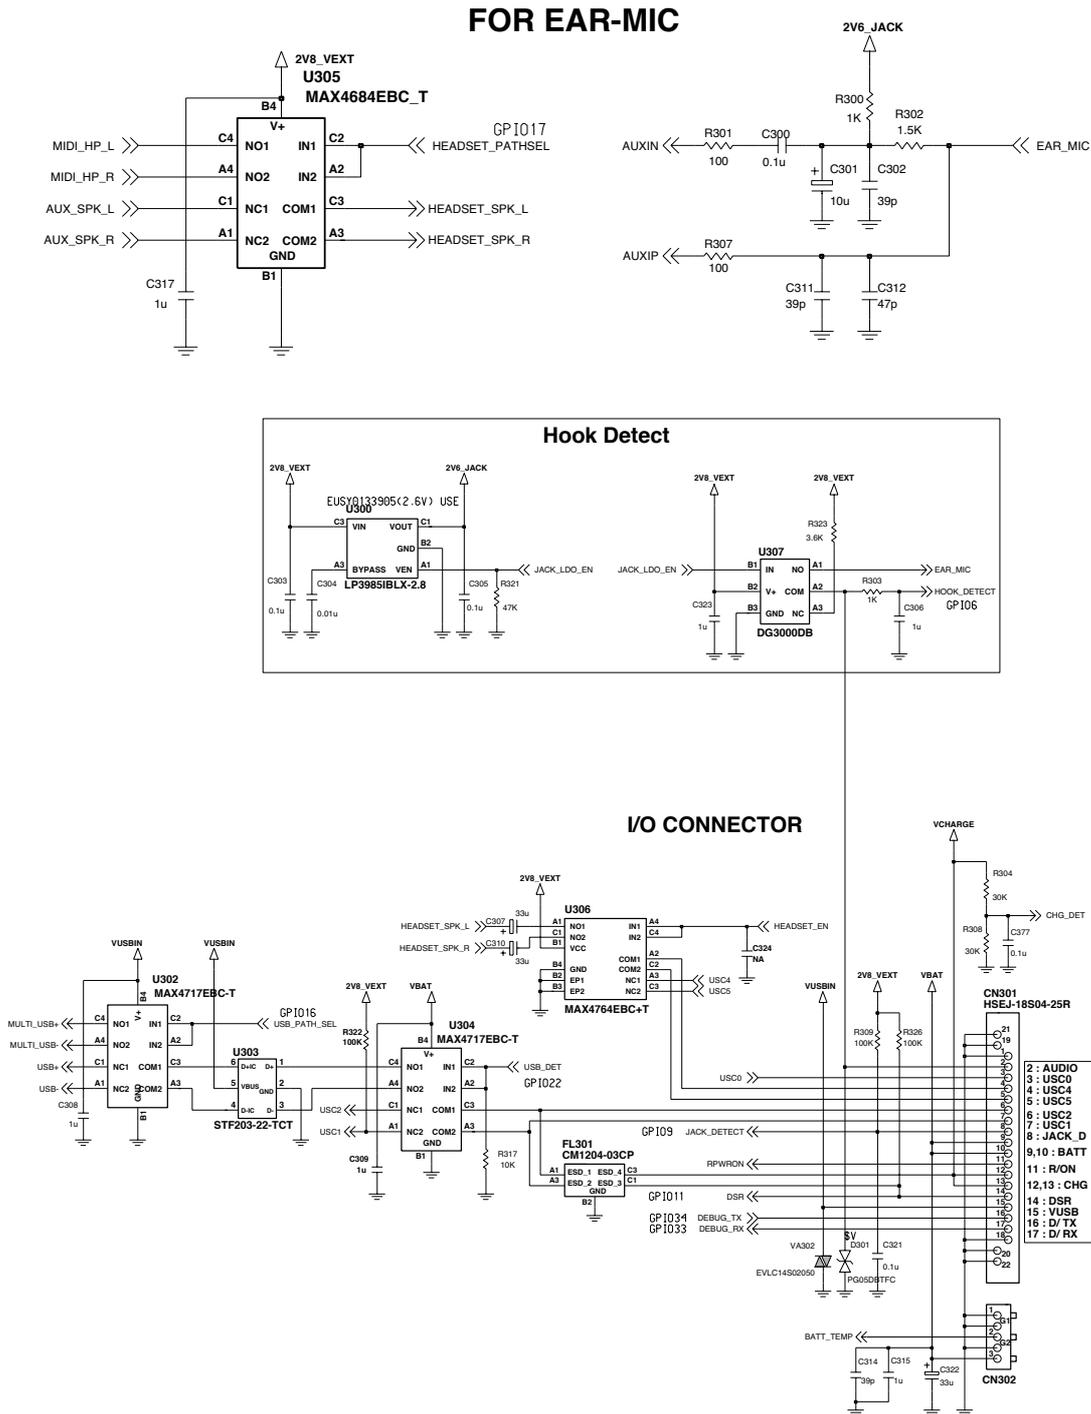


Figure 3-25. HEADSET JACK INTERFACE, HEADSET JACK ANALOG SWITCH

3.13 MEMORY(TOSHIBA, U204)


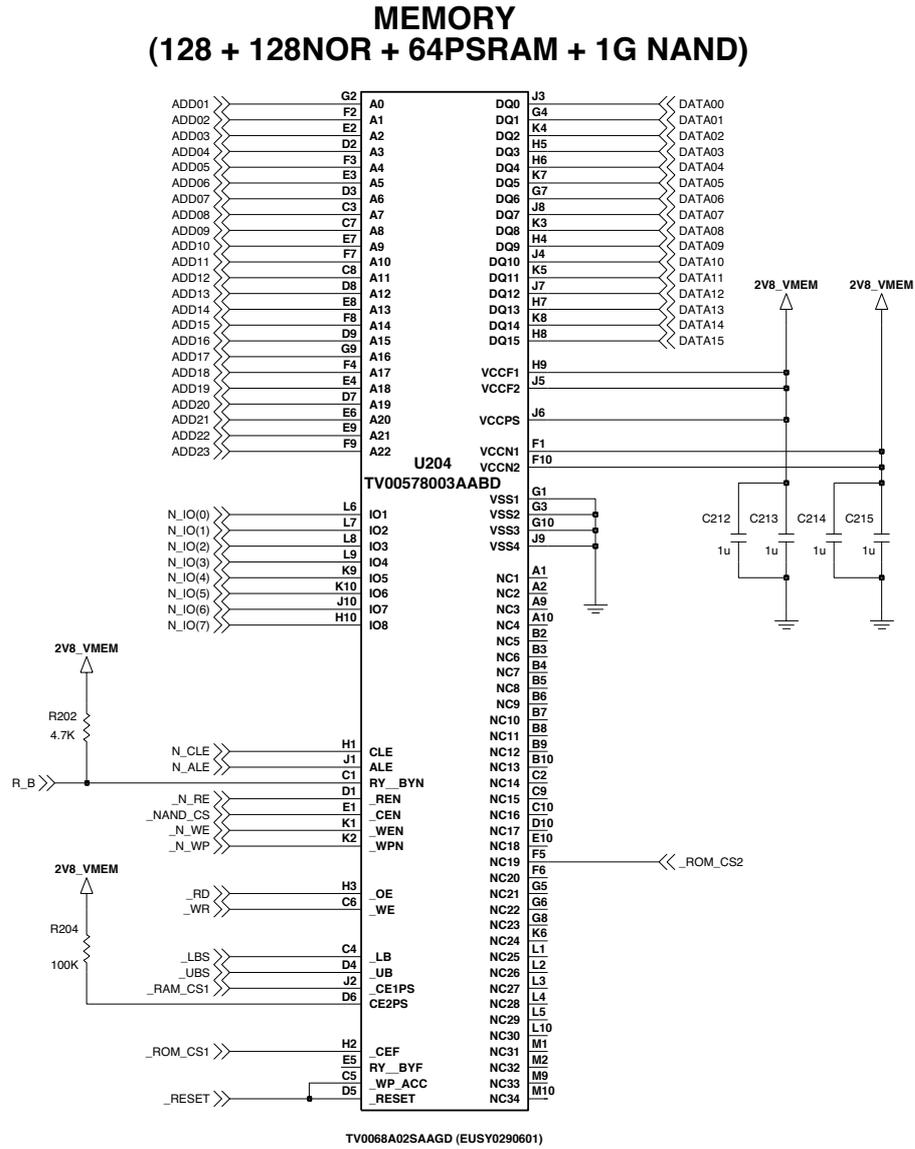


Figure 3-26. MEMORY


### 3. TECHNICAL BRIEF

#### 3.14 BLUETOOTH(LBMA-2C67B2,U202)

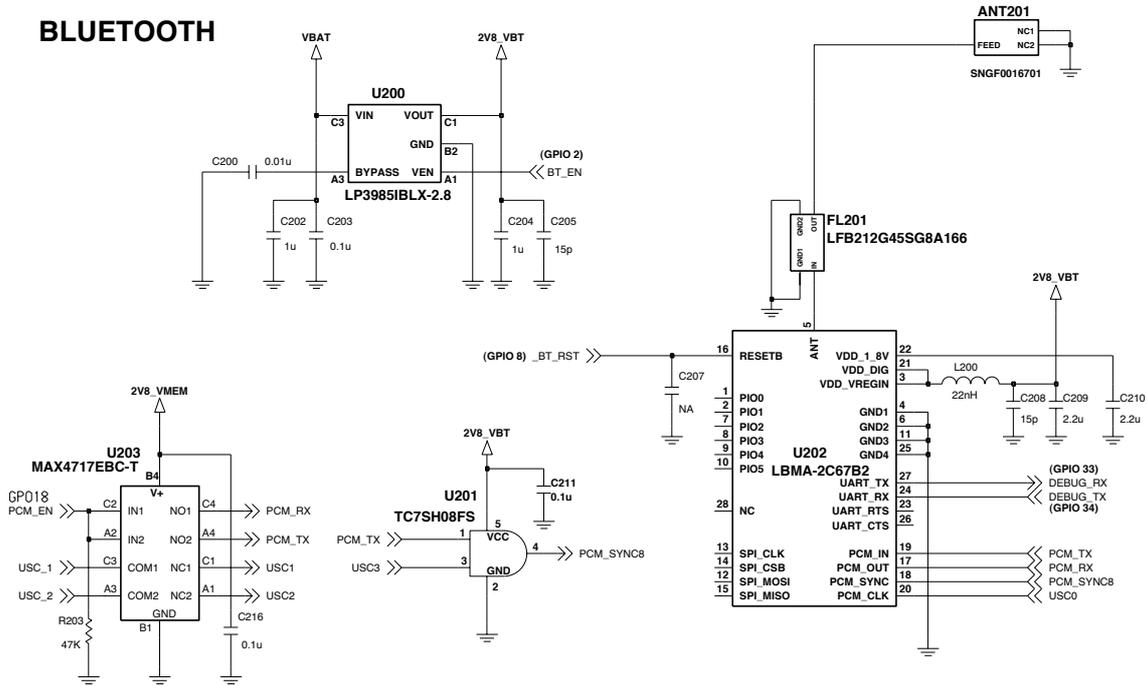


**Figure 3-27. BT MODULE**

### 3.15 CAMERA CONNECTOR, CAMERA LDO(CN202,U201)

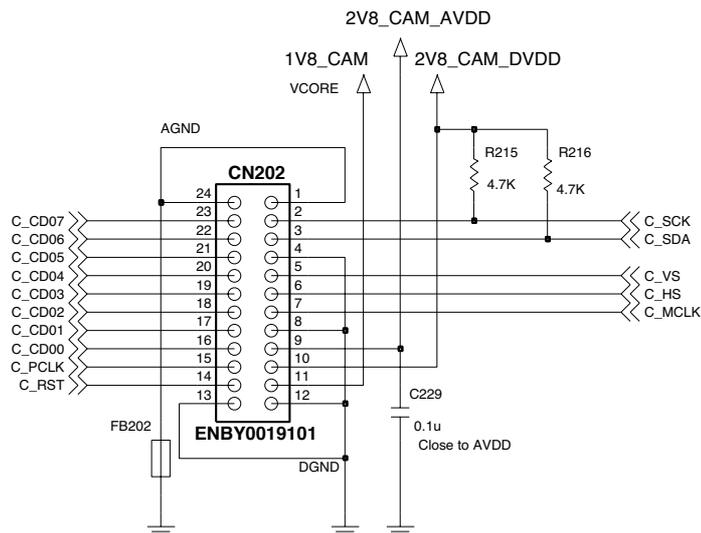

**Figure 3-28. CAMERA CONNECTOR**

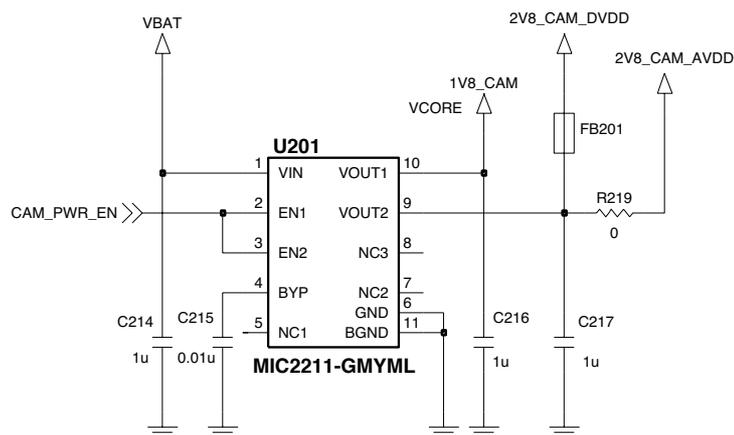

**Figure 3-29. CAMERA LDO**

### 3. TECHNICAL BRIEF

#### 3.16 KEY BACKLIGHT

## Key Backlight


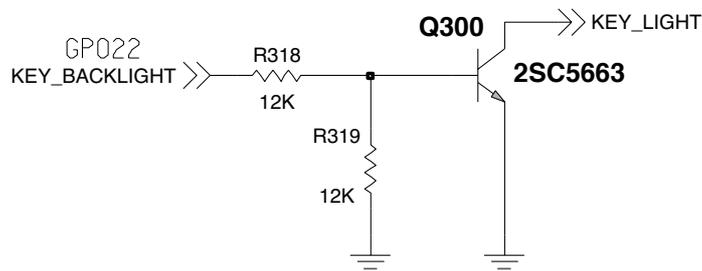


Figure 3-30. MAIN KEY BACKLIGHT

#### 3.17 WHITE/FLASH LED LDO

### FLASH LED & LCD Backlight

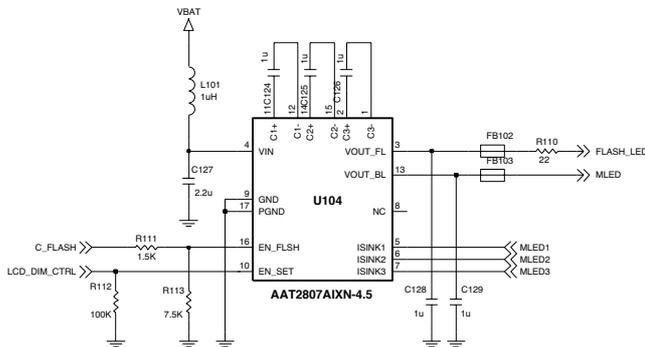

### CAMERA FLASH LED

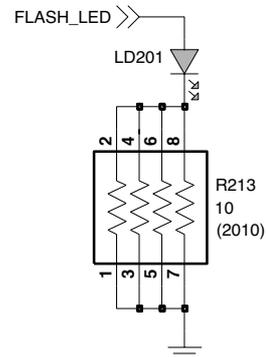


Figure 3-32. WHITE/FLASH LED LDO

### 3.18 FLIP SWITCH (U105)

## FLIP SWITCH

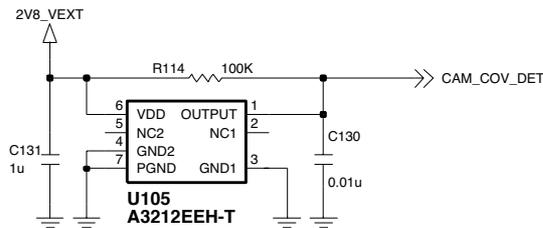


Figure 3-34. FLIP SWITCH

### 3.19 VIBRATOR

The vibrator is placed in main board. The vibrator is driven from VIBRATOR from AD6527B.

## VIBRATOR

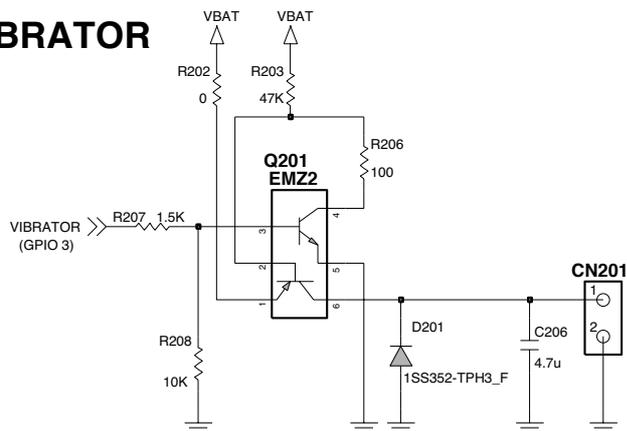


Figure 3-35. MOTOR

## 4. TROUBLE SHOOTING

---

### 4. TROUBLE SHOOTING

#### 4.1 RX Trouble

TEST POINT


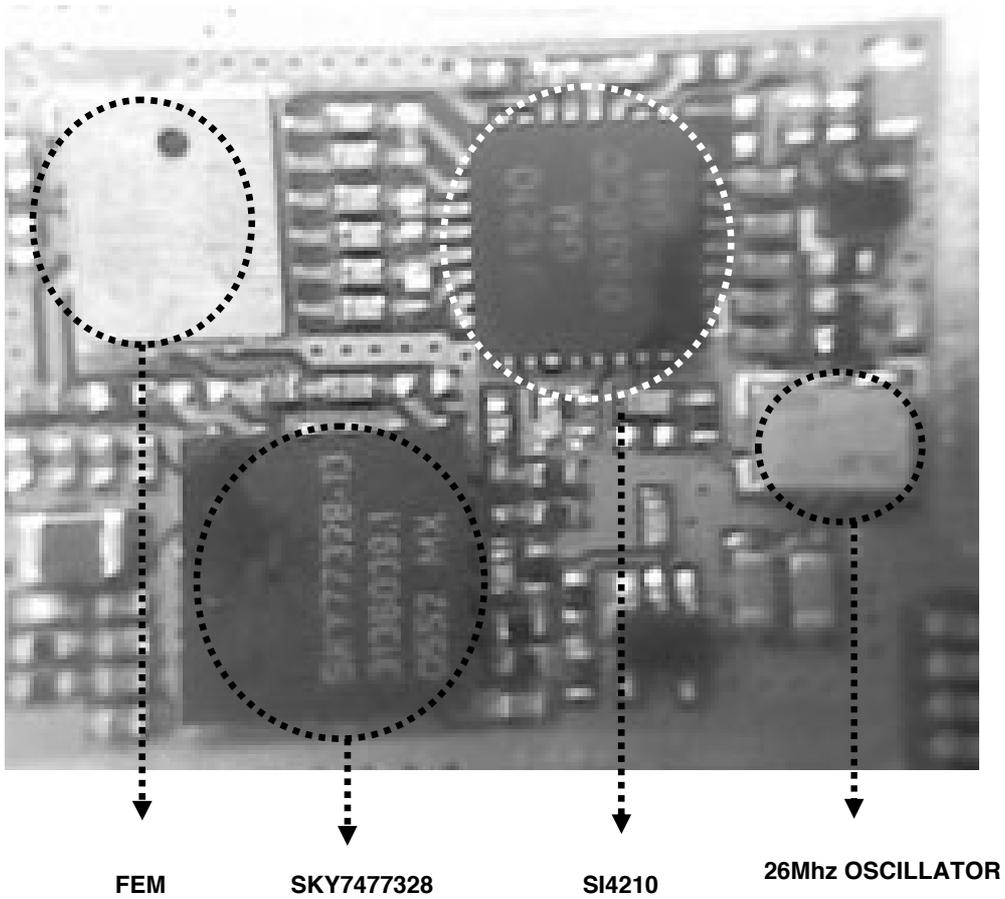


Figure 4-1


### Checking Flow

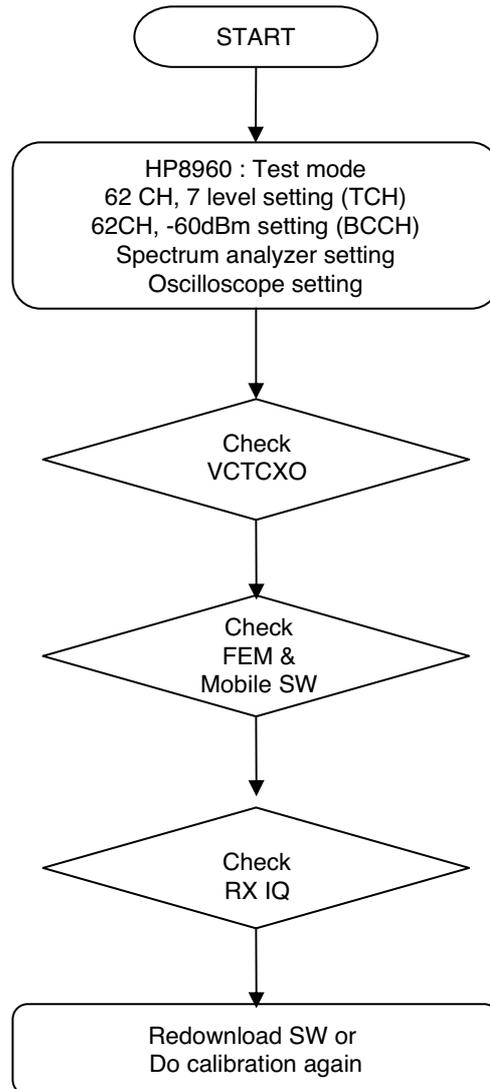


# 4. TROUBLE SHOOTING

## (1) Checking VCTCXO Circuit


### TEST POINT

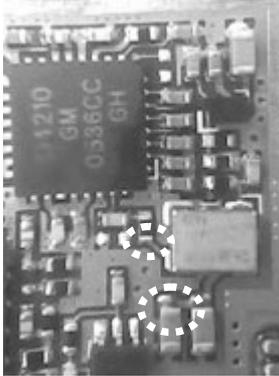


### Checking Flow

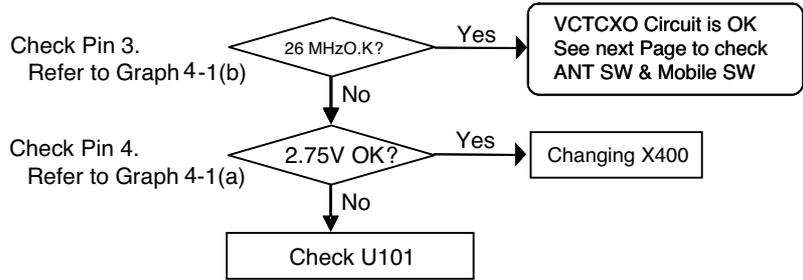


### CIRCUIT

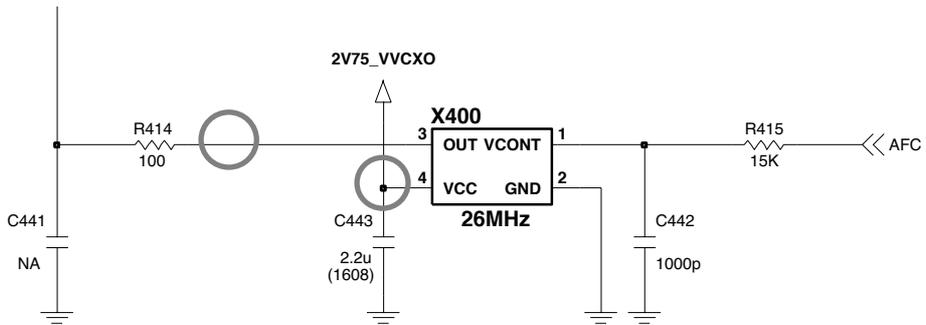

### Waveform

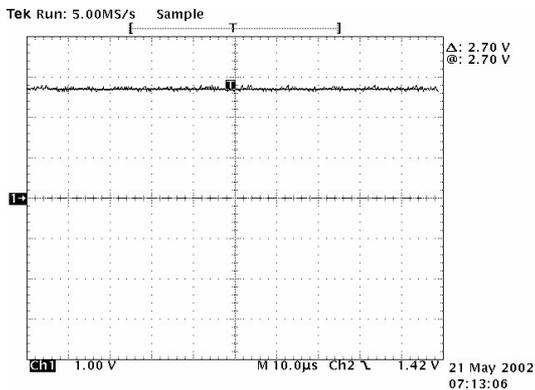

Graph 4-1(a)

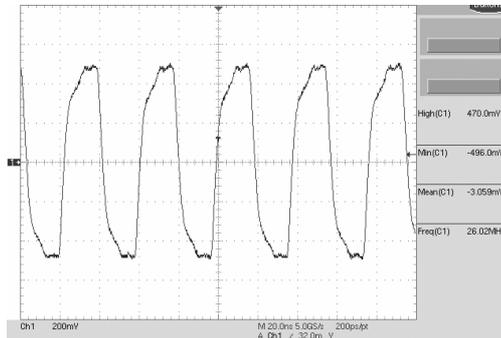


Graph 4-1(b)


# 4. TROUBLE SHOOTING

## (2) Checking FEM & Mobile SW

### TEST POINT

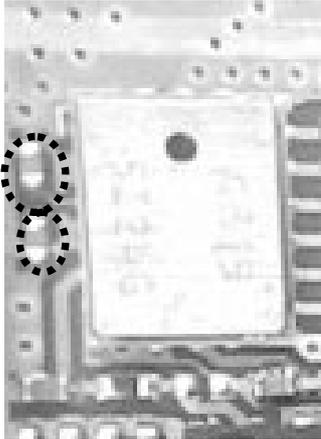


### Waveform

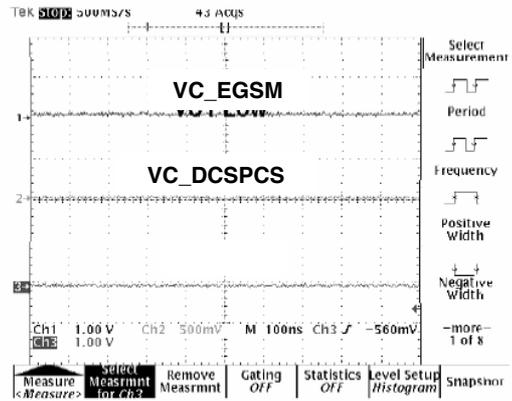


FEM Control GSM & DCS & EGSM  
Graph 4-2(a)

### CIRCUIT

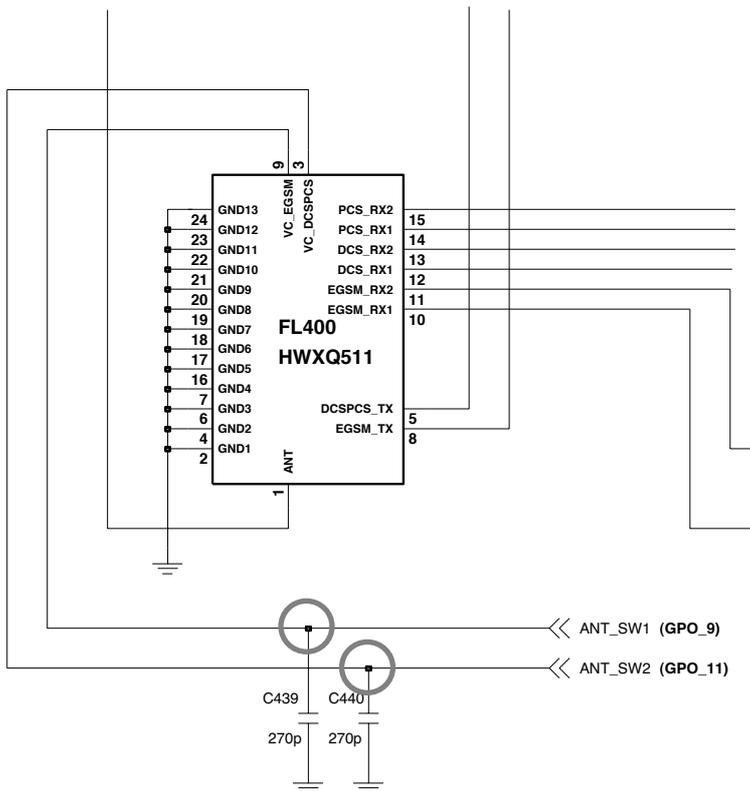

# 4. TROUBLE SHOOTING

## Checking Flow

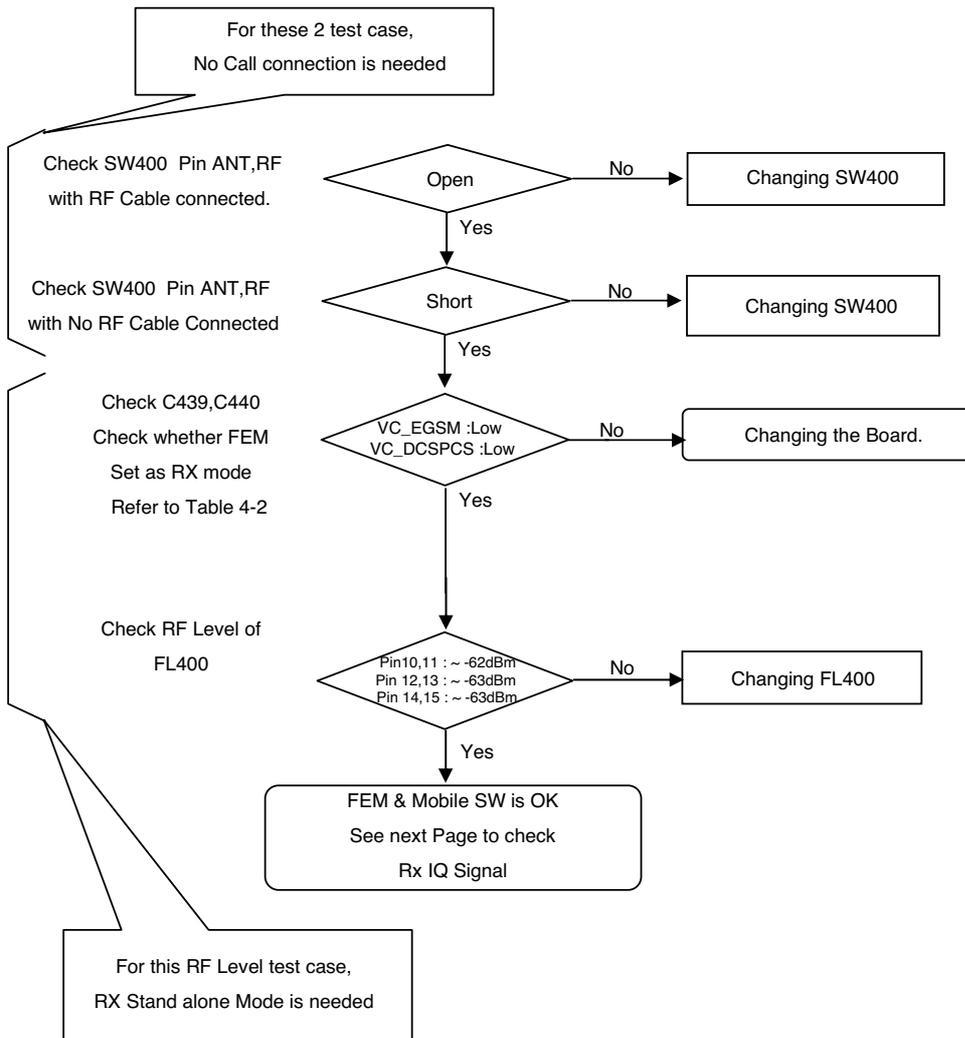


Select Mode	Vc(EGSM)	Vc(DCS/PCS)
EGSM-Rx	Low	Low
EGSM-Tx	High	Low
DCS-Rx	Low	Low
PCS-Rx	Low	Low
DCS/PCS-Tx	Low	High

**Table 4-2**


# 4. TROUBLE SHOOTING

## (4) Checking RX IQ


### TEST POINT

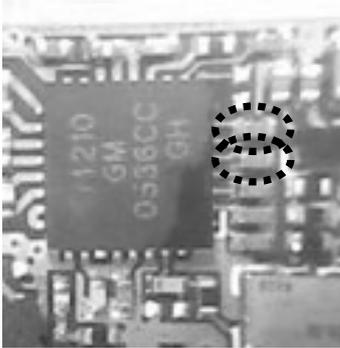

### CIRCUIT

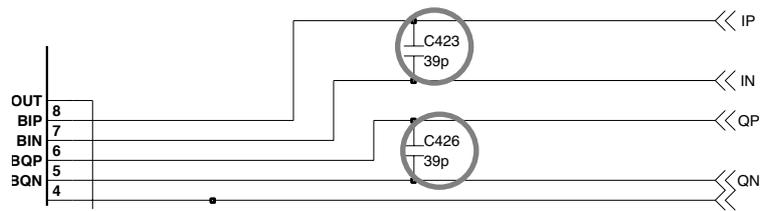


### Waveform

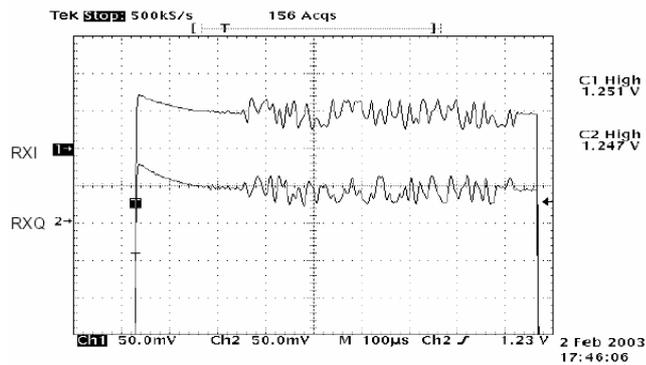

**Graph 4-4**

### Checking Flow

Check C423,C426.  
Check if there is any  
Major difference  
Refer to graph 4-4

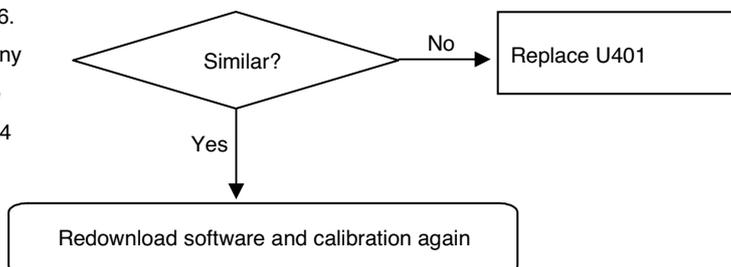


## 4. TROUBLE SHOOTING

---


### 4.2 TX Trouble

TEST POINT

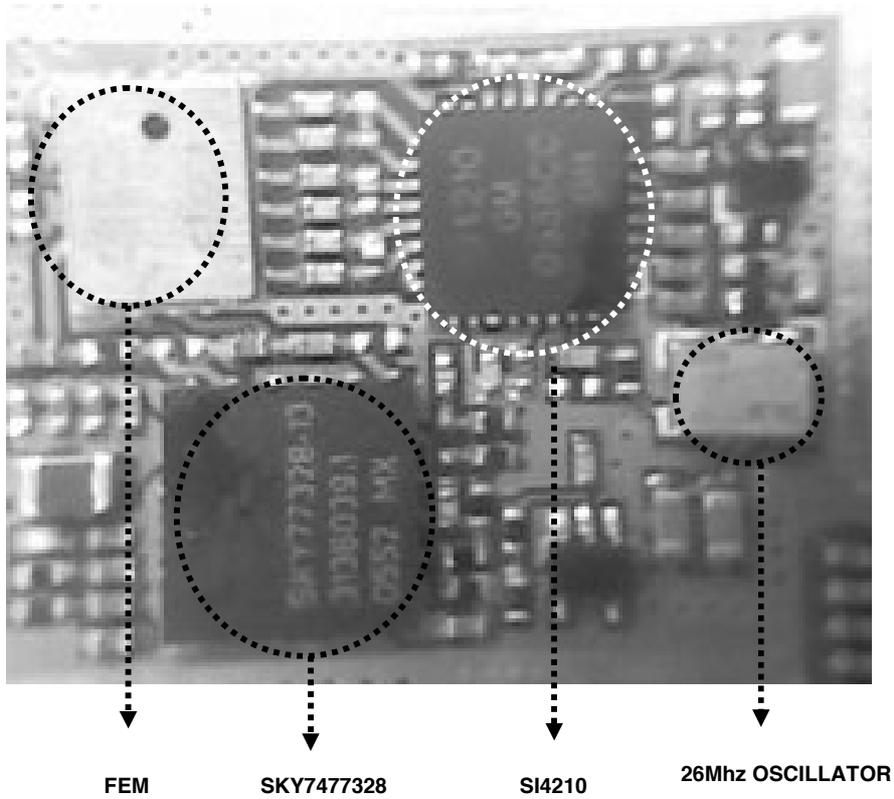

**Figure 4-2**


### Checking Flow

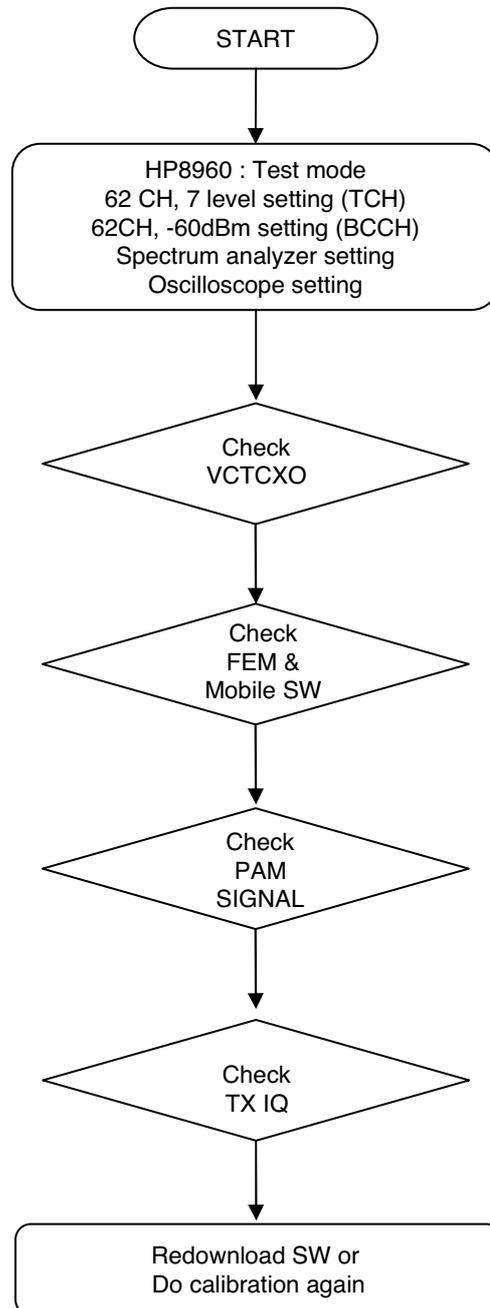


# 4. TROUBLE SHOOTING

## (1) Checking VCTCXO Circuit


### TEST POINT

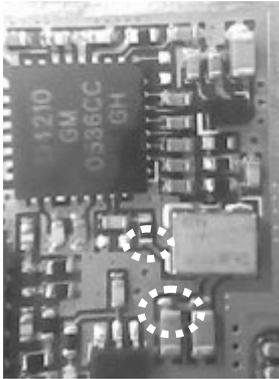


### Checking Flow

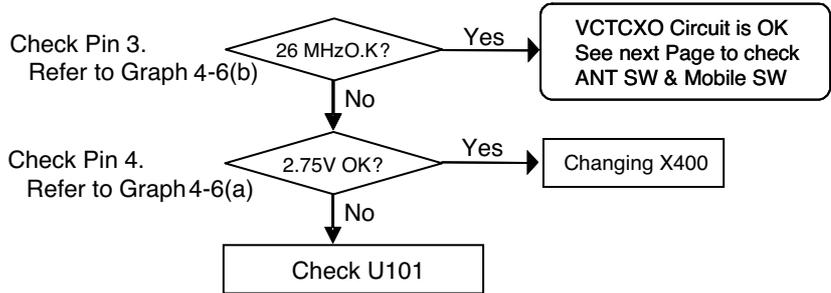


### CIRCUIT

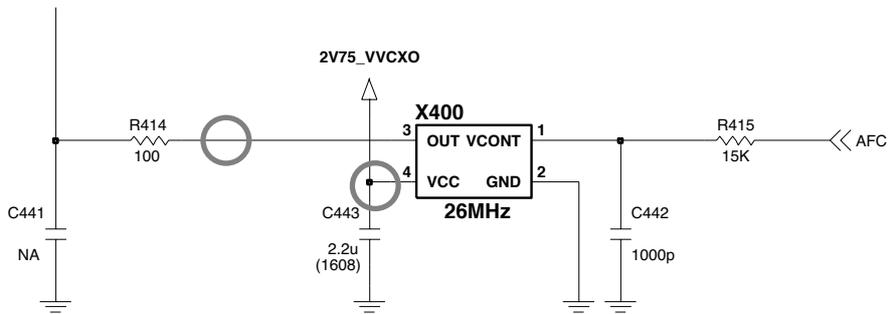

### Waveform

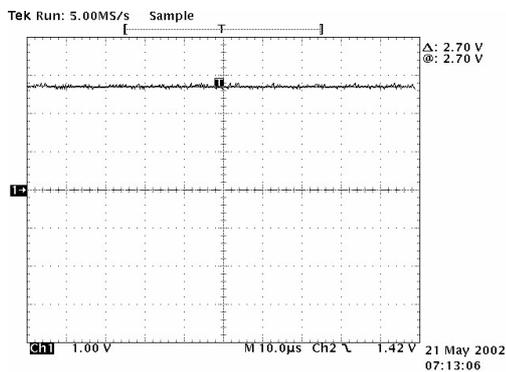

Graph 4-6(a)

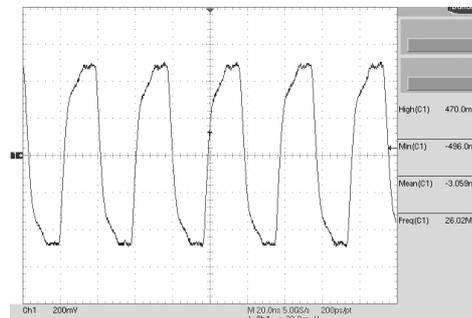


Graph 4-6(b)


## 4. TROUBLE SHOOTING

### (3) Checking Ant SW & Mobile SW


#### TEST POINT

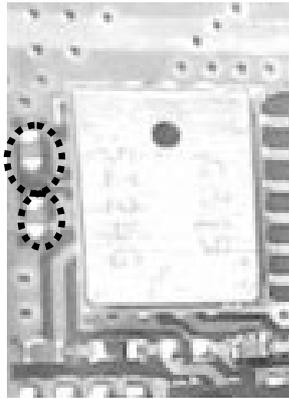


#### CIRCUIT

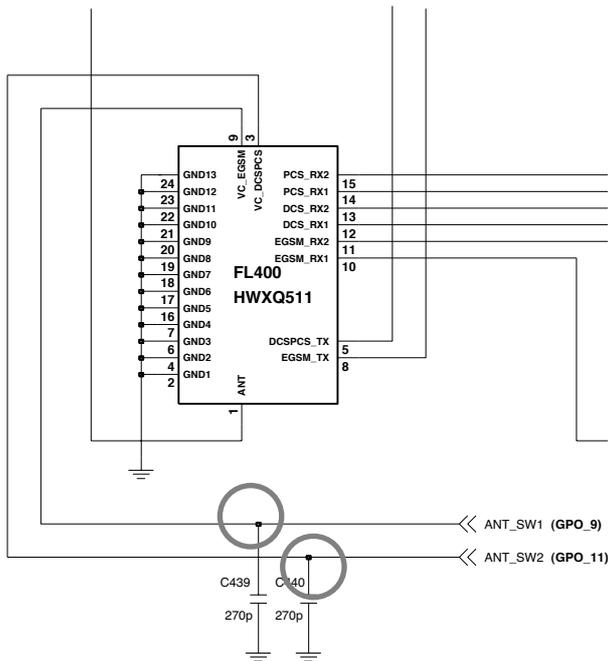

#### Waveform

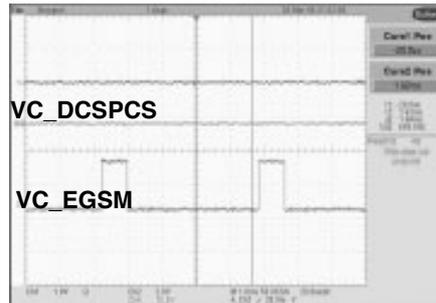


FEM Control EGSM  
Graph 4-7(a)

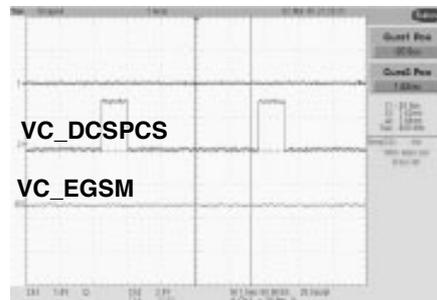

FEM Control DCS & PCS  
Graph 4-7(b)

# 4. TROUBLE SHOOTING

## Checking Flow

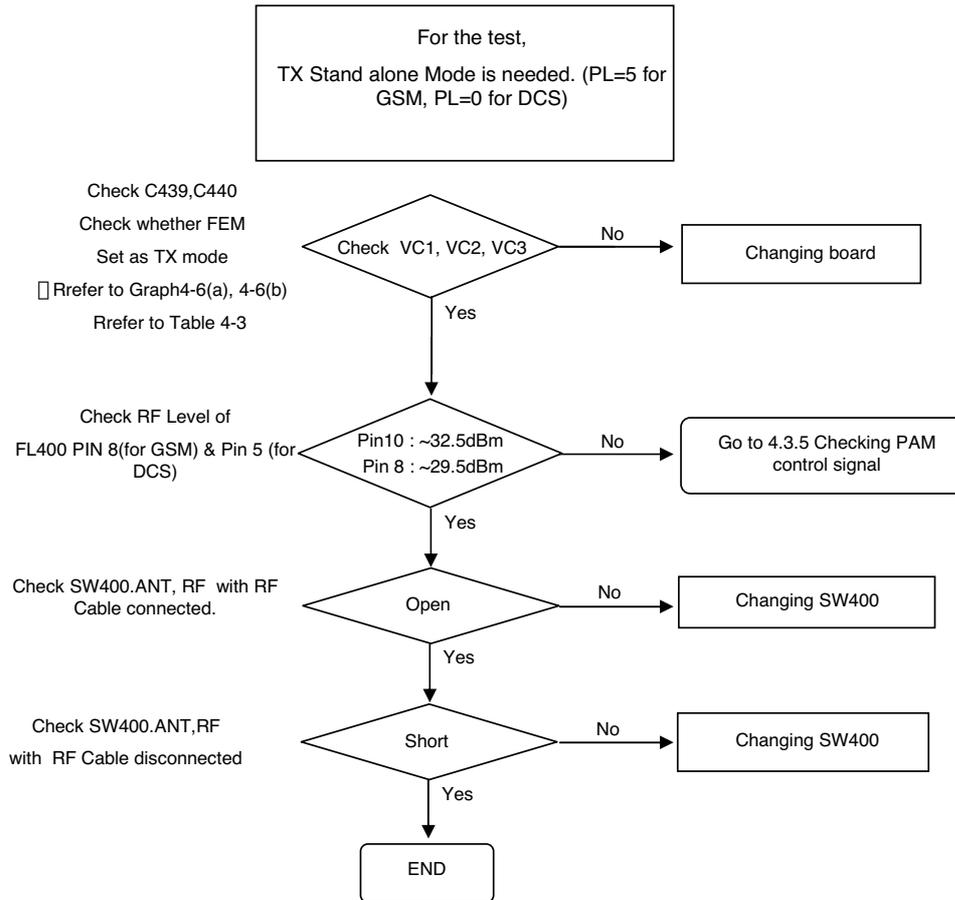


Select Mode	Vc(EGSM)	Vc(DCS/PCS)
EGSM-Rx	Low	Low
EGSM-Tx	High	Low
DCS-Rx	Low	Low
PCS-Rx	Low	Low
DCS/PCS-Tx	Low	High

**Table 4-2**


# 4. TROUBLE SHOOTING

## (4) Checking PAM Control Signal


### TEST POINT

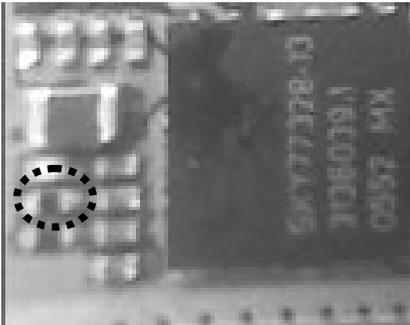

### CIRCUIT

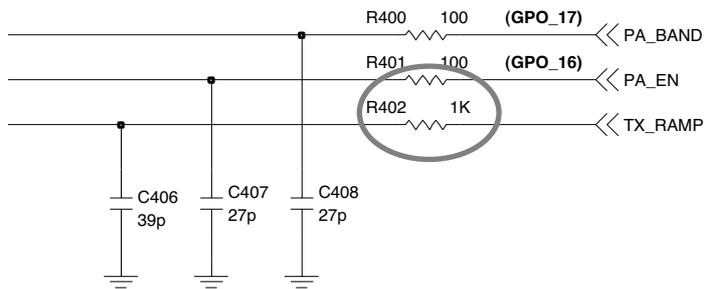


### Waveform

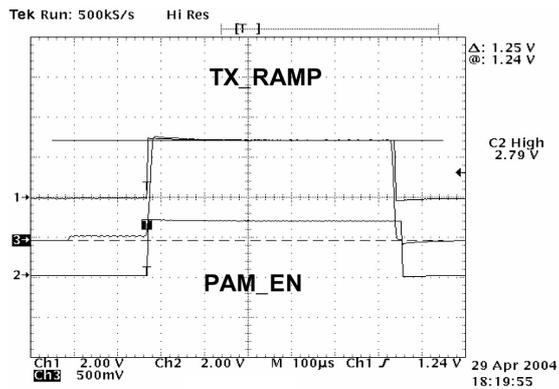

Graph 4-8

### Checking Flow


Check TX\_RAMP and PA\_EN  
Check if there is  
Any Major Difference or not  
Refer to Graph 4 - 8

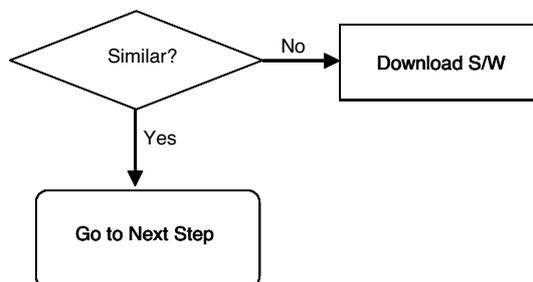


# 4. TROUBLE SHOOTING

## (5) Checking TX IQ

### TEST POINT

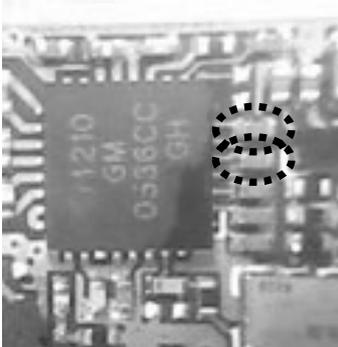


### Waveform

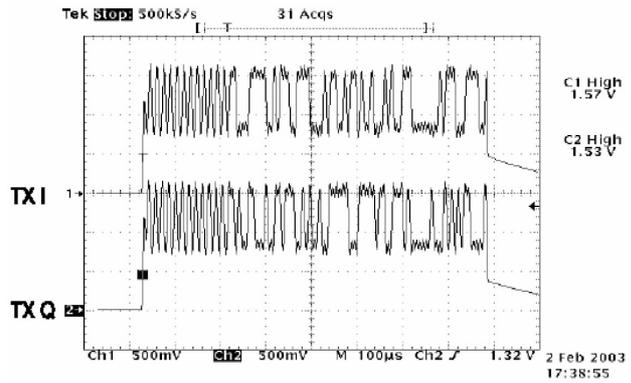


Graph 4-9

### CIRCUIT

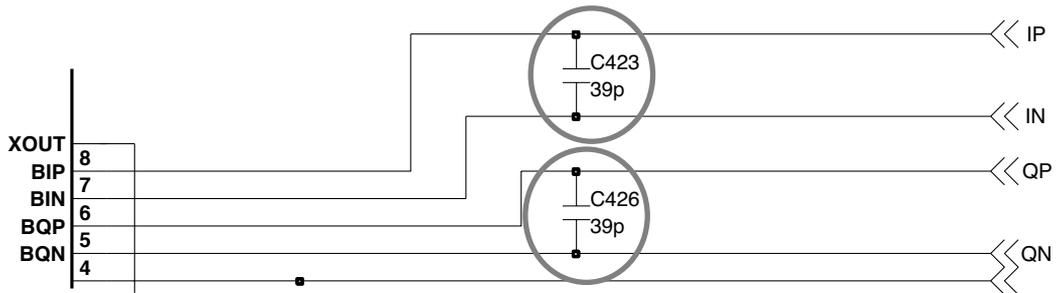

### Checking Flow

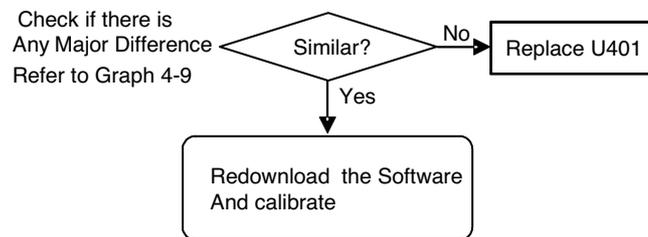

## 4.3 Power On Trouble

### TEST POINT


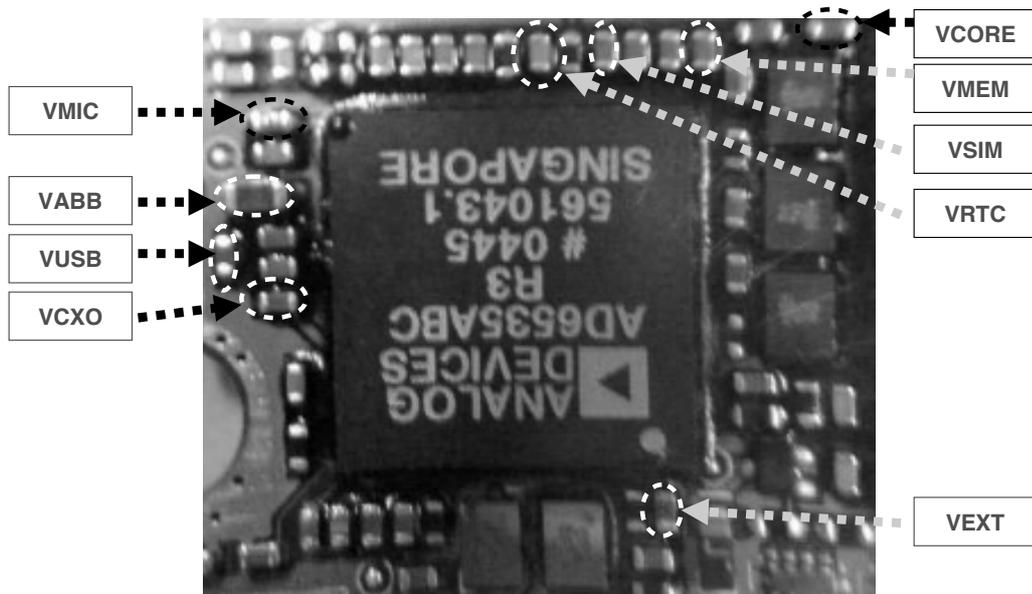



Figure 4-3

### CIRCUIT

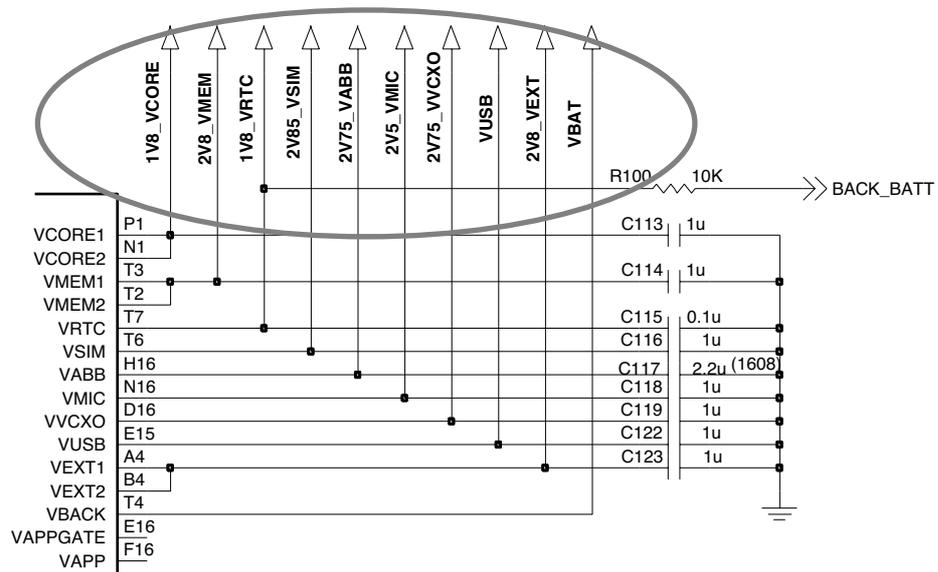


# 4. TROUBLE SHOOTING

## Checking Flow

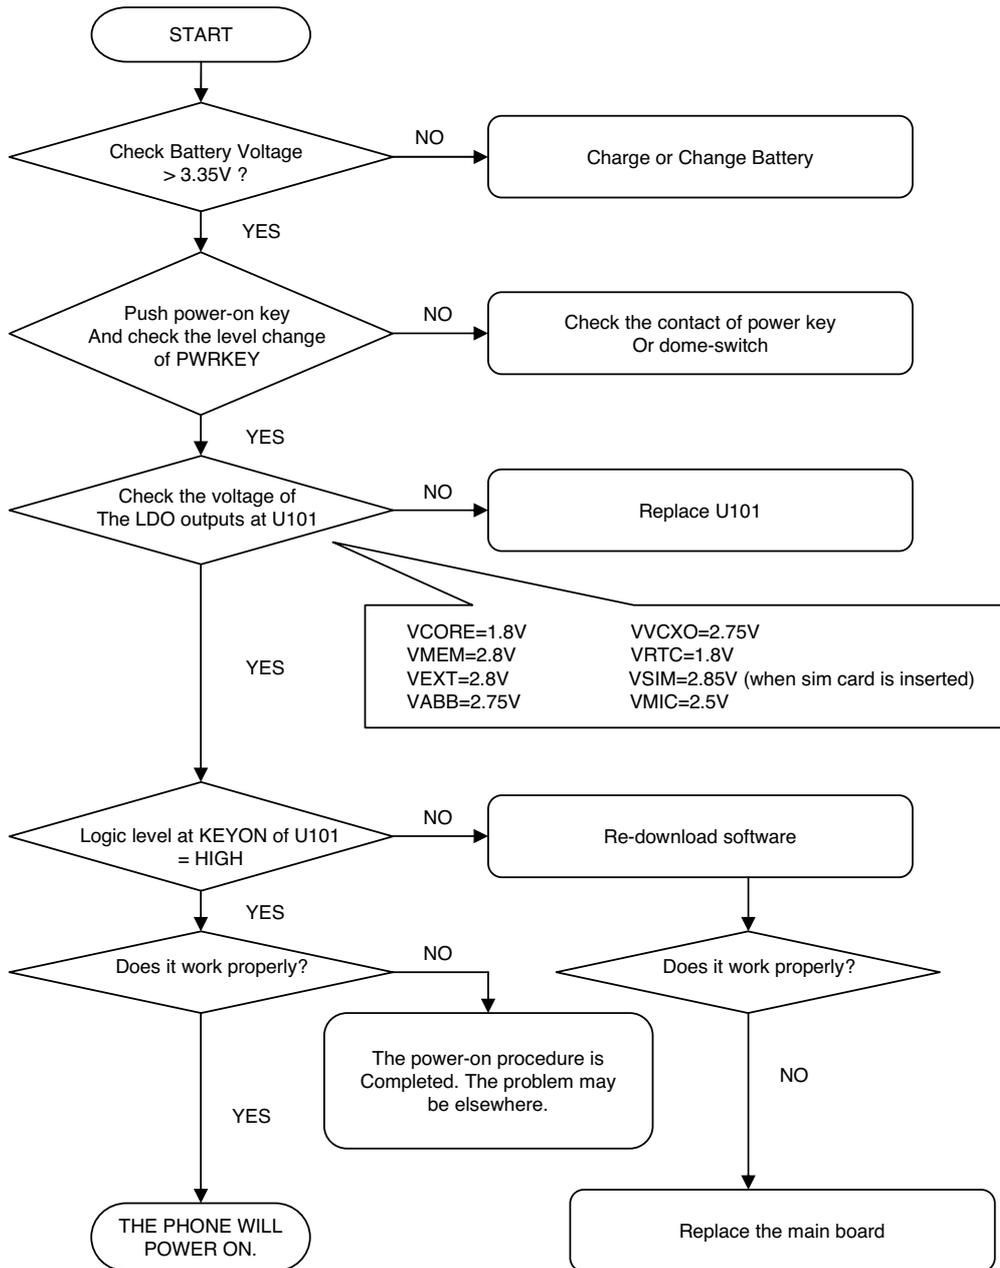


## 4.4 Charging Trouble

TEST POINT

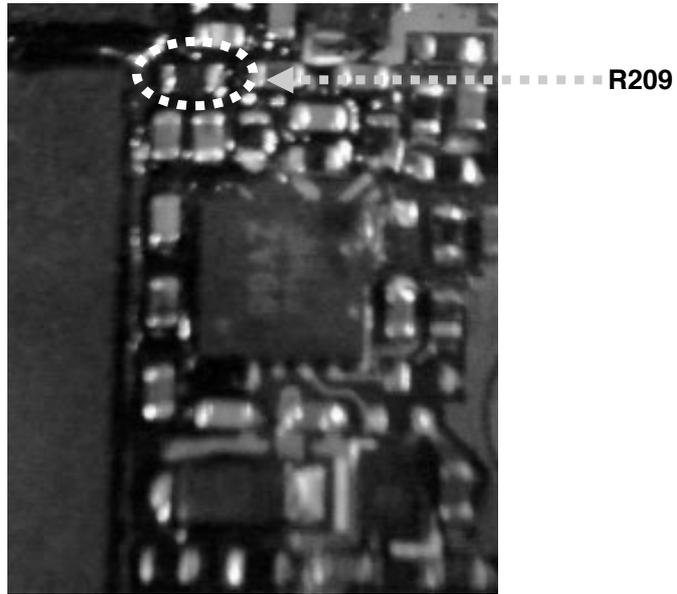

CIRCUIT


Charging IC

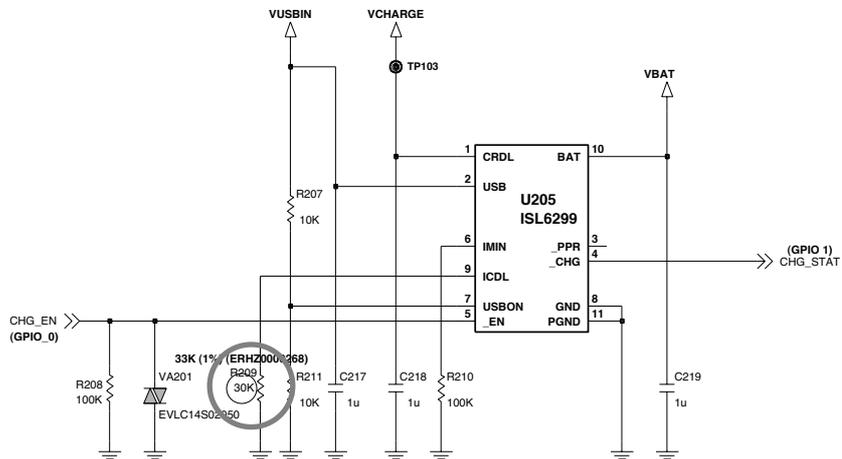

## 4. TROUBLE SHOOTING

---

### Checking Flow

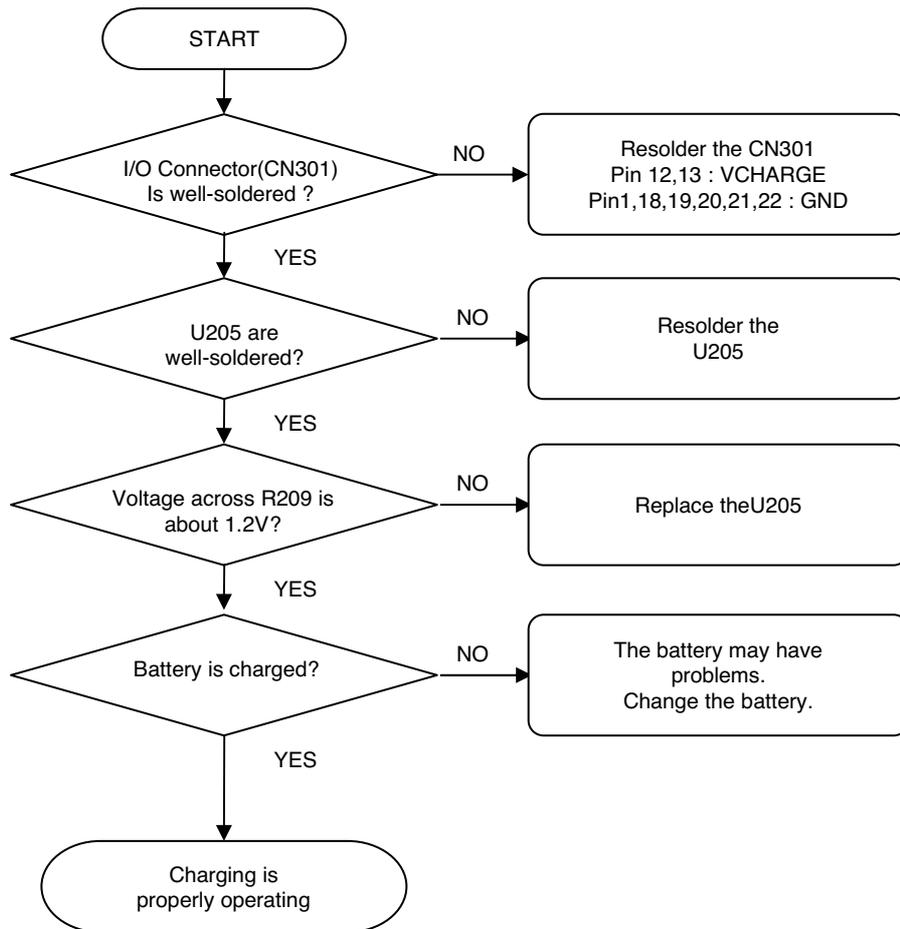

4.5 Vibrator Trouble

TEST POINT


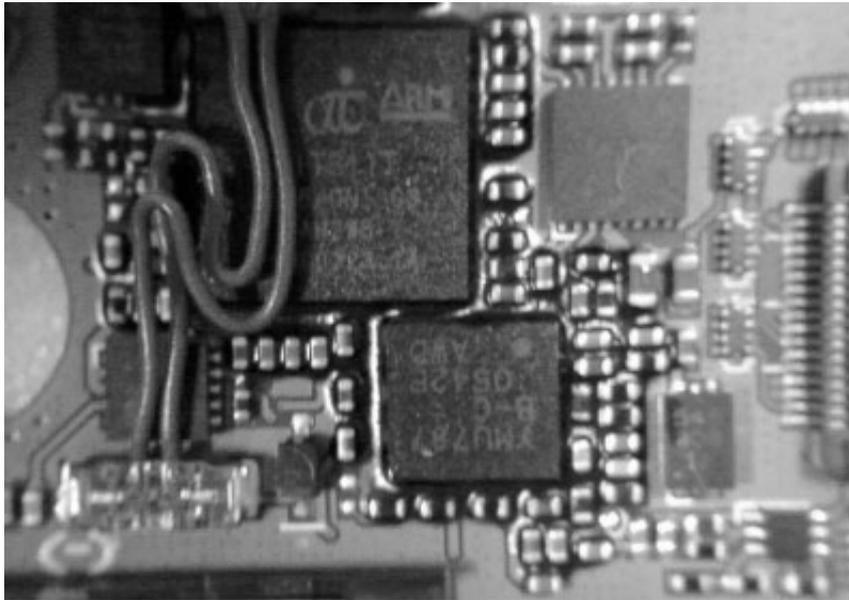



Figure 4-5

CIRCUIT

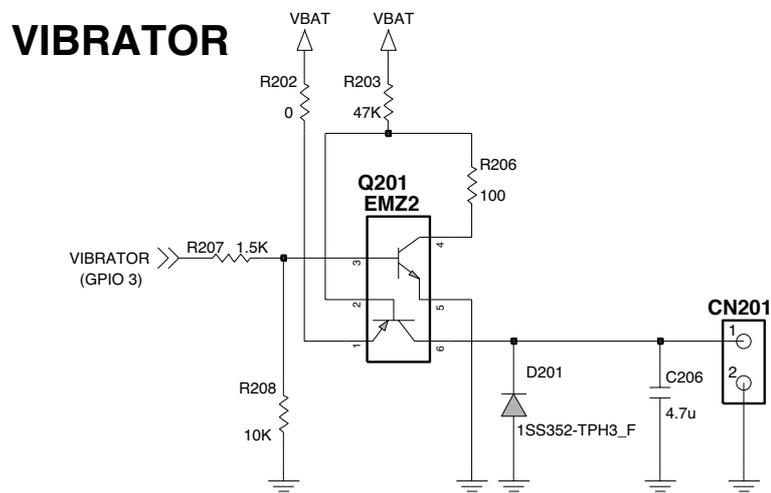

## 4. TROUBLE SHOOTING

### Checking Flow

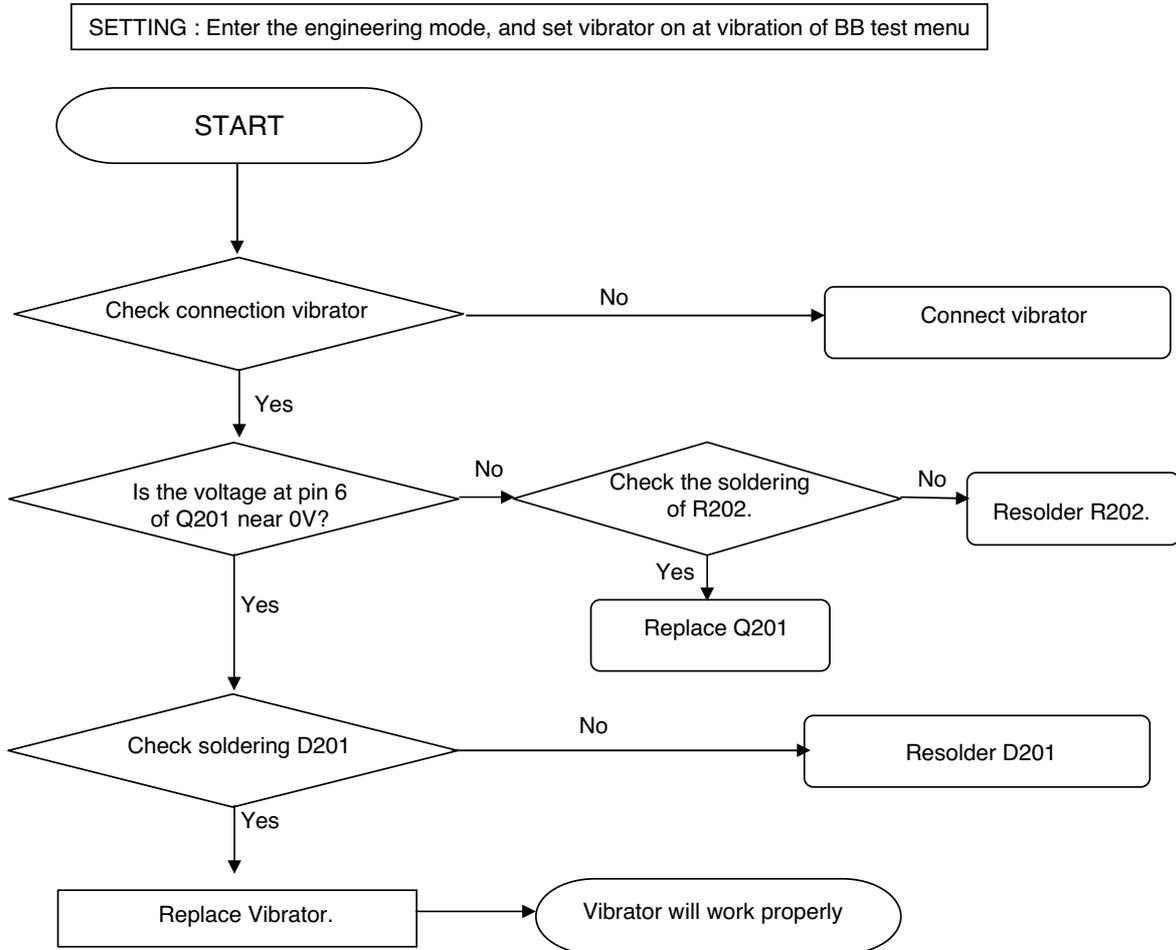

## 4.6 LCD Trouble

TEST POINT


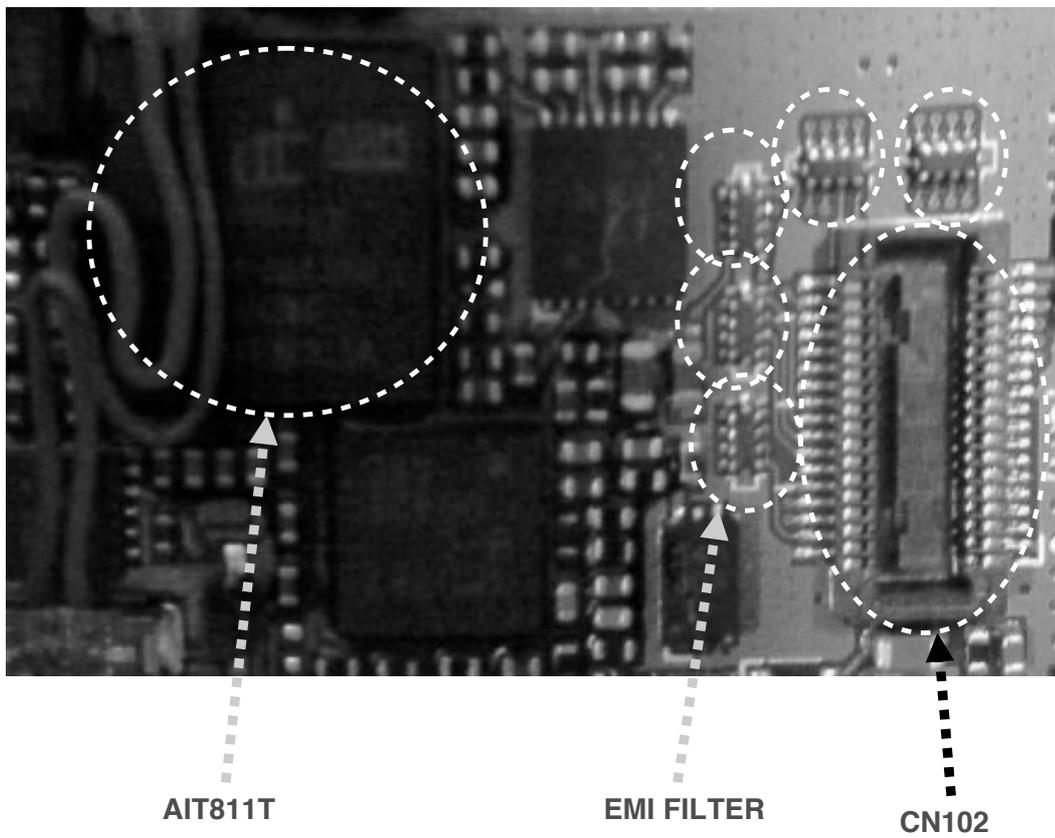


Figure 4-6


# 4. TROUBLE SHOOTING

## CIRCUIT DIAGRAM

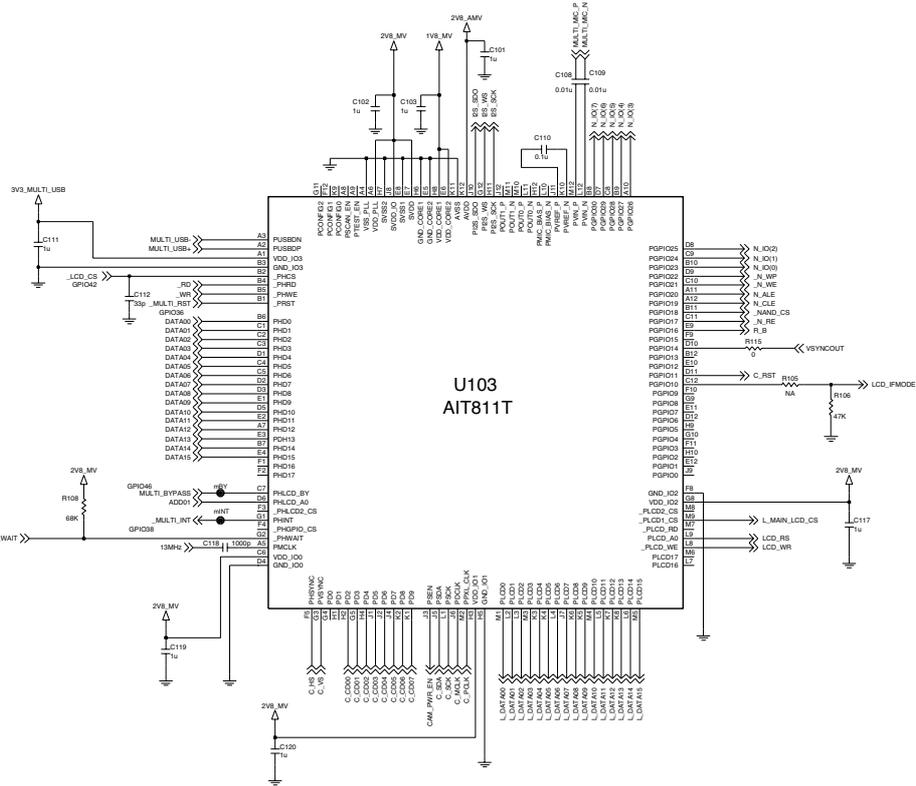


## TFT-LCD CONNECTOR

## TFT-LCD CONNECTOR

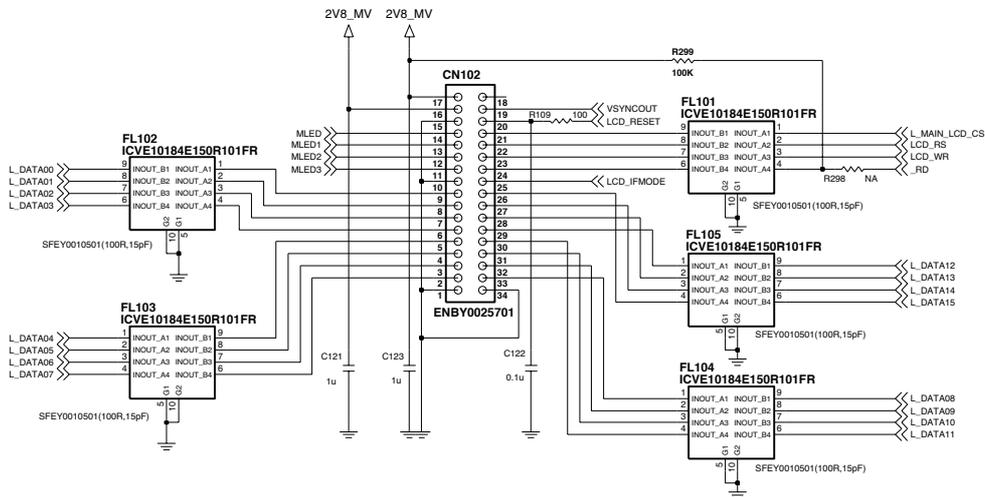

## Checking Flow

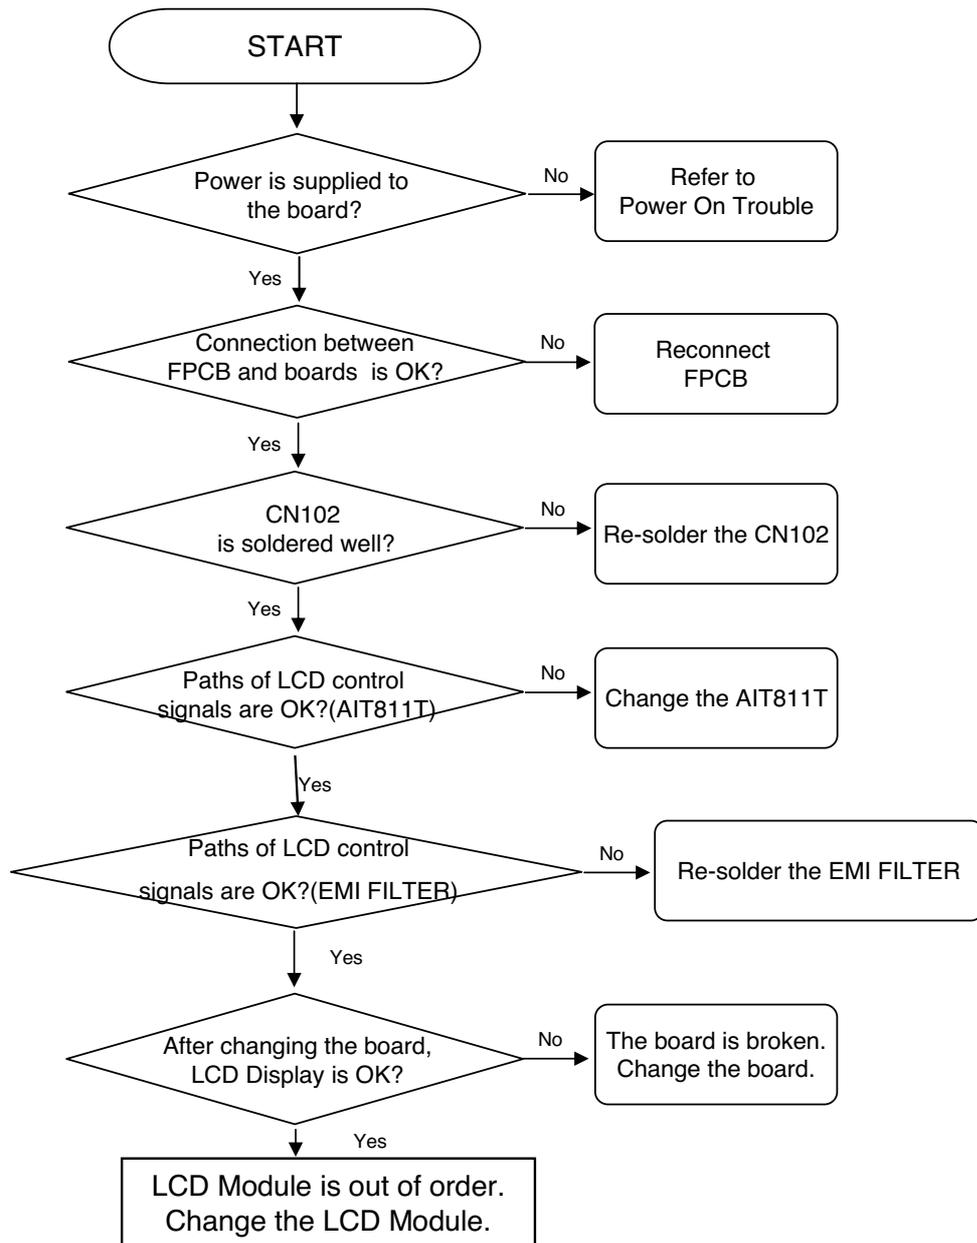

# 4. TROUBLE SHOOTING

## 4.7 BT Trouble

### TEST POINT



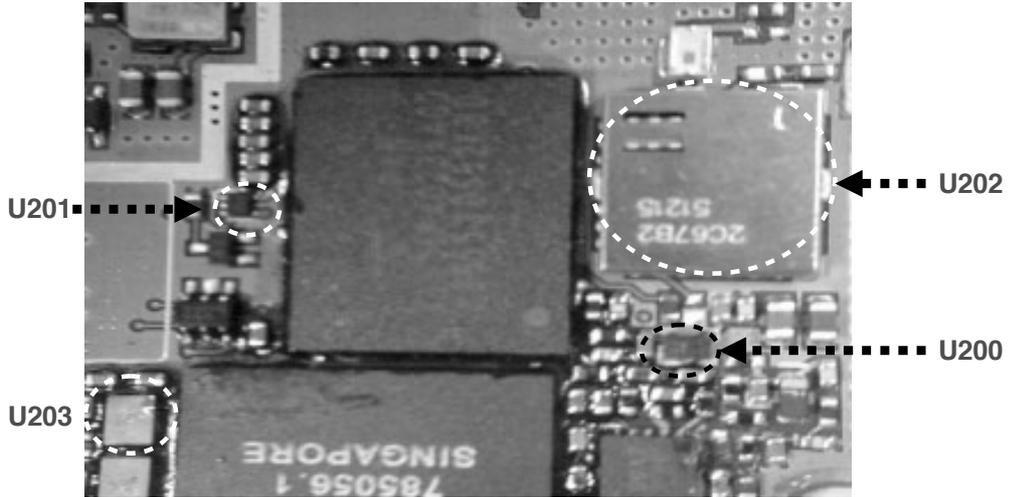


Figure 4-7


### CIRCUIT DIAGRAM

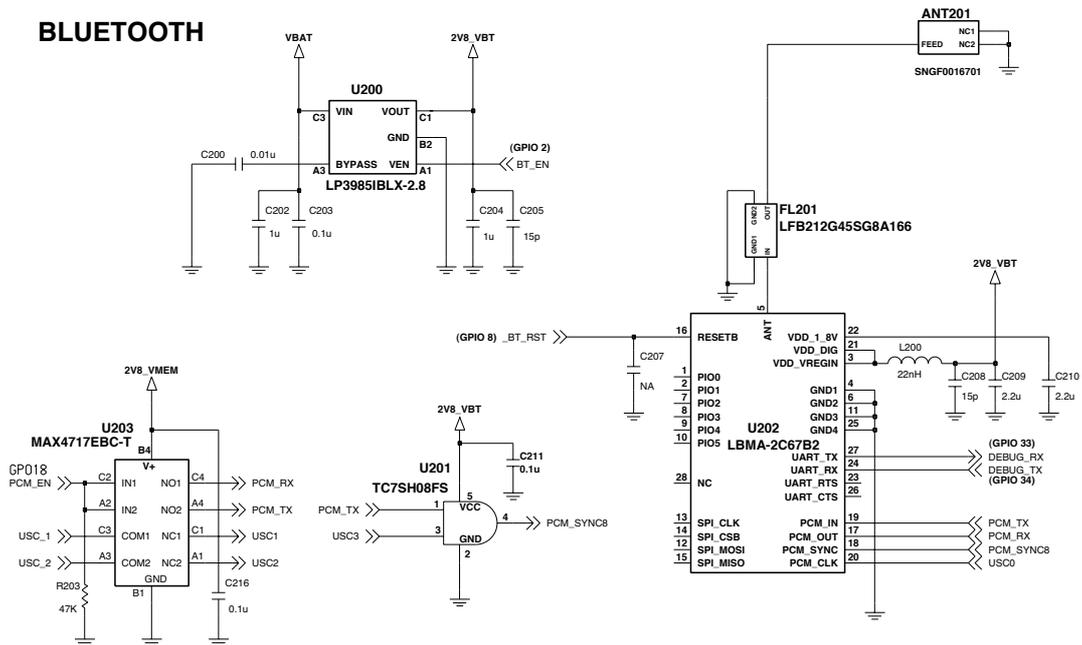


## Checking Flow

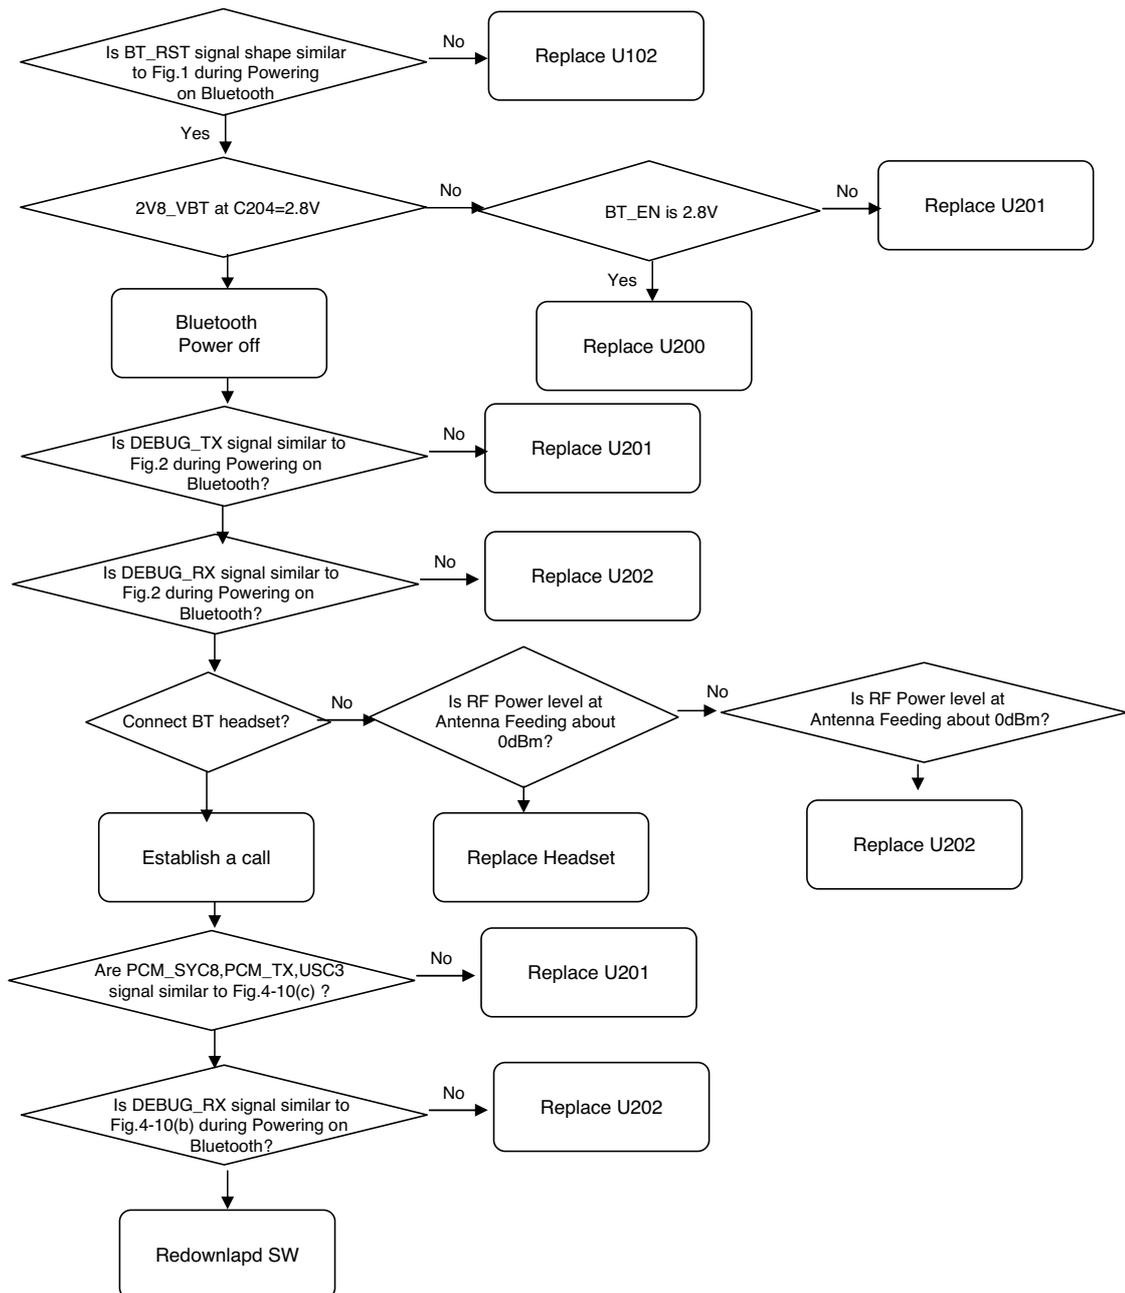


## 4. TROUBLE SHOOTING

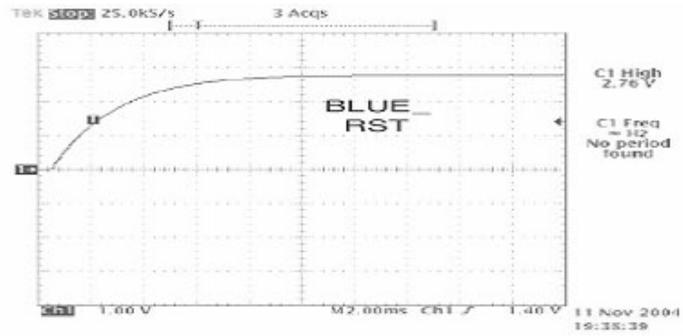

**Graph 4-10(a) BLUE\_RST**

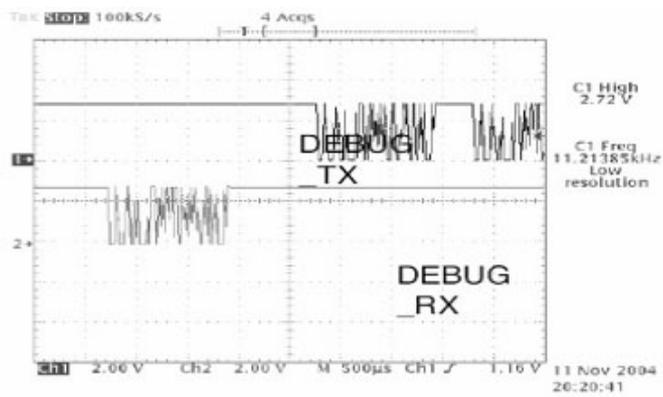

**Graph 4-10(b) DEBUG\_TX,RX**

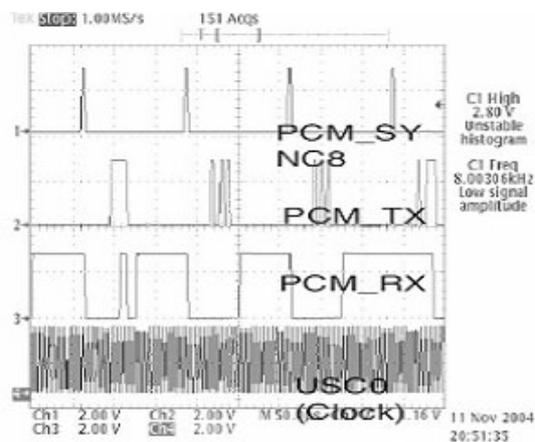

**Graph 4-10(c) PCM\_SYNC, TX, RX, USCO**

### 4.8 Speaker Trouble

**TEST POINT**


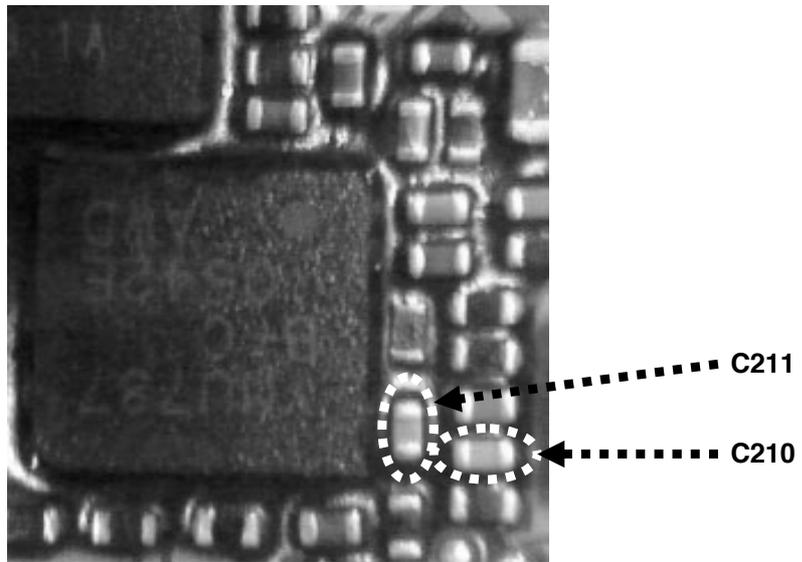


Figure 4-8


**CIRCUIT DIAGRAM**

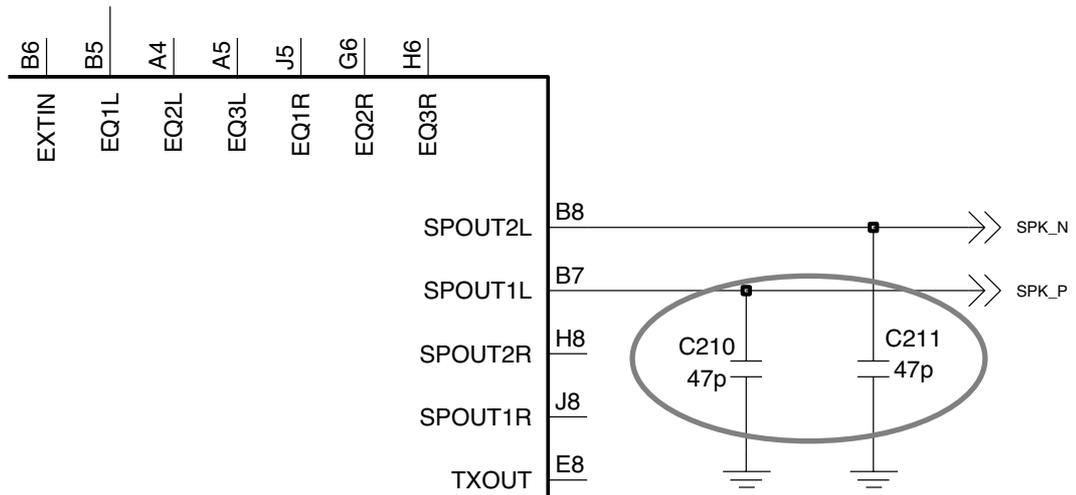

## 4. TROUBLE SHOOTING

---

### Checking Flow

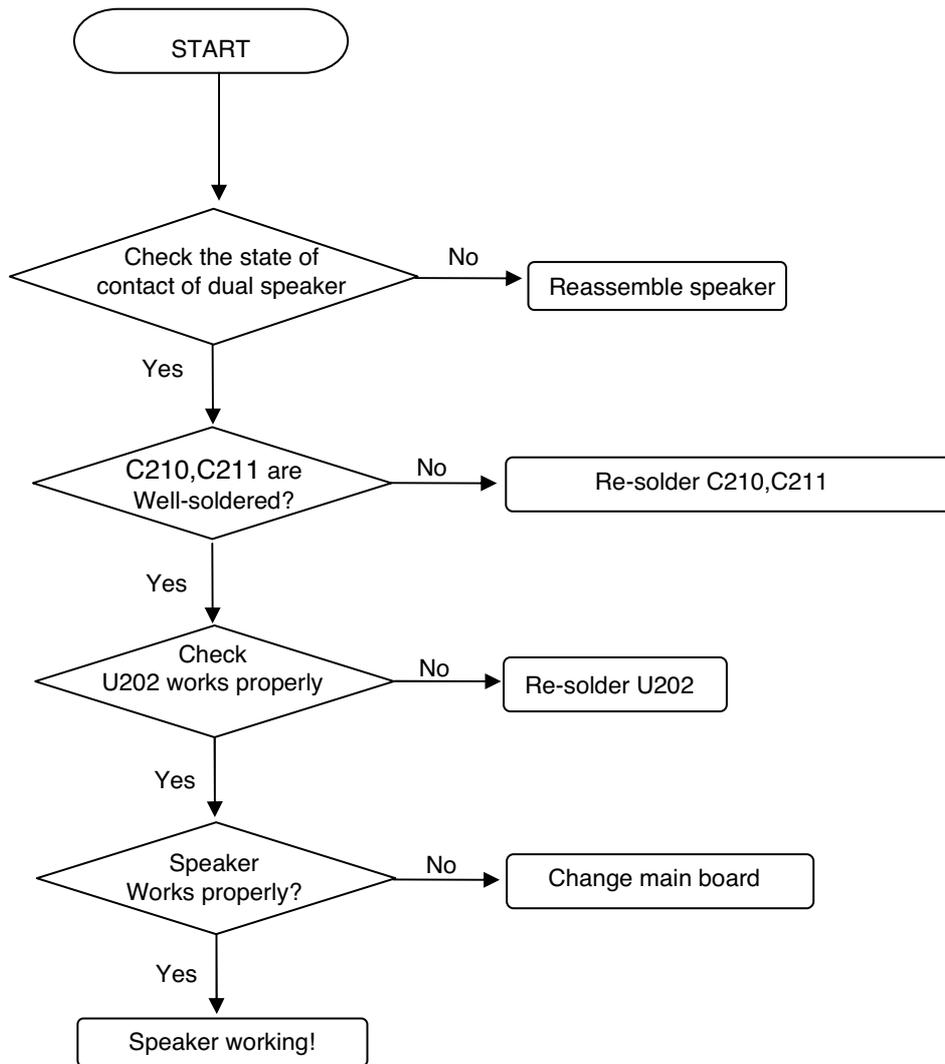

### 4.9 SIM Card Interface Trouble

TEST POINT


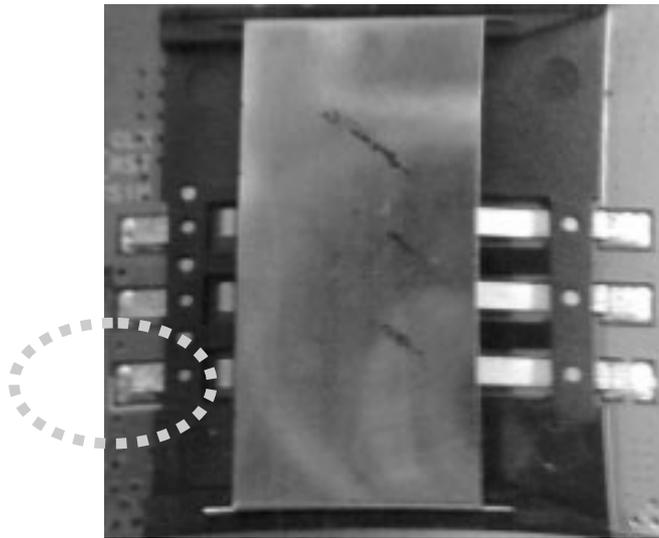


Figure 4-9


CIRCUIT DIAGRAM

### SIM CONNECTOR

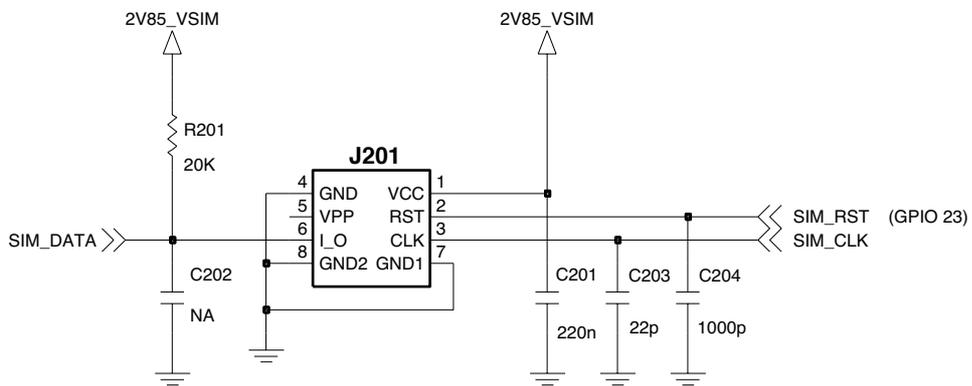

## 4. TROUBLE SHOOTING

### Checking Flow

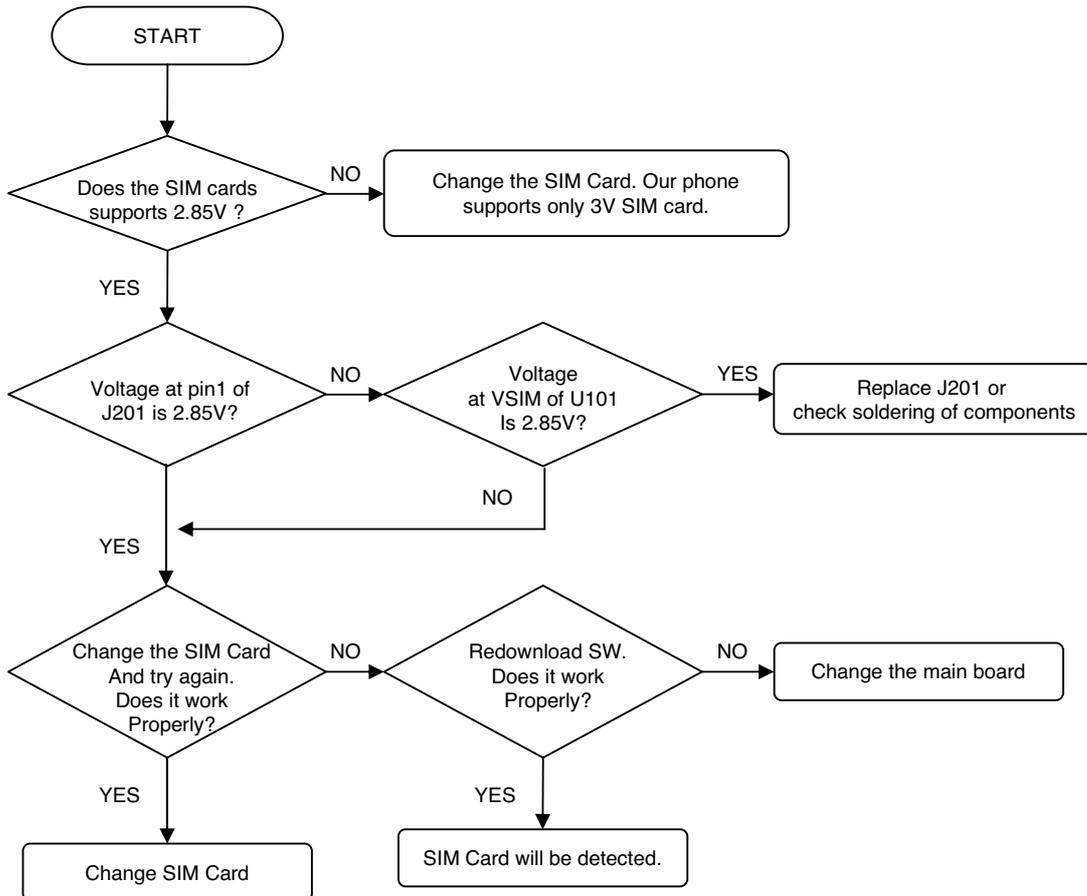

## 4.10 Earphone Trouble

### TEST POINT




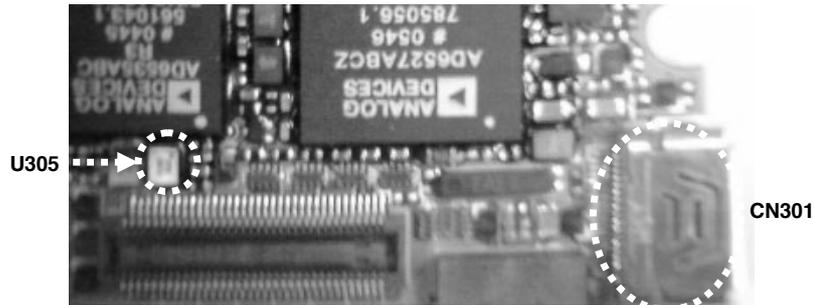



Figure 4-10

### CIRCUIT DIAGRAM

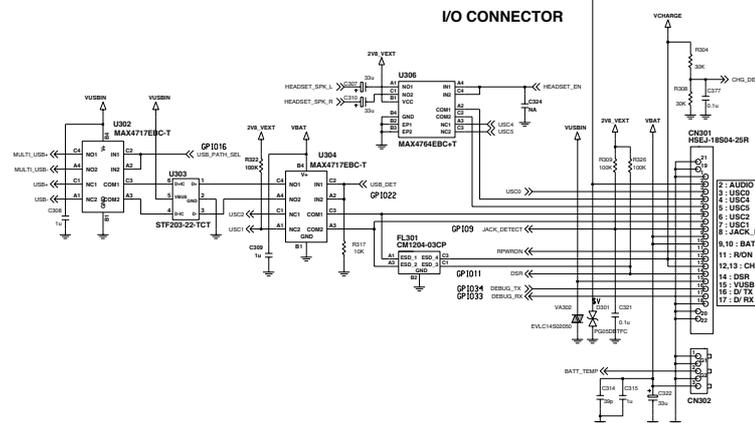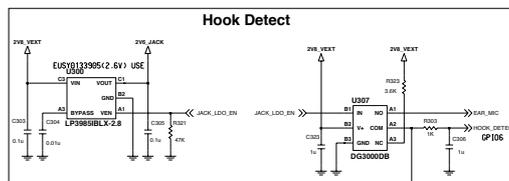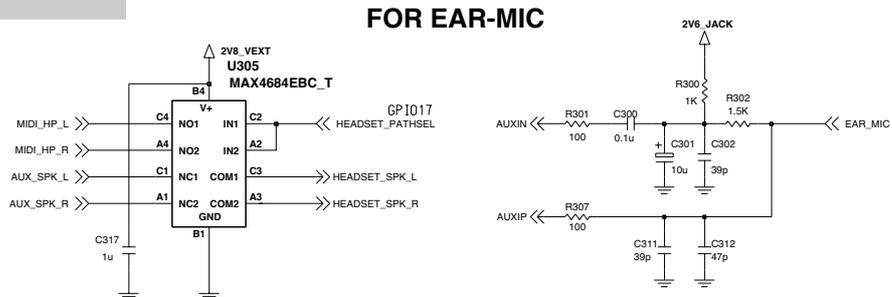

# 4. TROUBLE SHOOTING

## Checking Flow

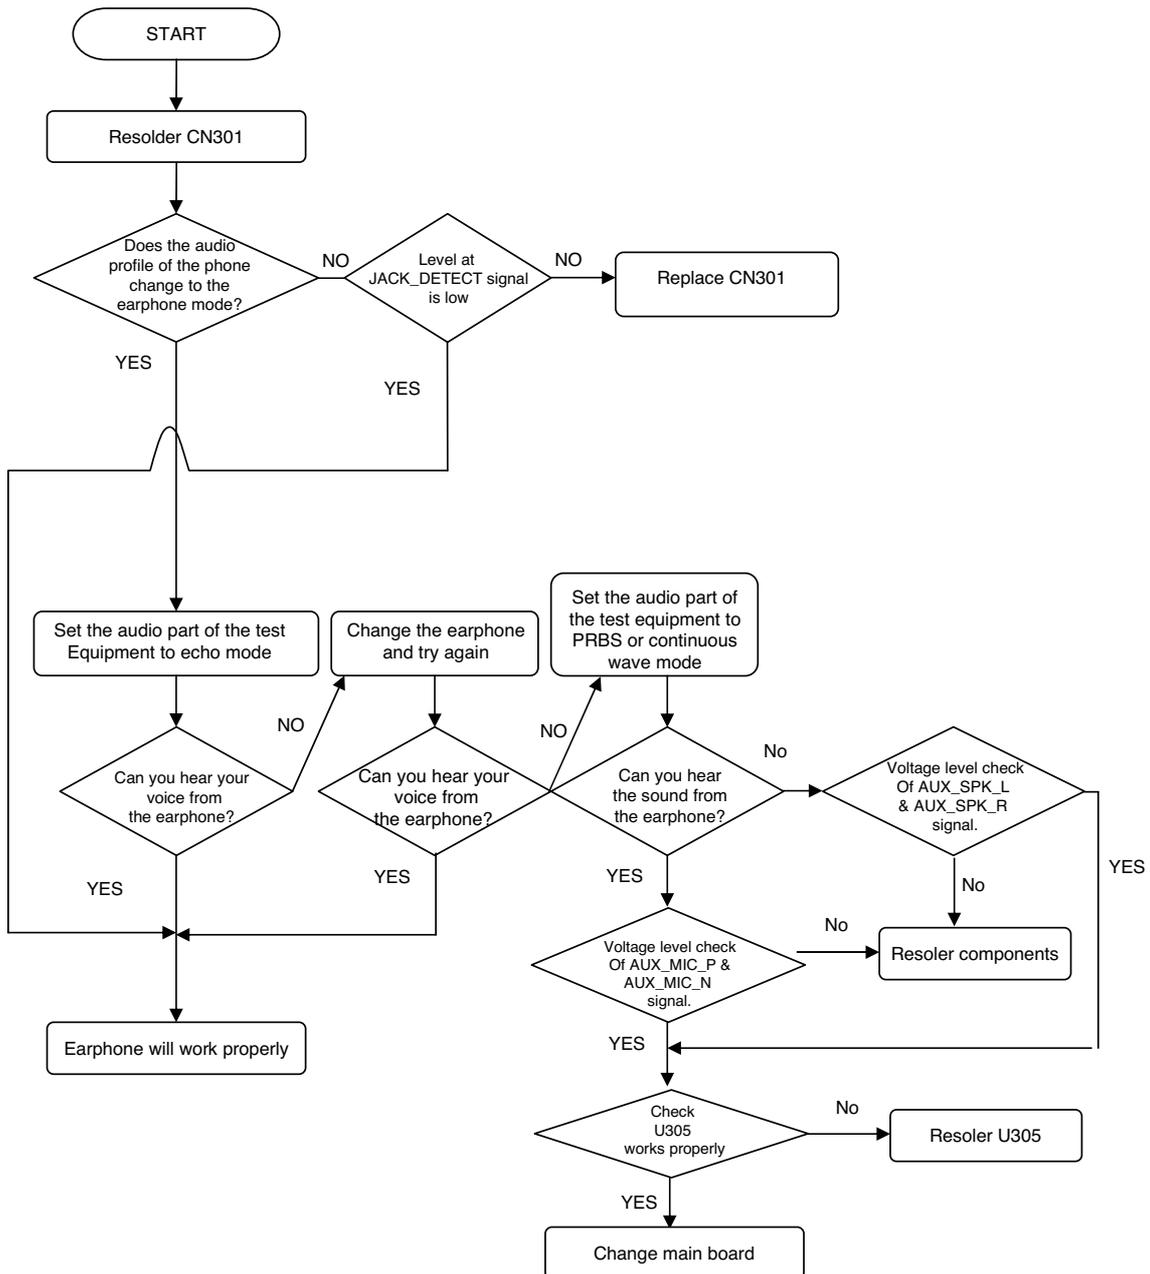

4.11 Receiver Trouble

TEST POINT


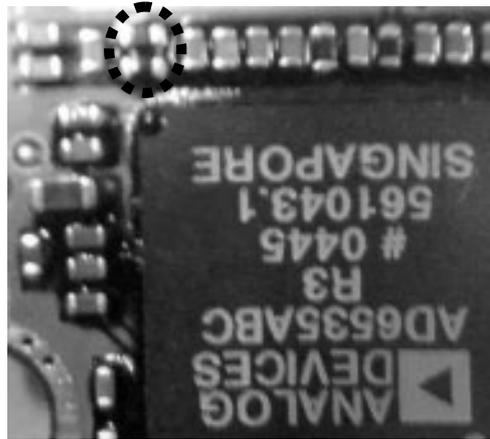


Figure 4-13


CIRCUIT DIAGRAM

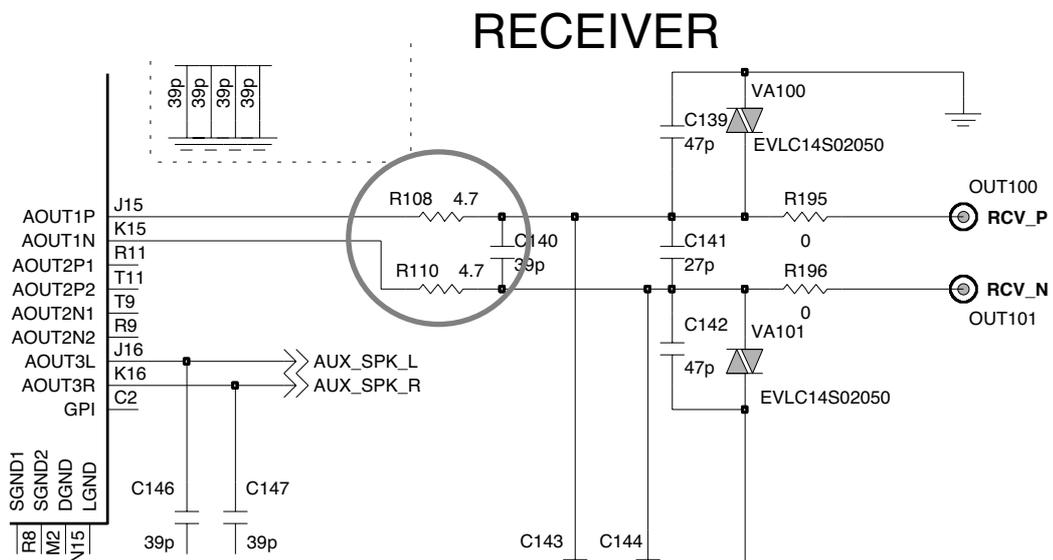

## 4. TROUBLE SHOOTING

### Checking Flow

SETTING : After initialize Agilent 8960, Test EGSM, DCS, PCS mode  
Set the property of audio as PRBS or continuous wave. Set the receiving volume of mobile as Max.

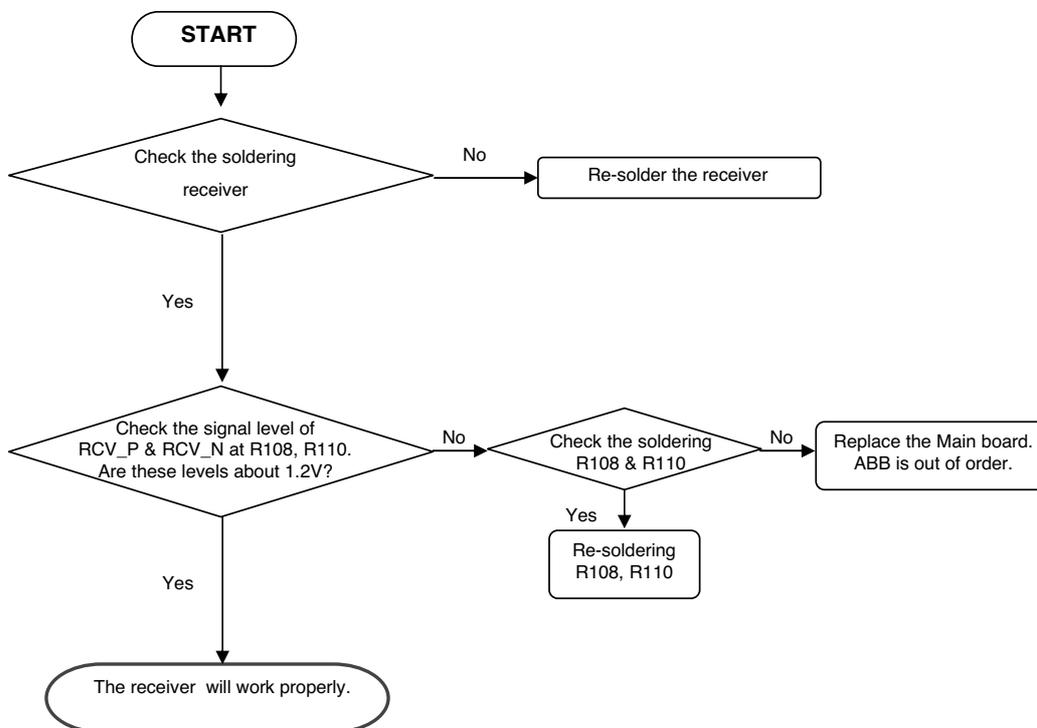

## 4.12 Microphone Trouble

### TEST POINT


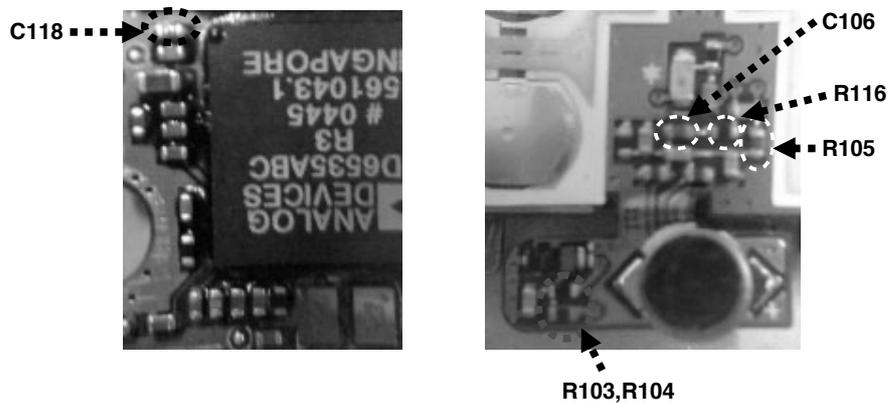


Figure 4-14


### CIRCUIT DIAGRAM

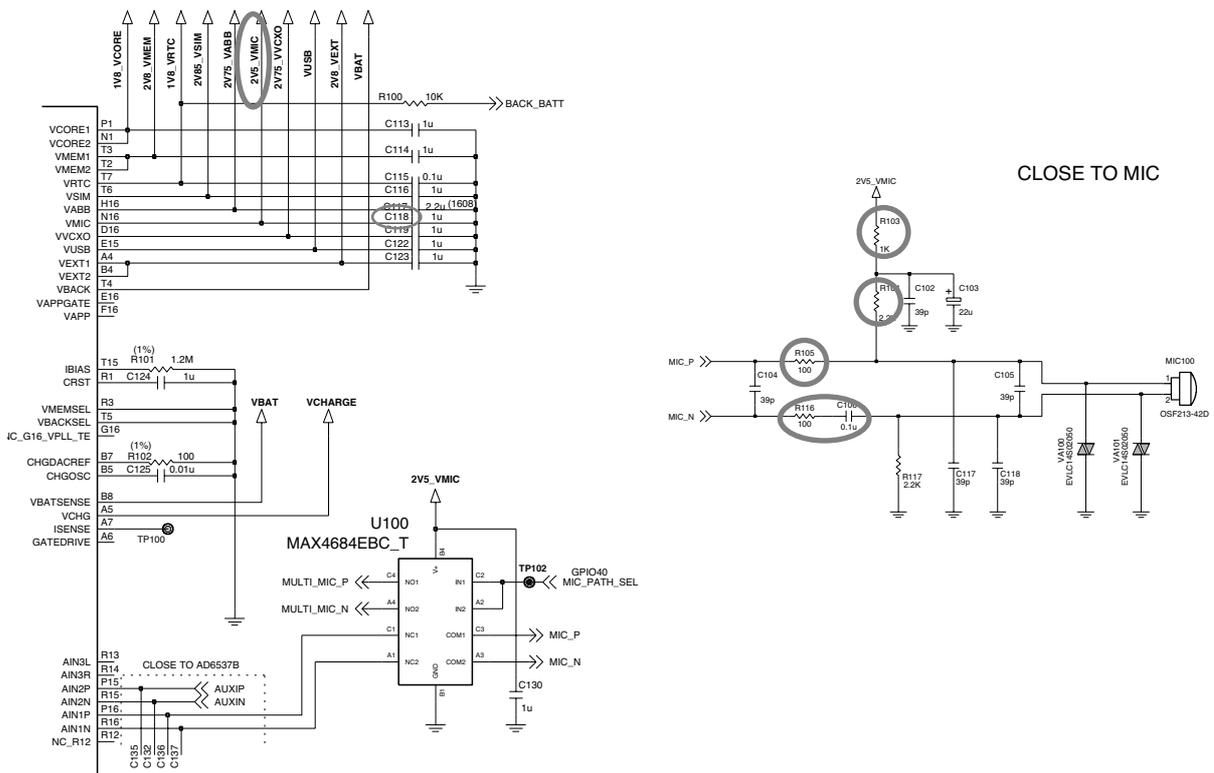

## 4. TROUBLE SHOOTING

### Checking Flow

SETTING : After initialize Agilent 8960, Test EGSM, DCS, PCS mode  
Set the property of audio as PRBS or continuous wave. Set the receiving volume of mobile as Max.

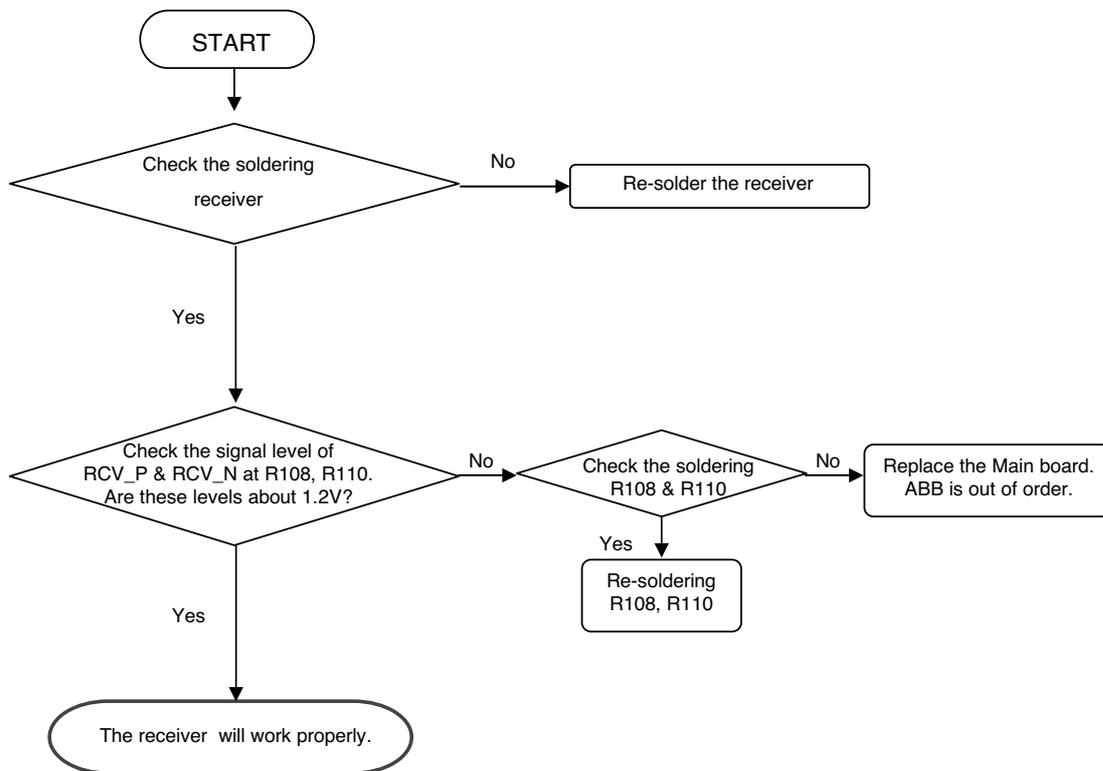

## 4.13 RTC Trouble

### TEST POINT


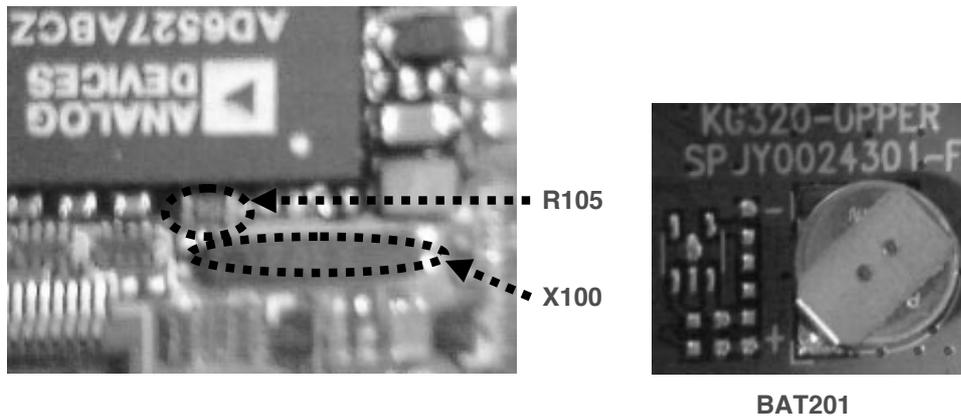


Figure 4-15


### CIRCUIT DIAGRAM

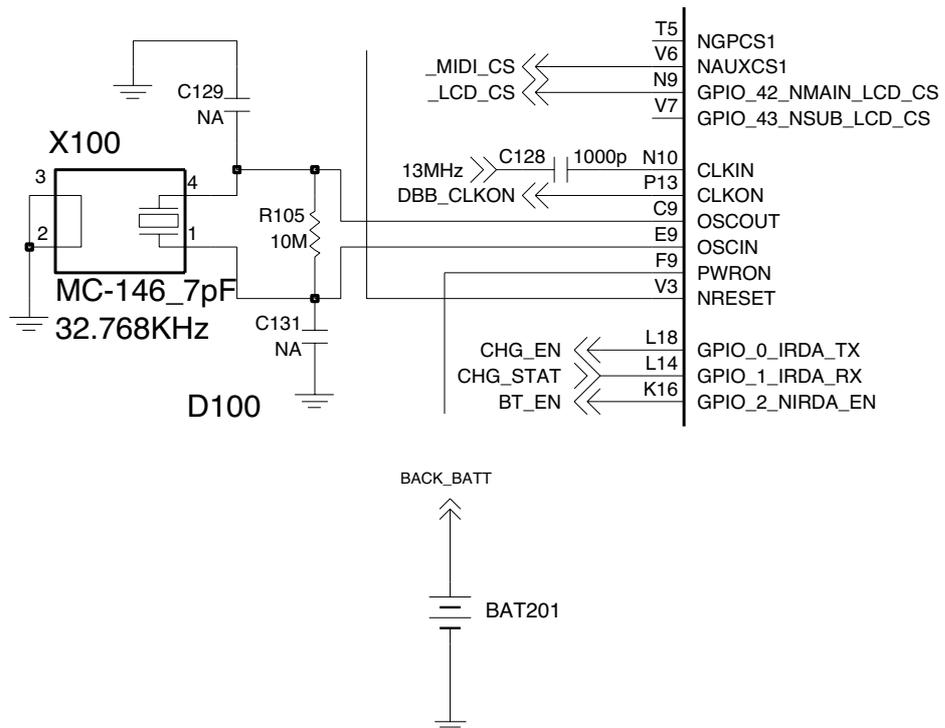

## 4. TROUBLE SHOOTING

---

### Checking Flow

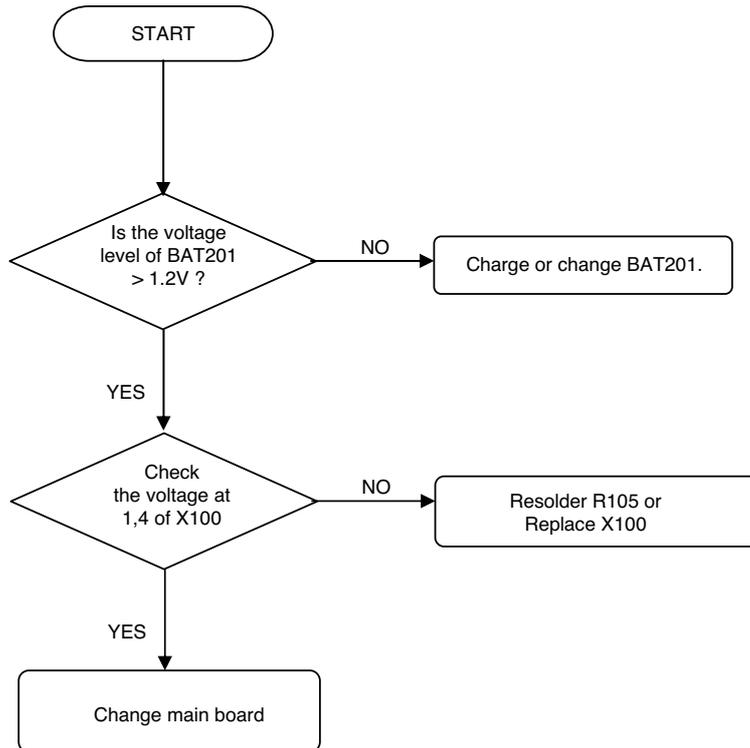

4.14 Camera and Flash Trouble


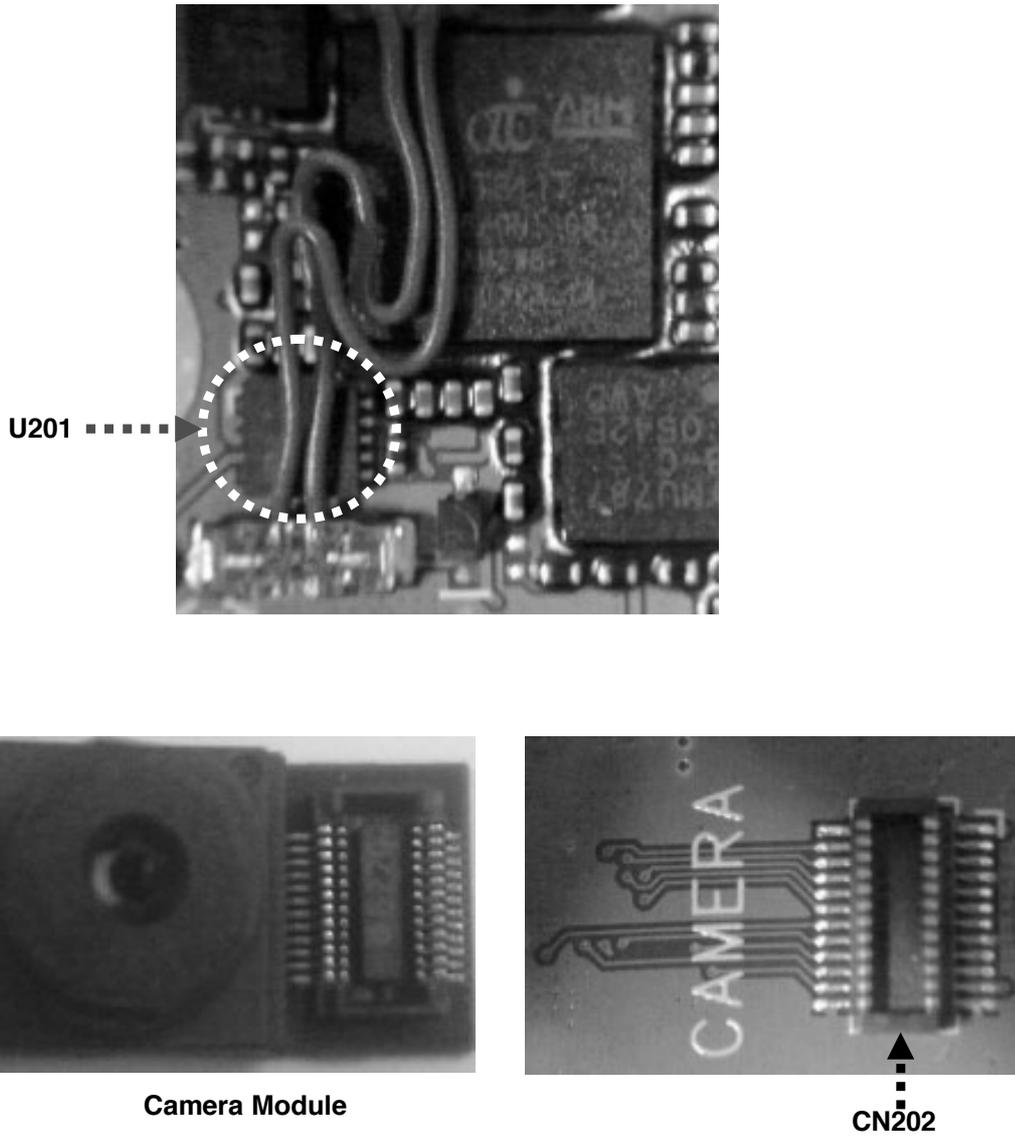


Figure 4-17



## Checking Flow

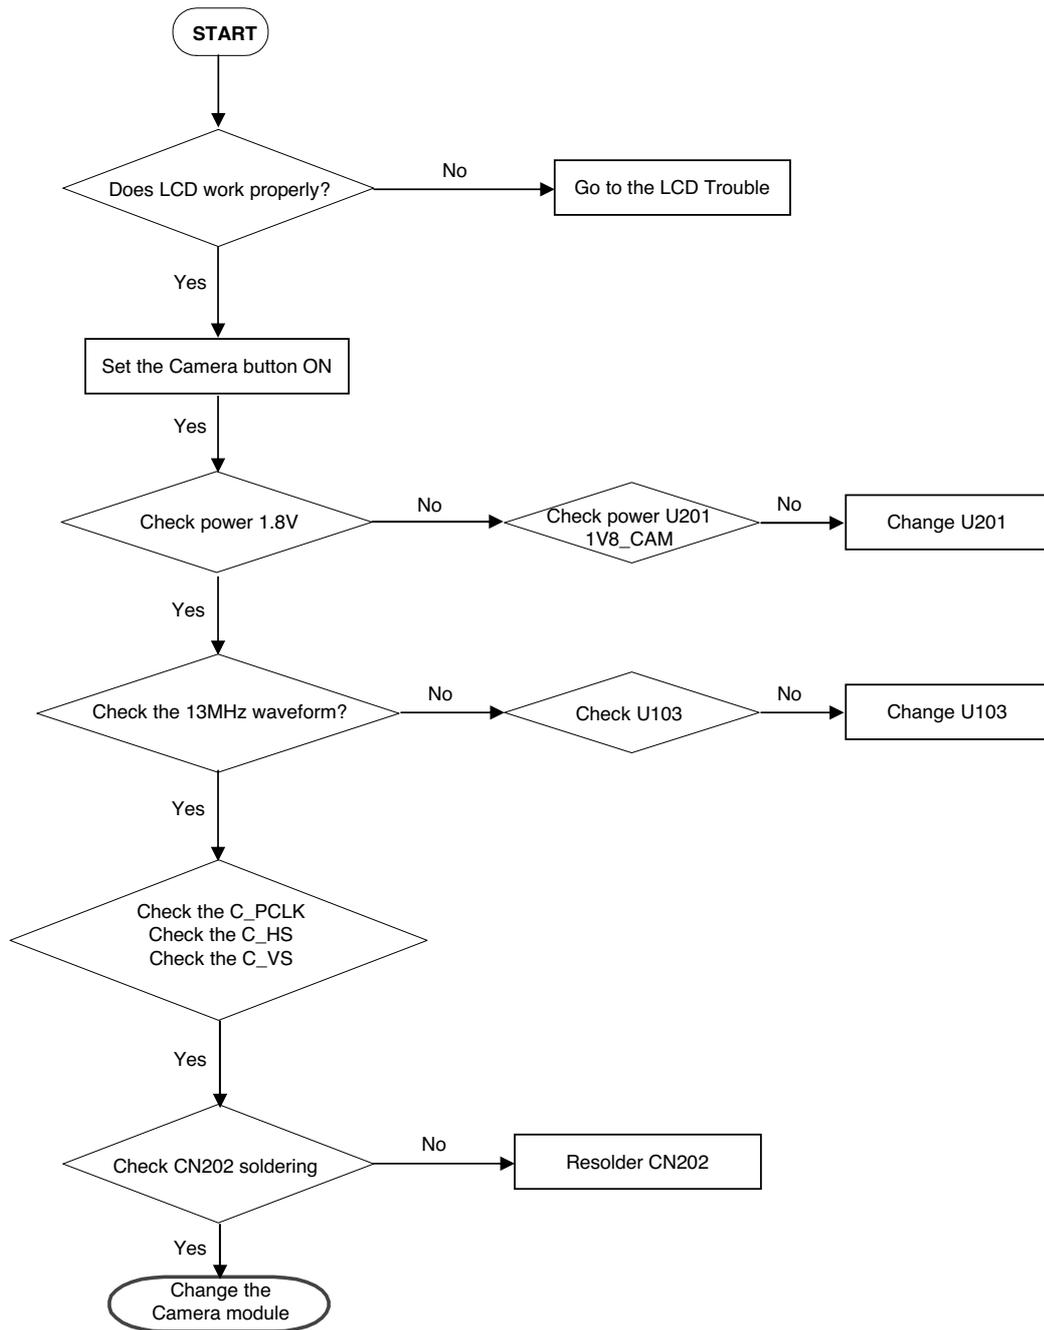

## 5. DOWNLOAD AND CALIBRATION


---

# 5. DOWNLOAD AND CALIBRATION

## 5.1 Download

### A. Download Setup

Figure 5-1 describes Download setup

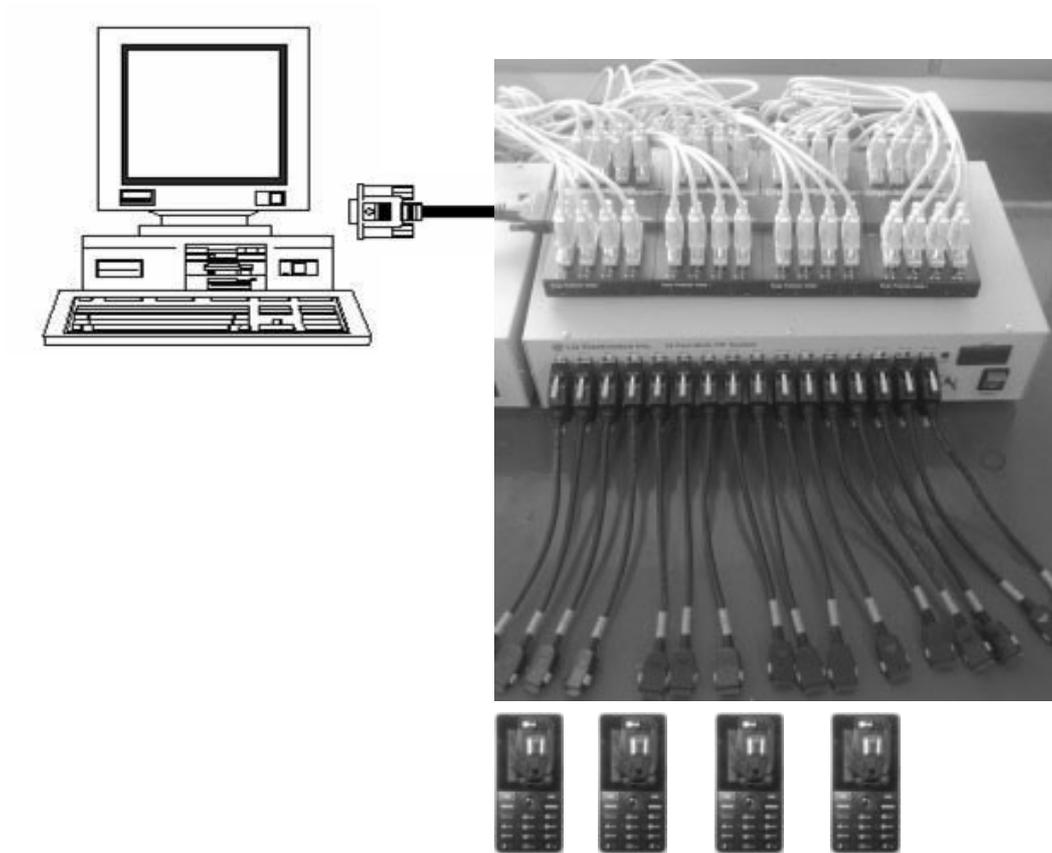


**Figure 5-1. Download Setup**


## 5. DOWNLOAD AND CALIBRATION

### B. Download Procedure

1. Run GSM Multi Download program and select Setting

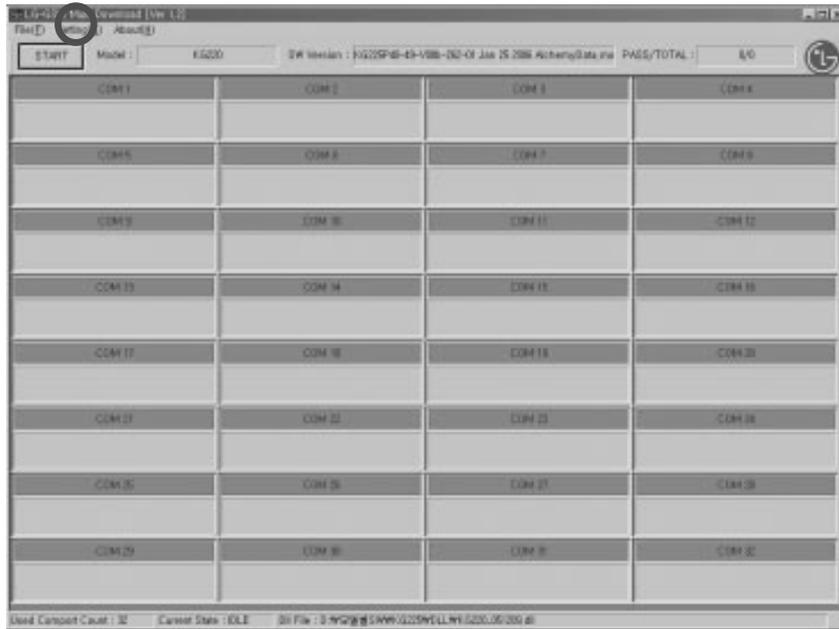


2. Select Configuration from the menu and you may see this window.

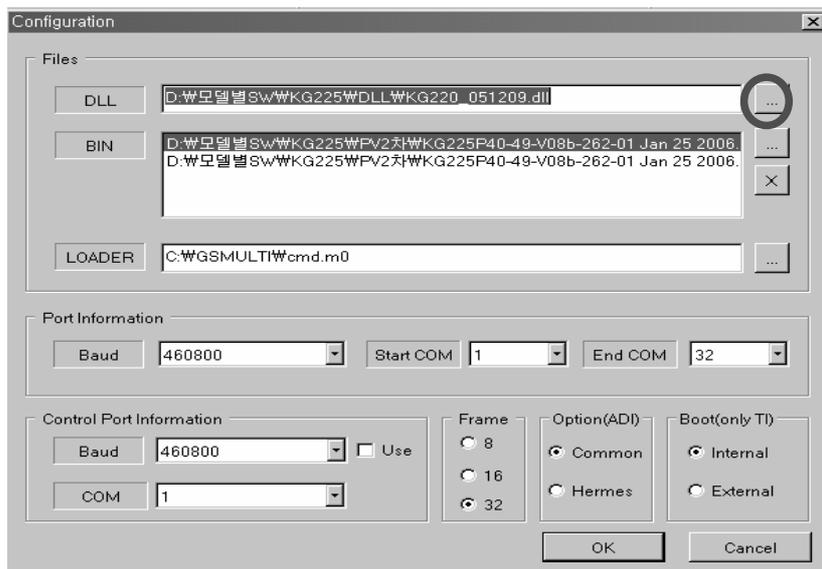

## 5. DOWNLOAD AND CALIBRATION


3. Press  key to select DLL file and press Open

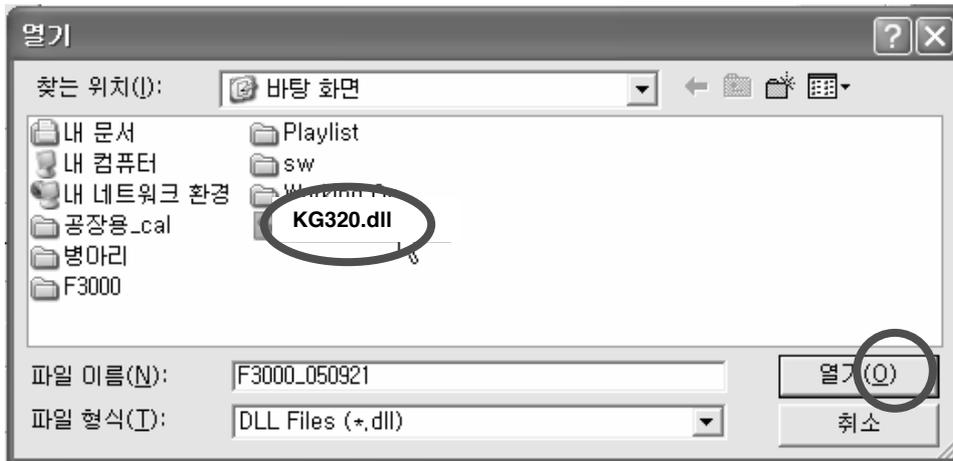

4. Press  key to select the mot files


5. Select AlchemyData.mot and press open

6. Repeat step 4-5 to select CodeData.mot

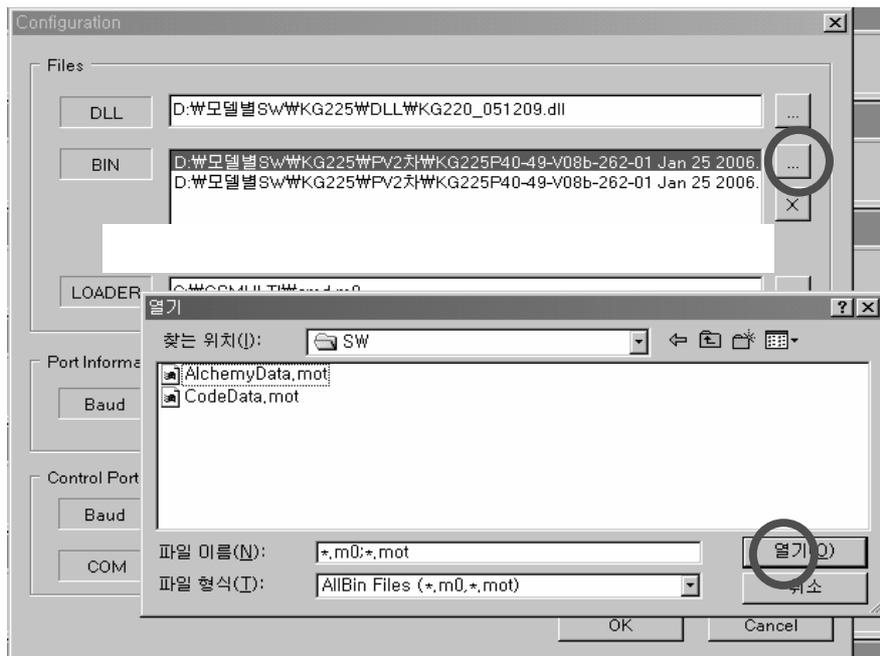

## 5. DOWNLOAD AND CALIBRATION

7. Check if the ADI option is set to Hermes
8. Press OK to end Configuration

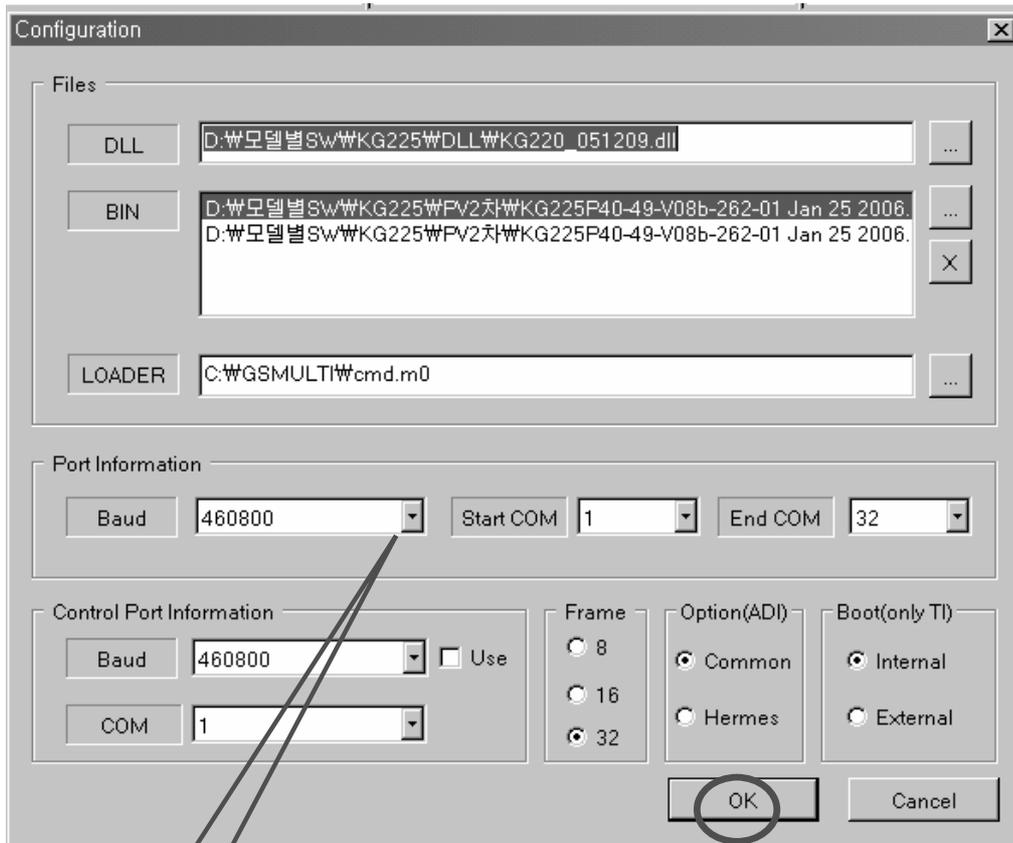


## 5. DOWNLOAD AND CALIBRATION

---

9. Press START to execute download


10. Once downloading is started, press STOP button to keep from re-downloading after downloading is completed.

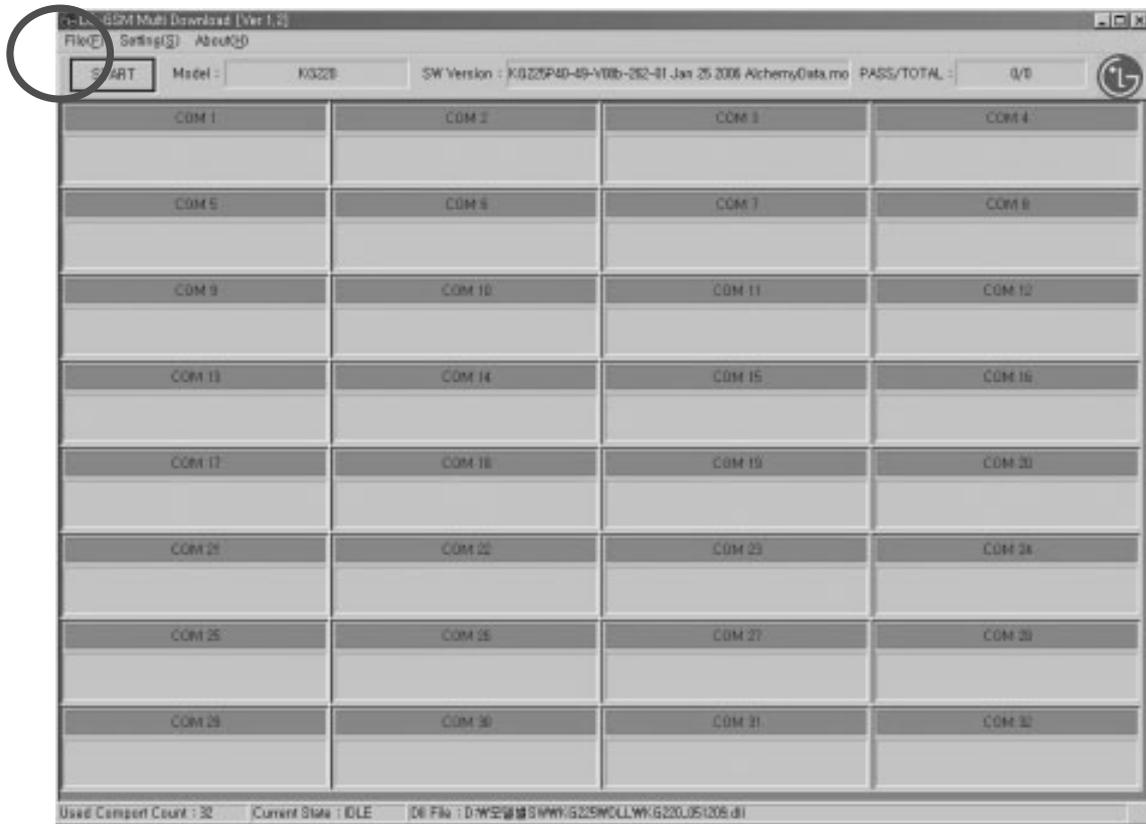






# 7. CIRCUIT DIAGRAM

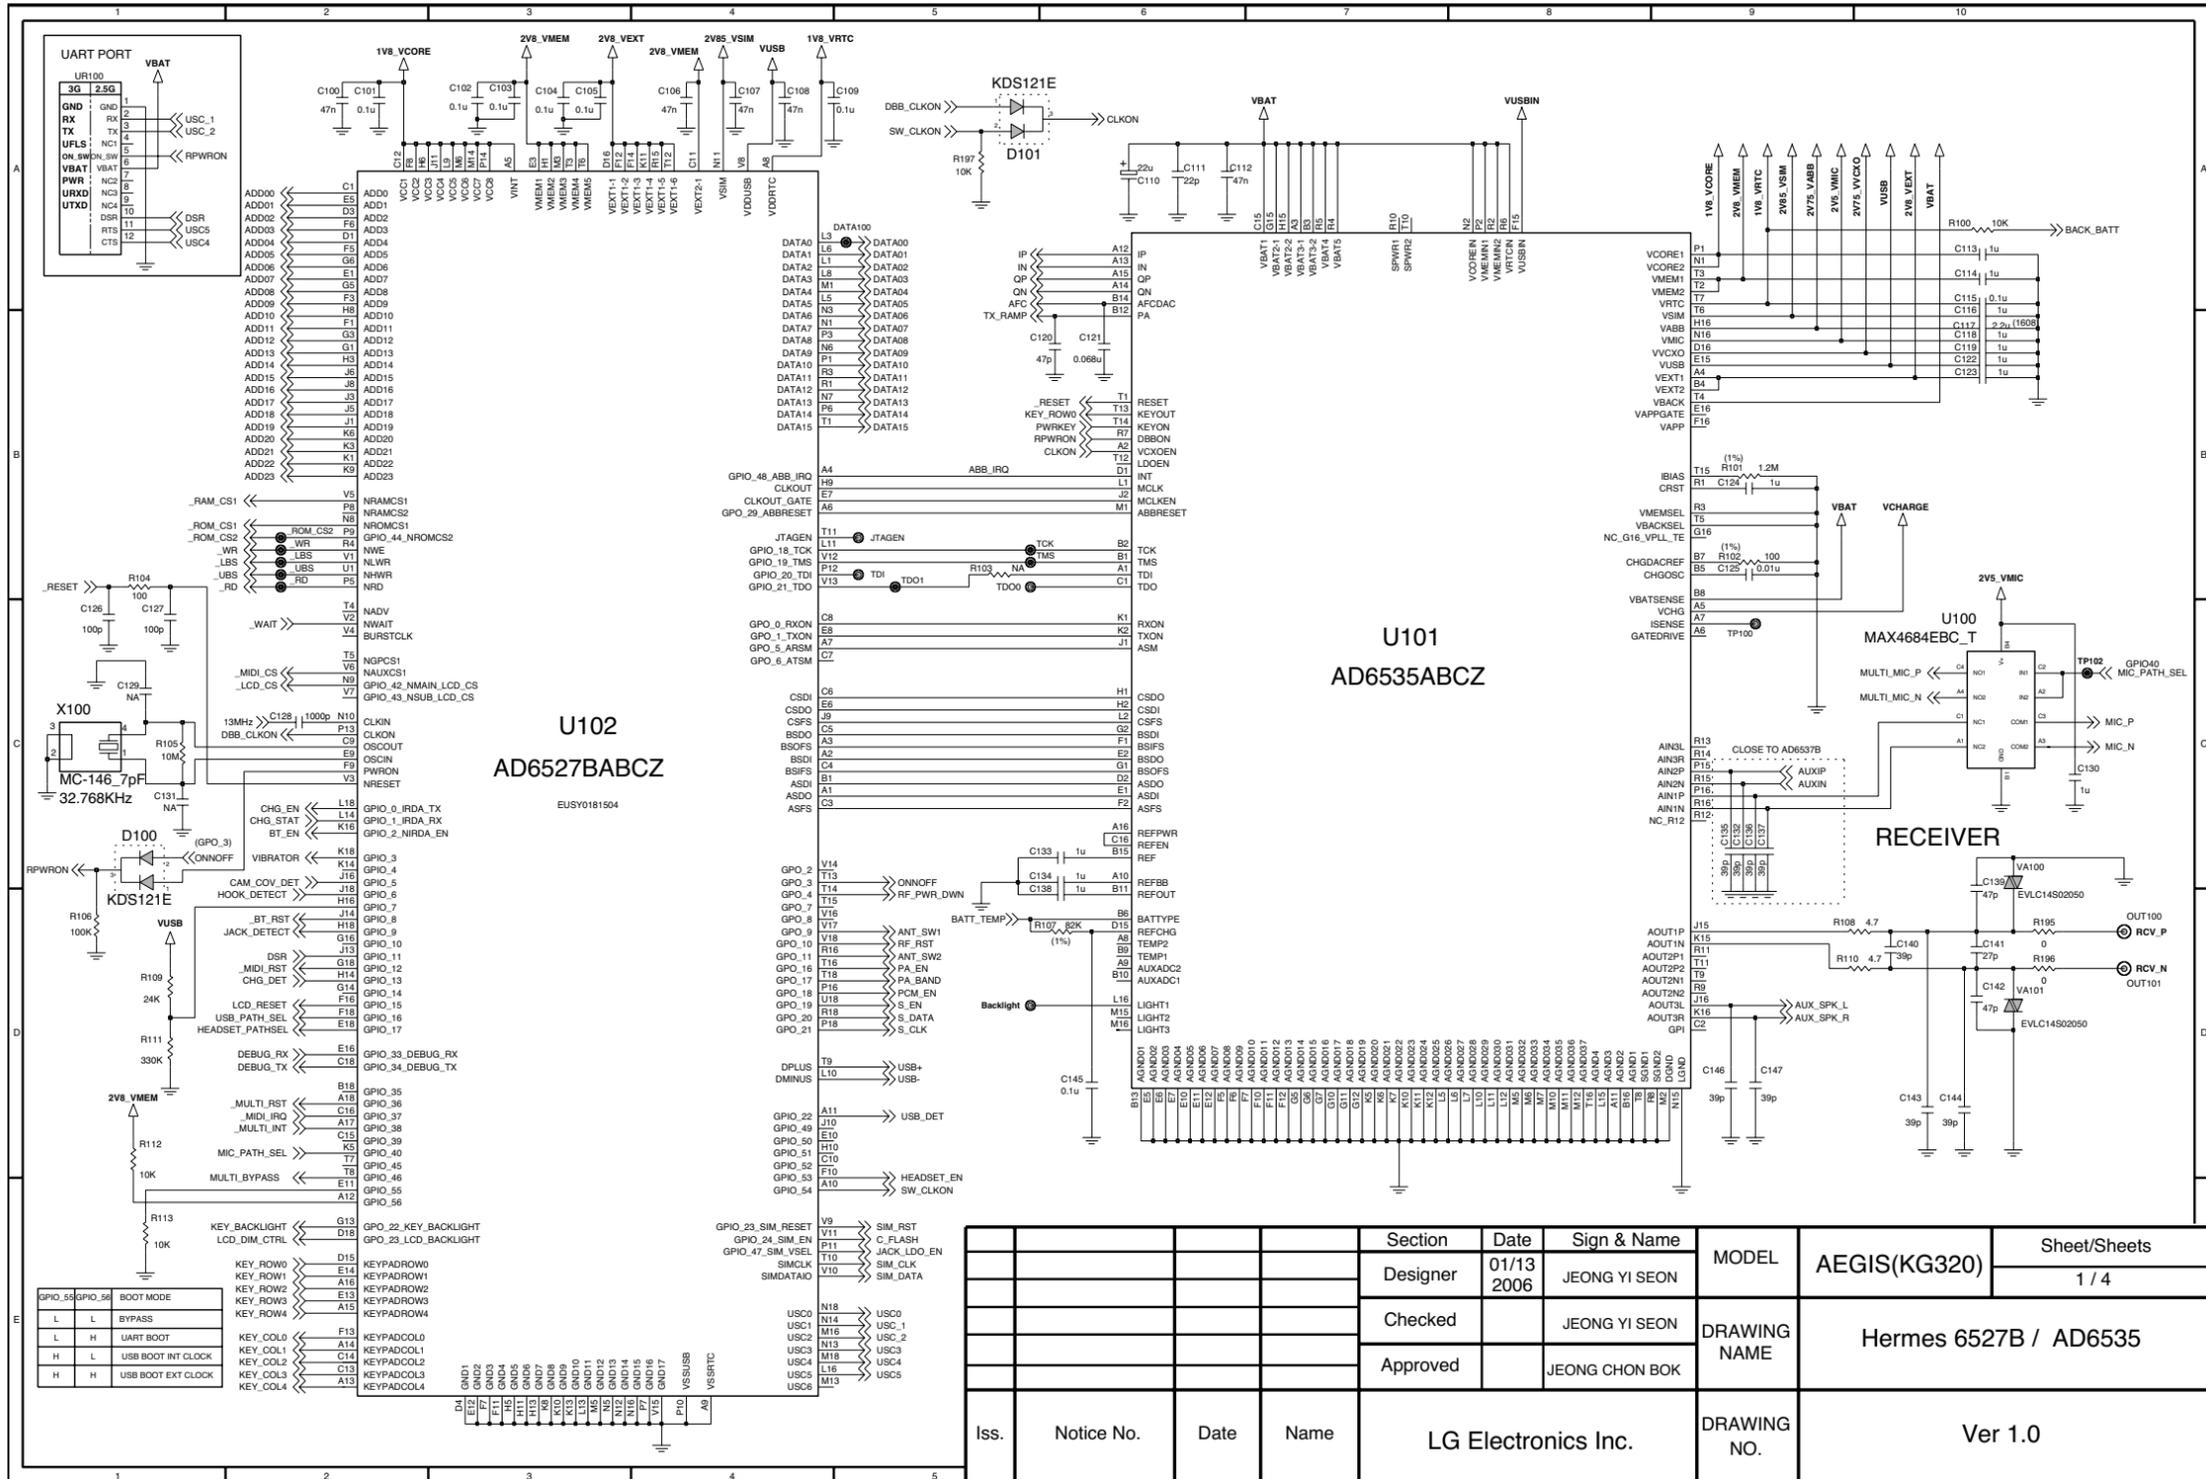

LGIC(42)-A-5505-10.01


LG Electronics Inc.

# 7. CIRCUIT DIAGRAM

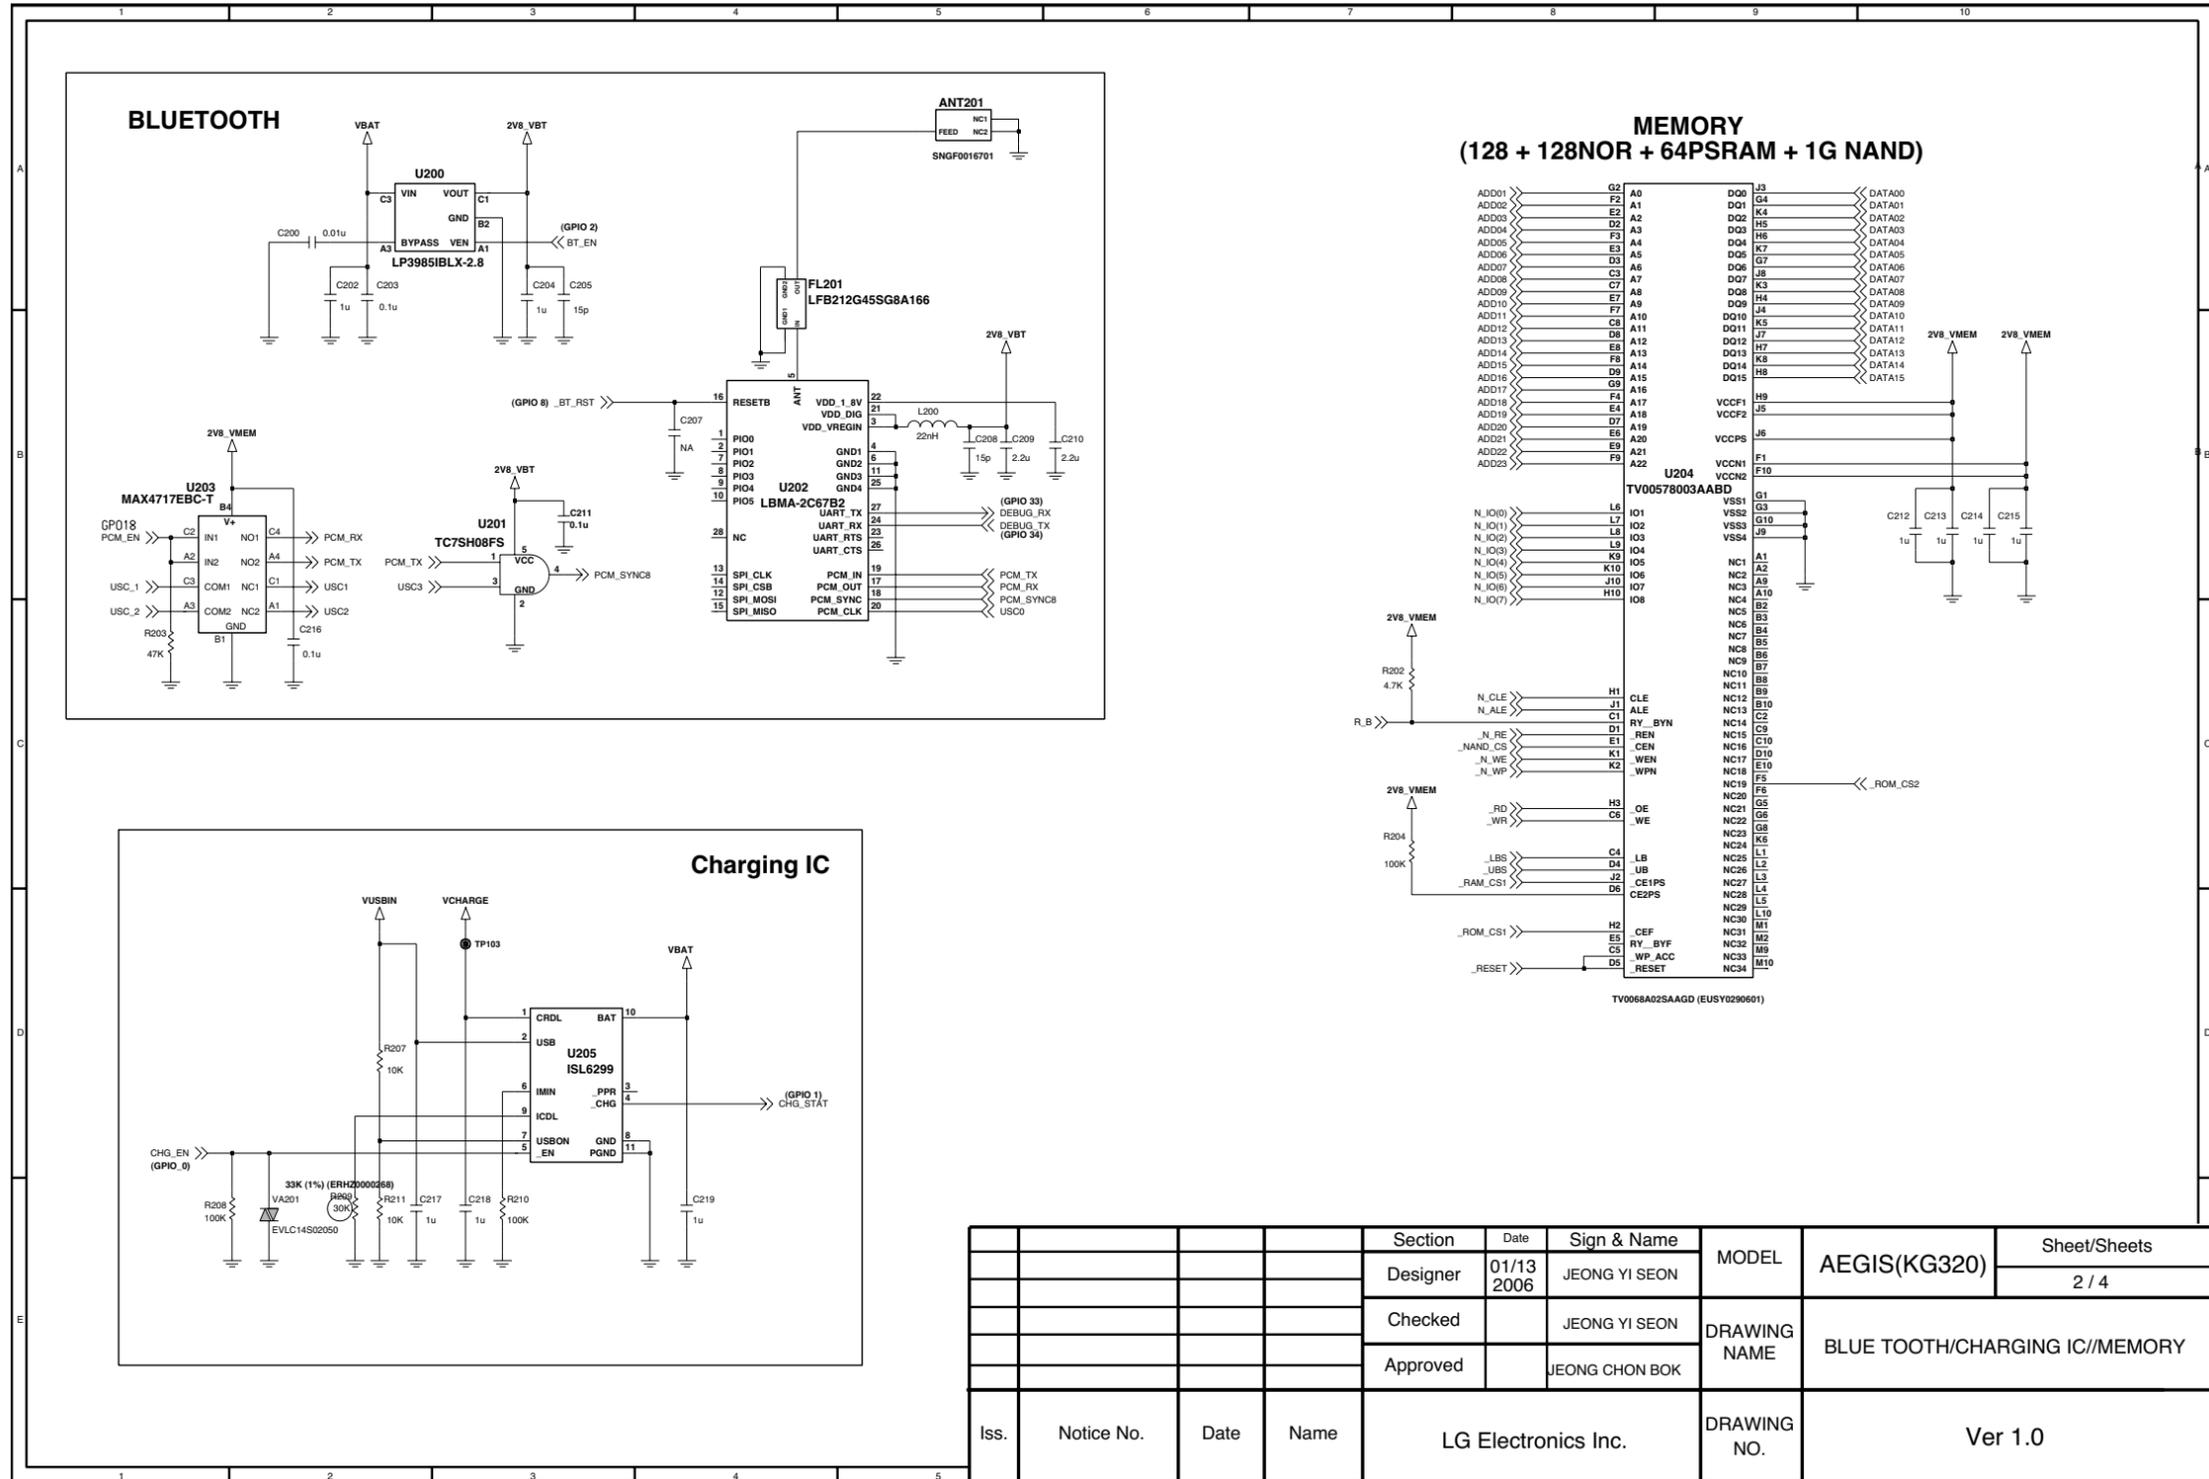


Section	Date	Sign & Name	MODEL	Sheet/Sheets
Designer	01/13 2006	JEONG YI SEON	AEGIS(KG320)	2 / 4
Checked		JEONG YI SEON	DRAWING NAME	BLUE TOOTH/CHARGING IC//MEMORY
Approved		JEONG CHON BOK		
Iss.	Notice No.	Date	Name	LG Electronics Inc.
				DRAWING NO.
				Ver 1.0

# 7. CIRCUIT DIAGRAM

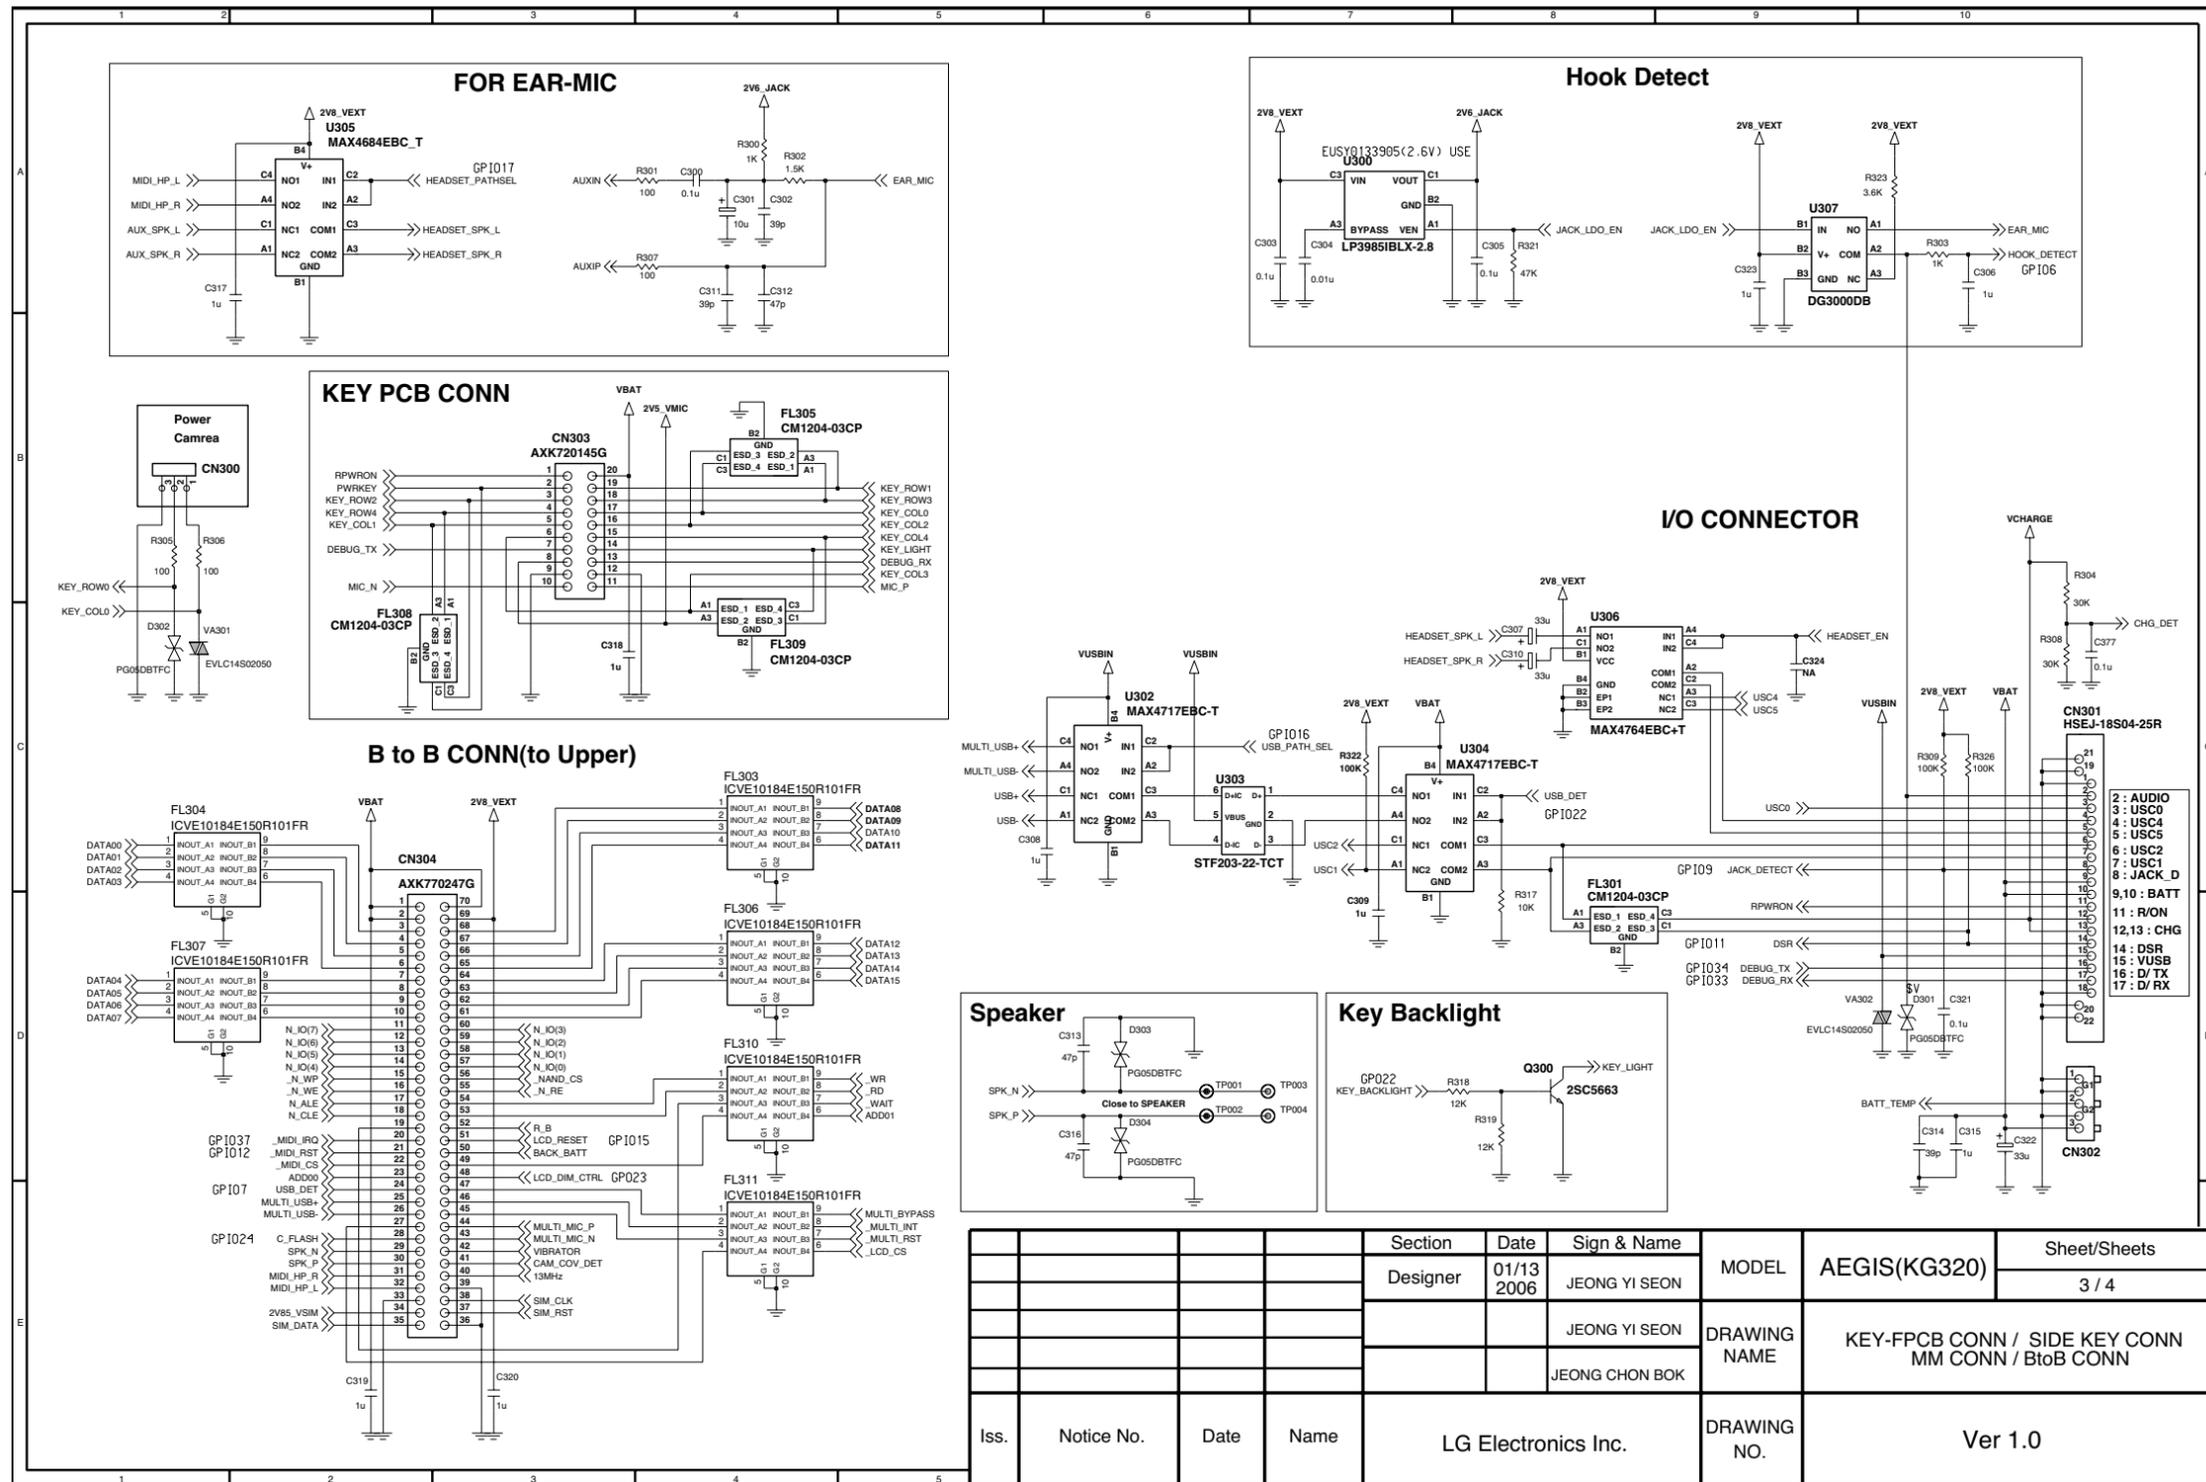

				Section	Date	Sign & Name	MODEL	AEGIS(KG320)	Sheet/Sheets
				Designer	01/13 2006	JEONG YI SEON			
						JEONG YI SEON	DRAWING NAME	KEY-FPCB CONN / SIDE KEY CONN MM CONN / BtoB CONN	
						JEONG CHON BOK			
Iss.	Notice No.	Date	Name	LG Electronics Inc.			DRAWING NO.	Ver 1.0	


# 7. CIRCUIT DIAGRAM

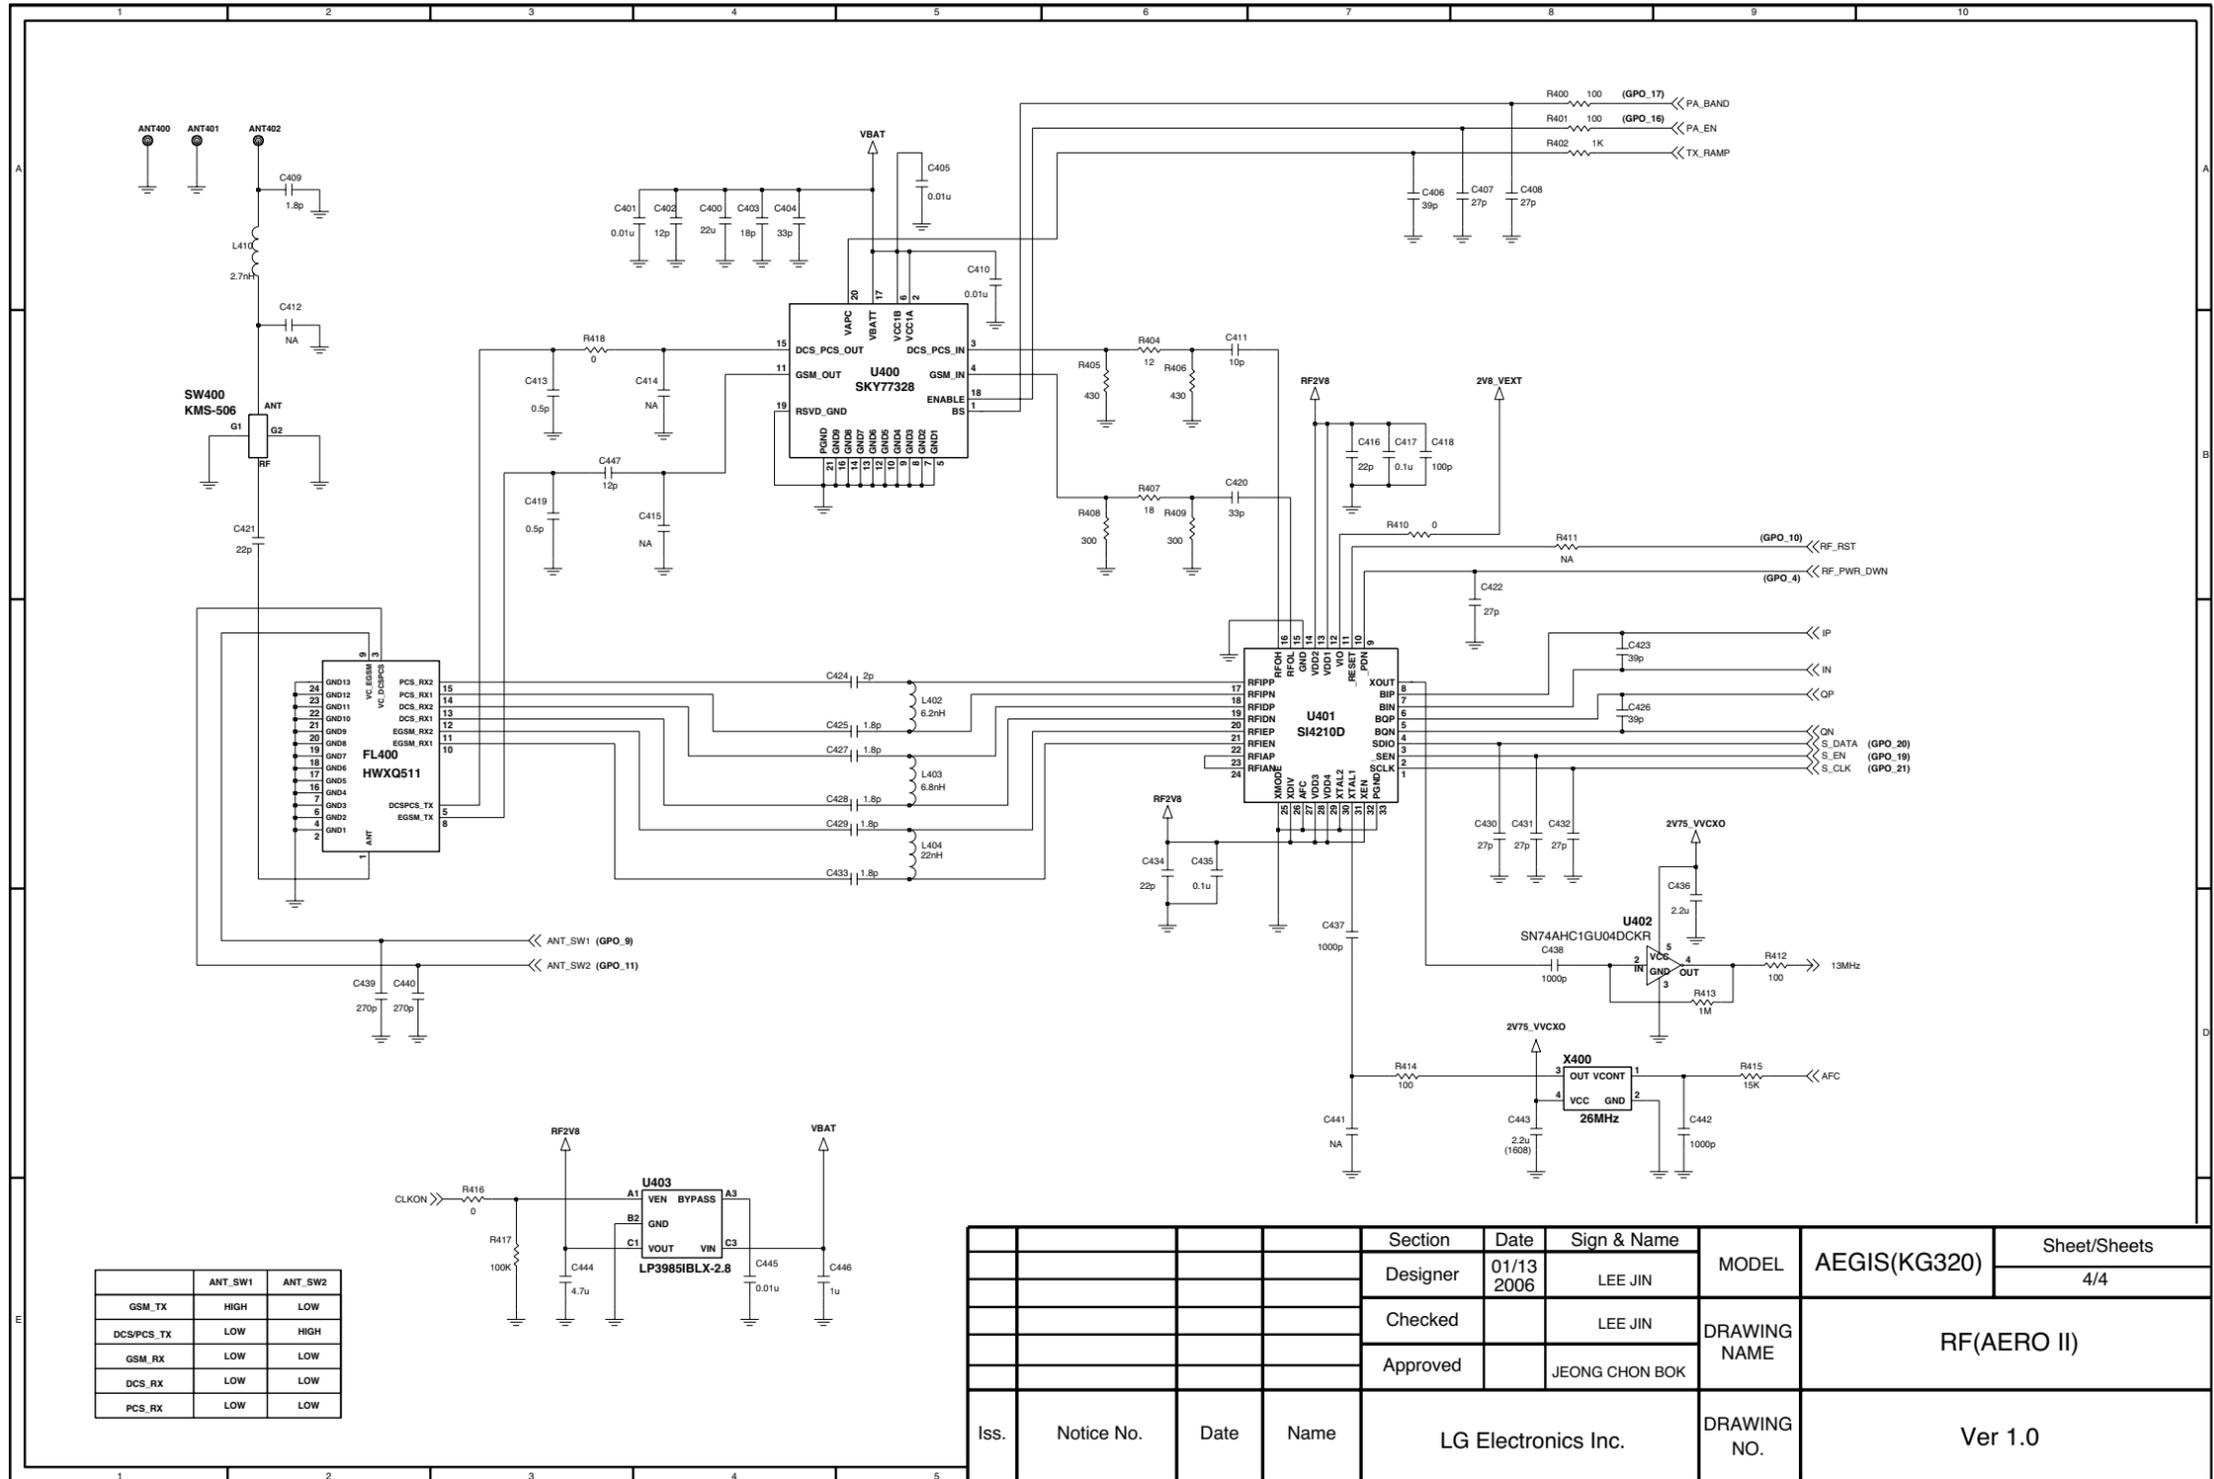

LGIC(42)-A-5505-10:01


LG Electronics Inc.

# 7. CIRCUIT DIAGRAM

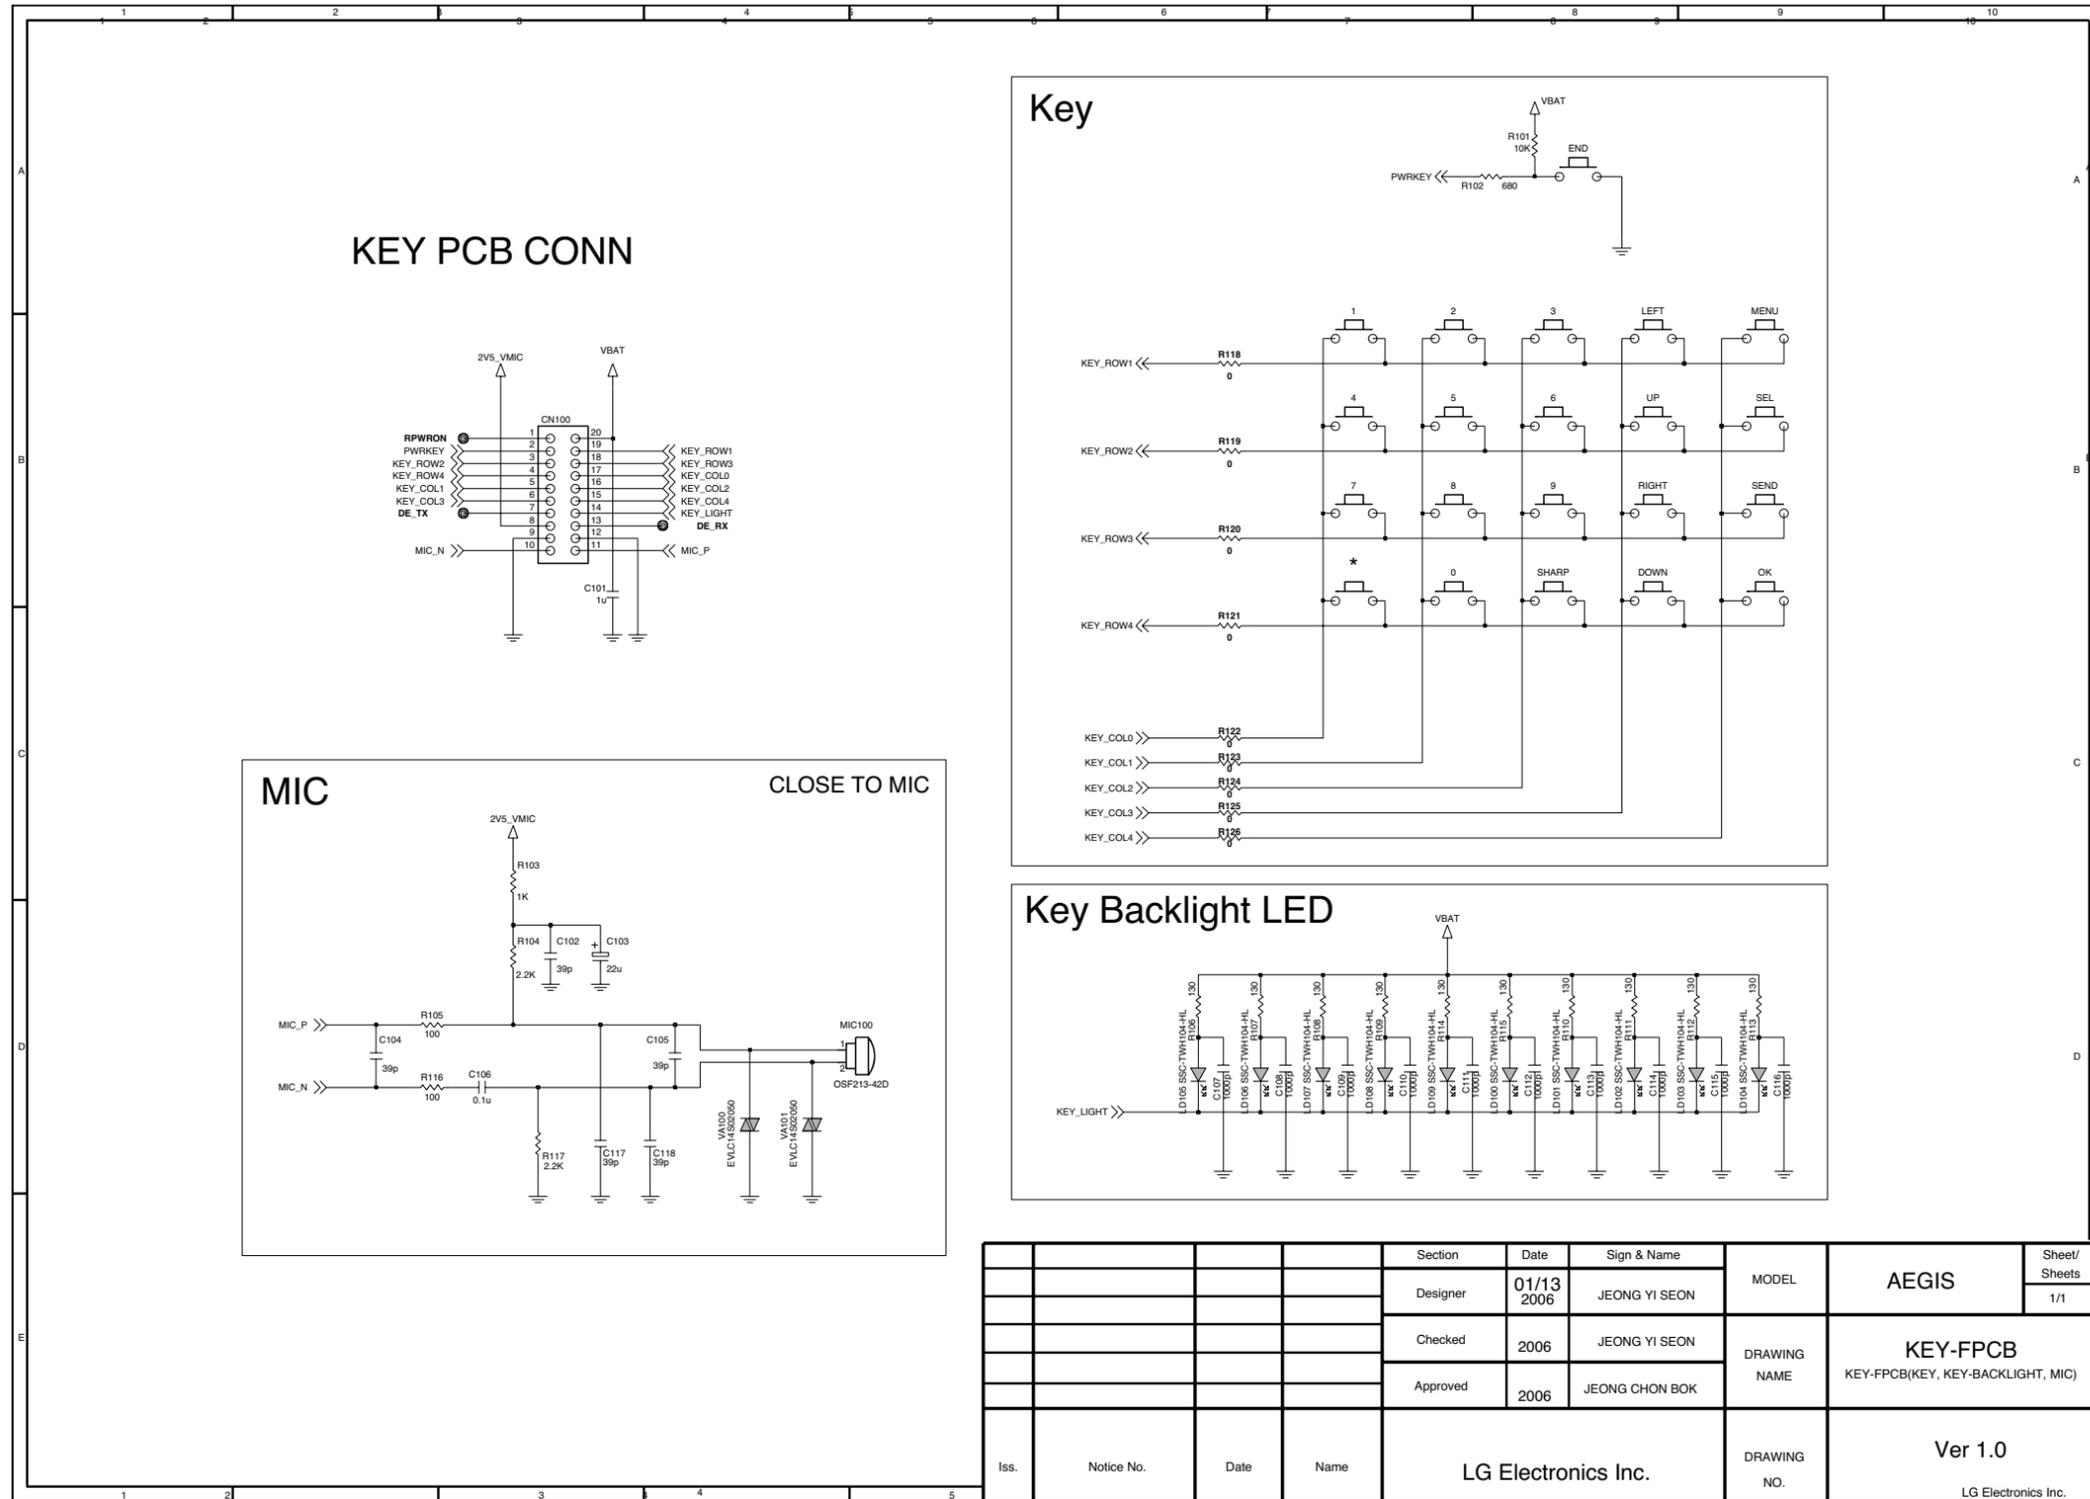


LGIC(42)-A-5505-10:01

# 7. CIRCUIT DIAGRAM

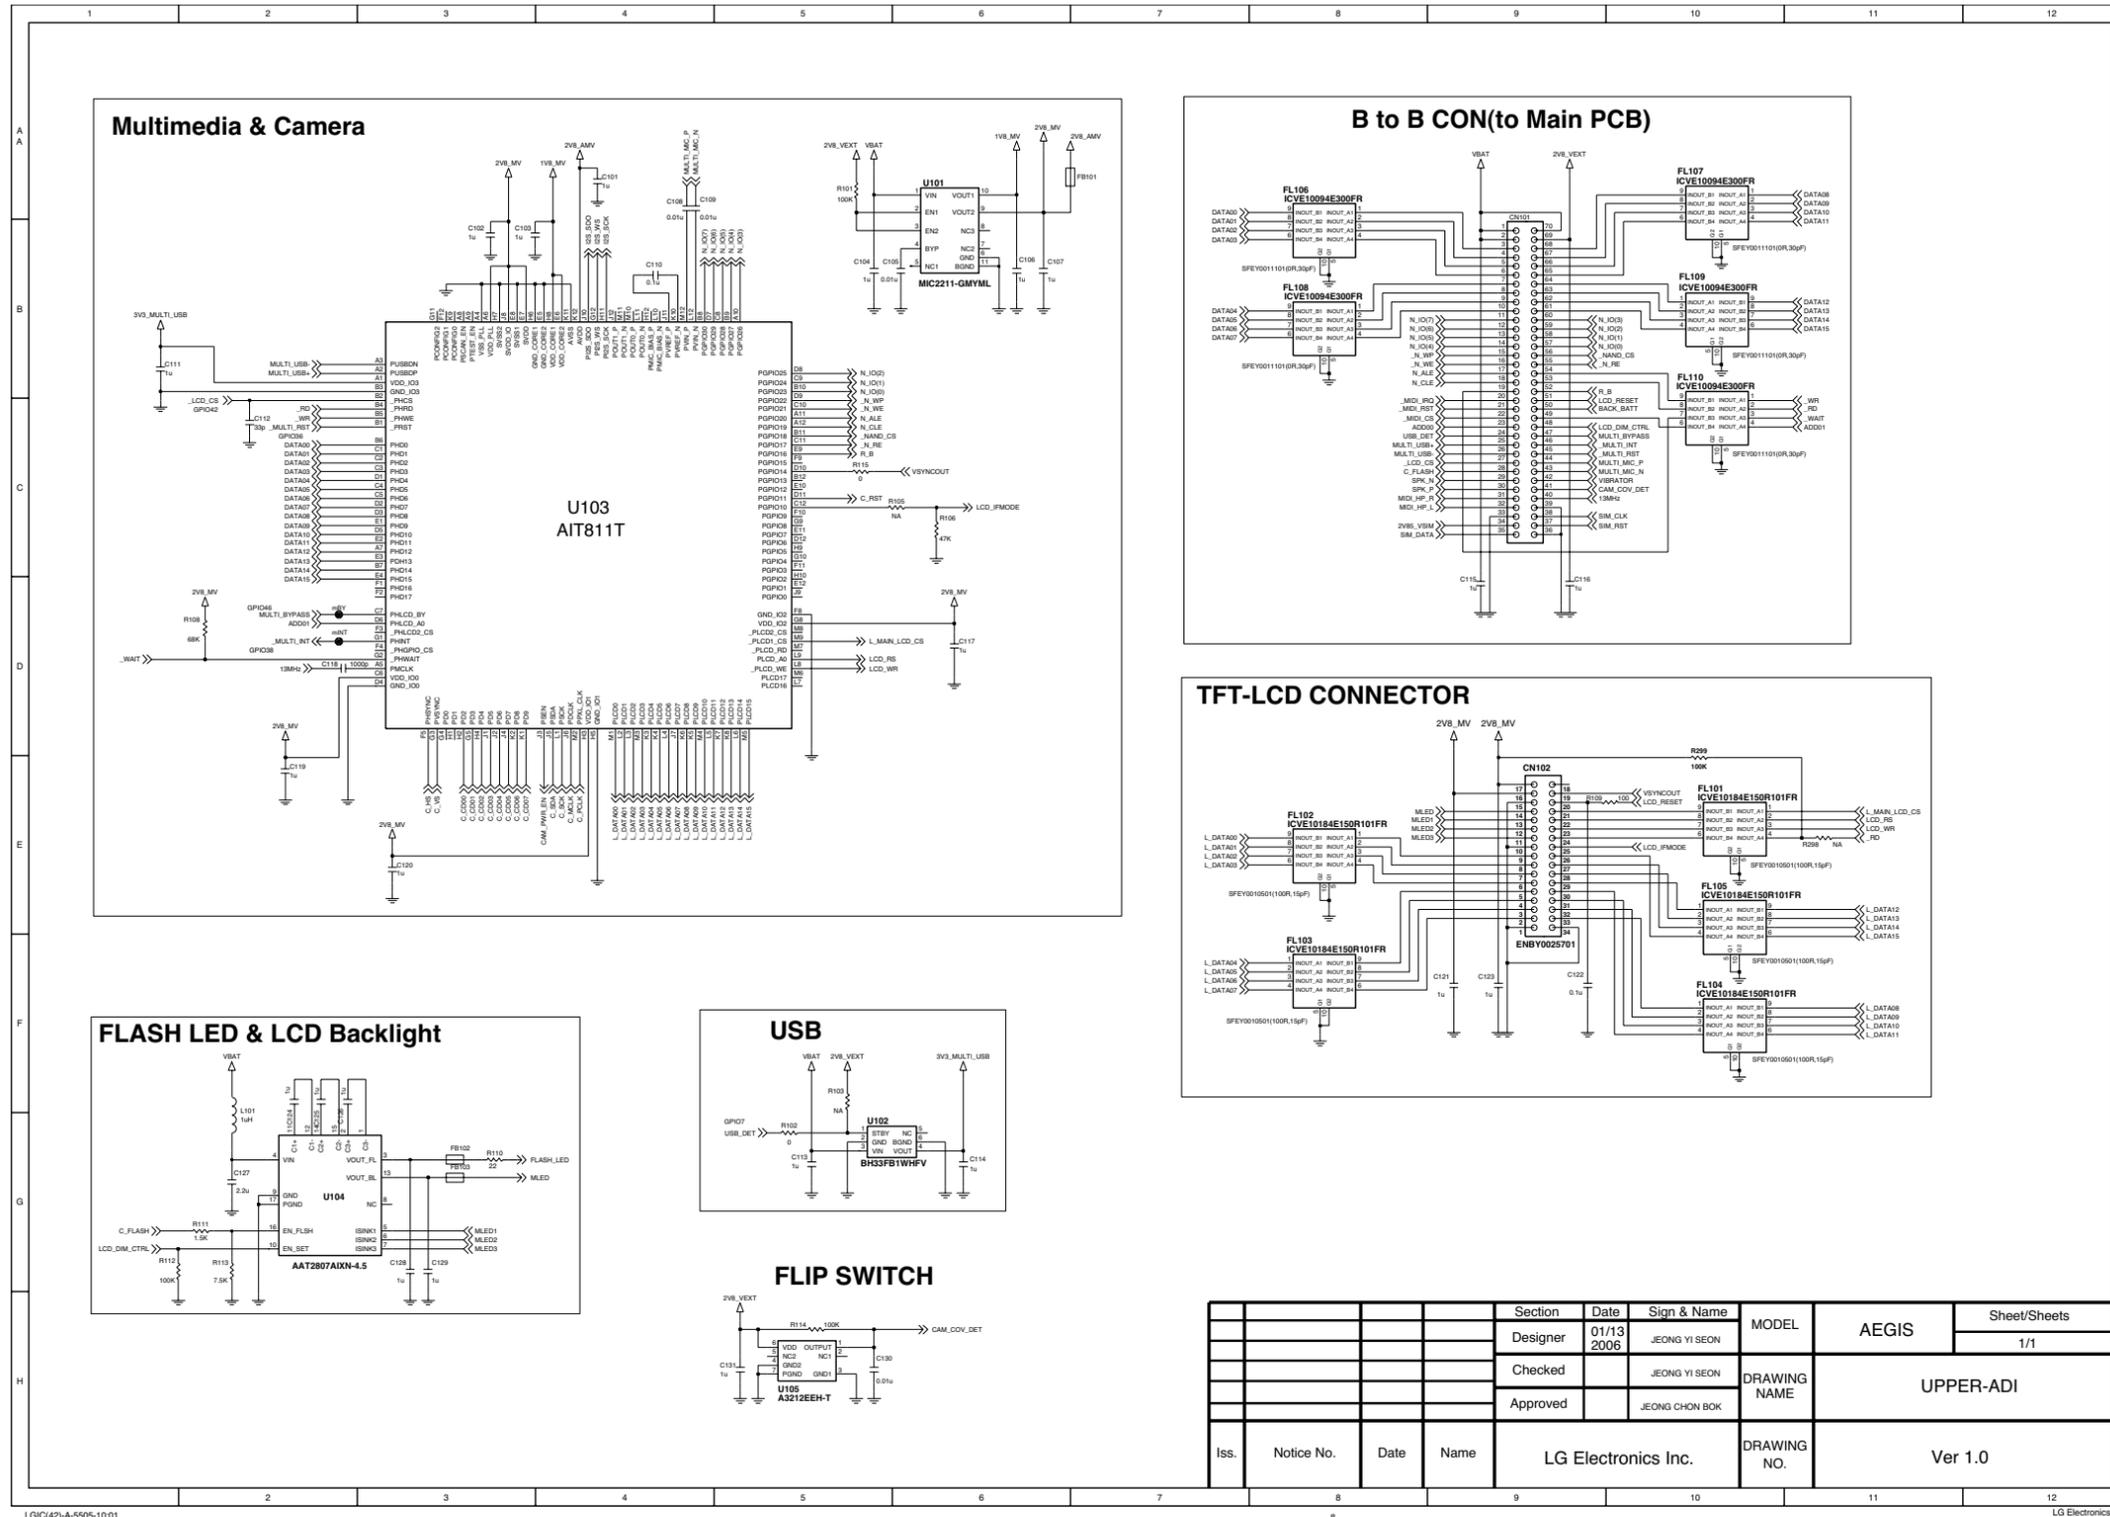


Section	Date	Sign & Name	MODEL	AEGIS	Sheet/Sheets
Designer	01/13 2008	JEONG YI SEON			1/1
Checked		JEONG YI SEON	DRAWING NAME	UPPER-ADI	
Approved		JEONG CHON BOK			
Iss.	Notice No.	Date	Name	LG Electronics Inc.	DRAWING NO. Ver 1.0

# 7. CIRCUIT DIAGRAM

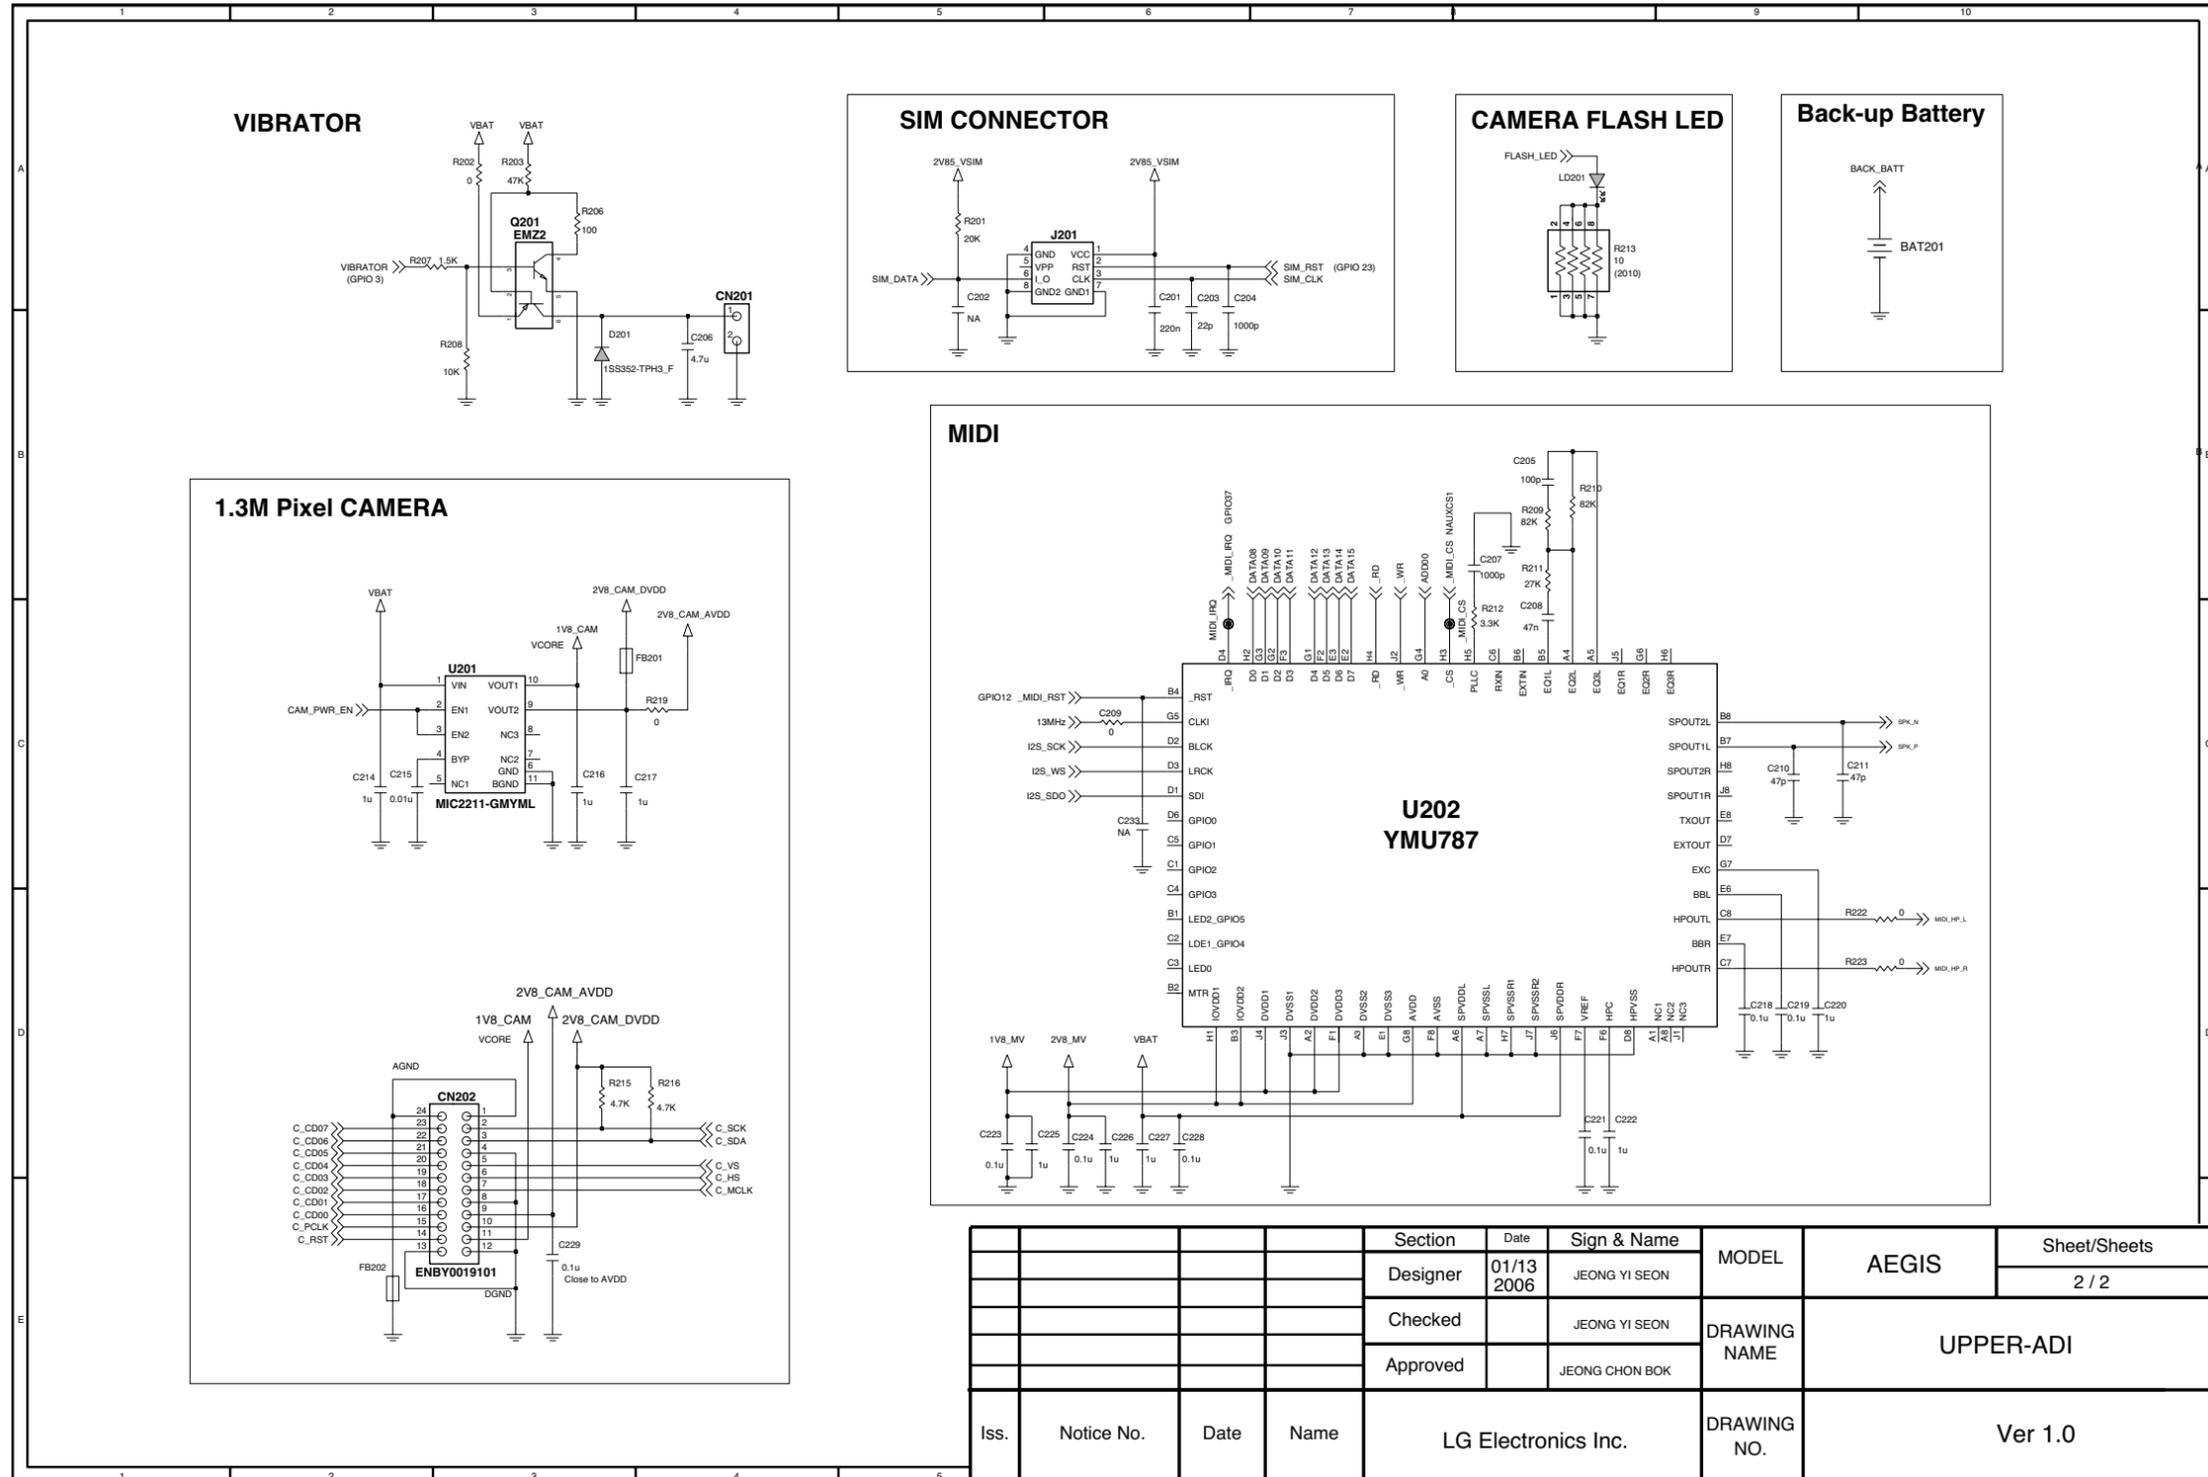


Section	Date	Sign & Name	MODEL	AEGIS	Sheet/Sheets
Designer	01/13 2006	JEONG YI SEON			2 / 2
Checked		JEONG YI SEON	DRAWING NAME	UPPER-ADI	
Approved		JEONG CHON BOK			
Iss.	Notice No.	Date	Name	DRAWING NO.	Ver 1.0

8. PCB LAYOUT

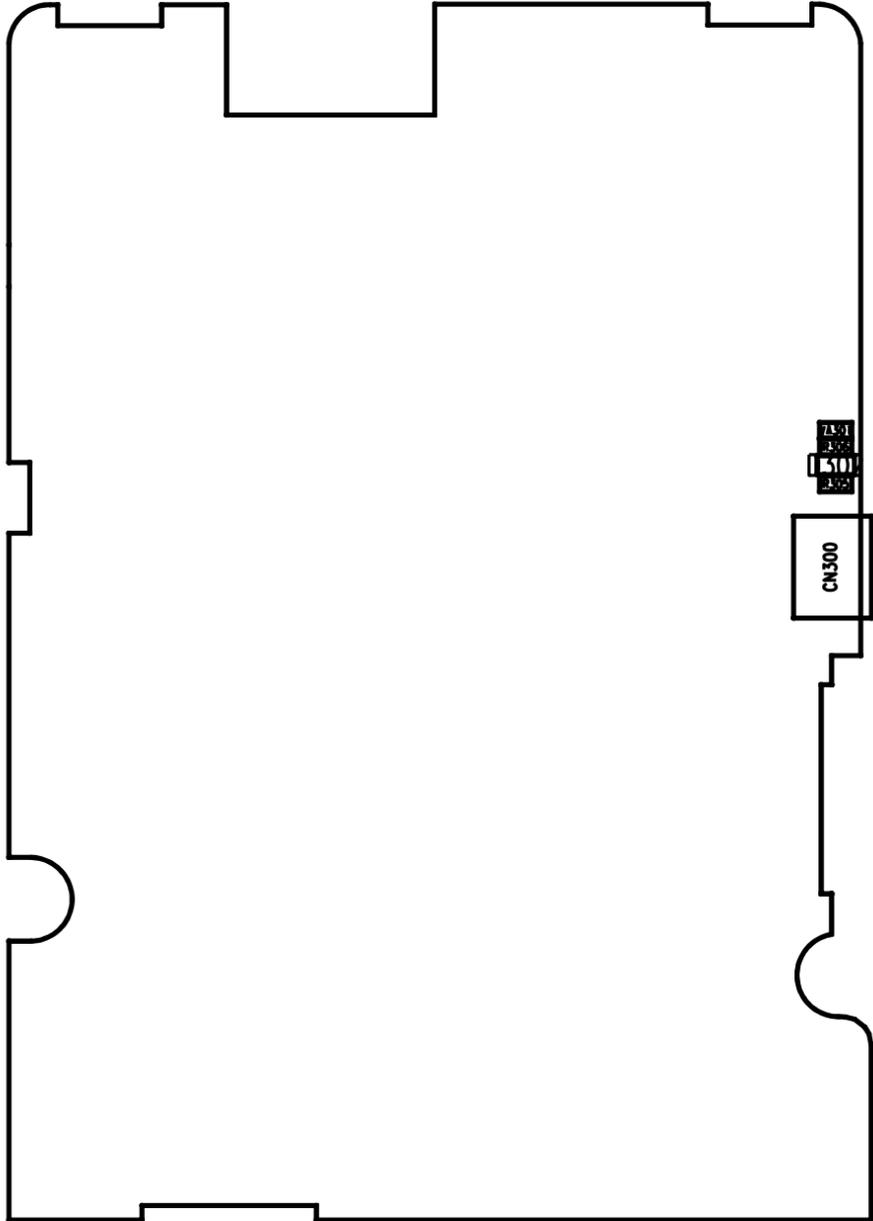


KG320-MAIN-SPFY0122501-1.0-TOP

# 8. PCB LAYOUT

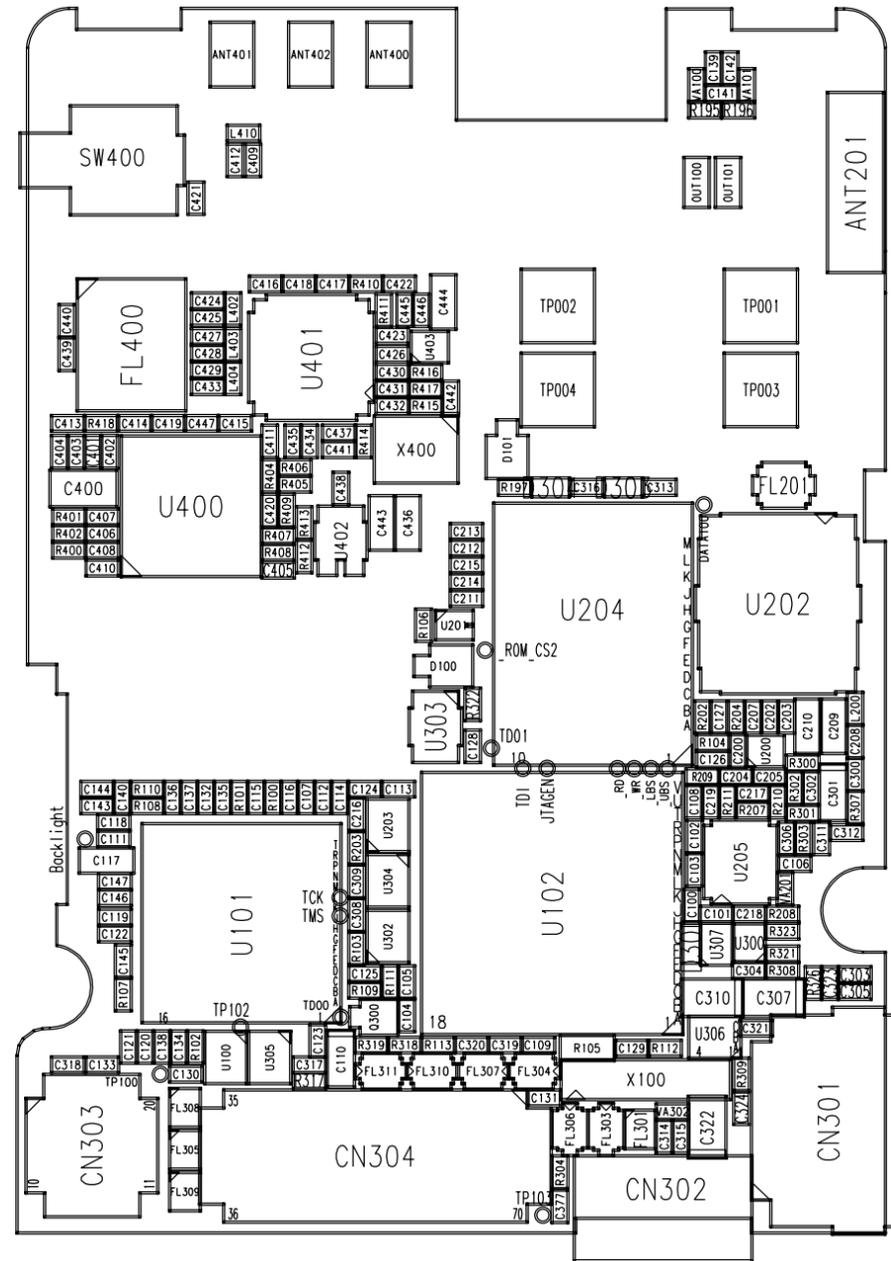


KG320-MAIN-SPFY0122501-1.0-BTM

8. PCB LAYOUT

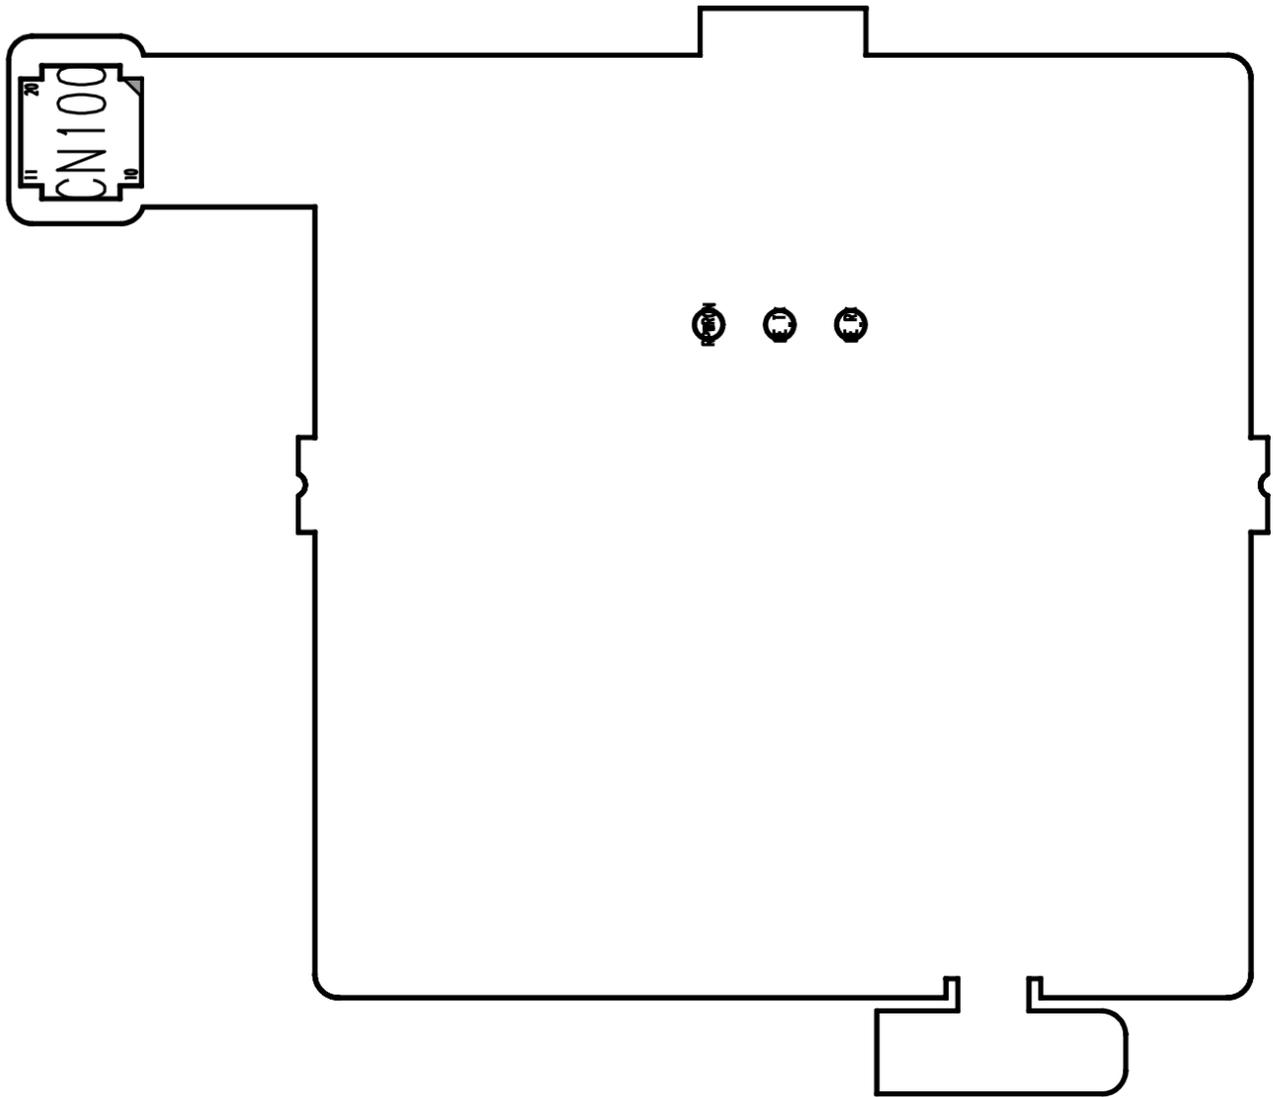


KG320-KEY-FPCB-SPCY0069801-1.0-TOP

# 8. PCB LAYOUT

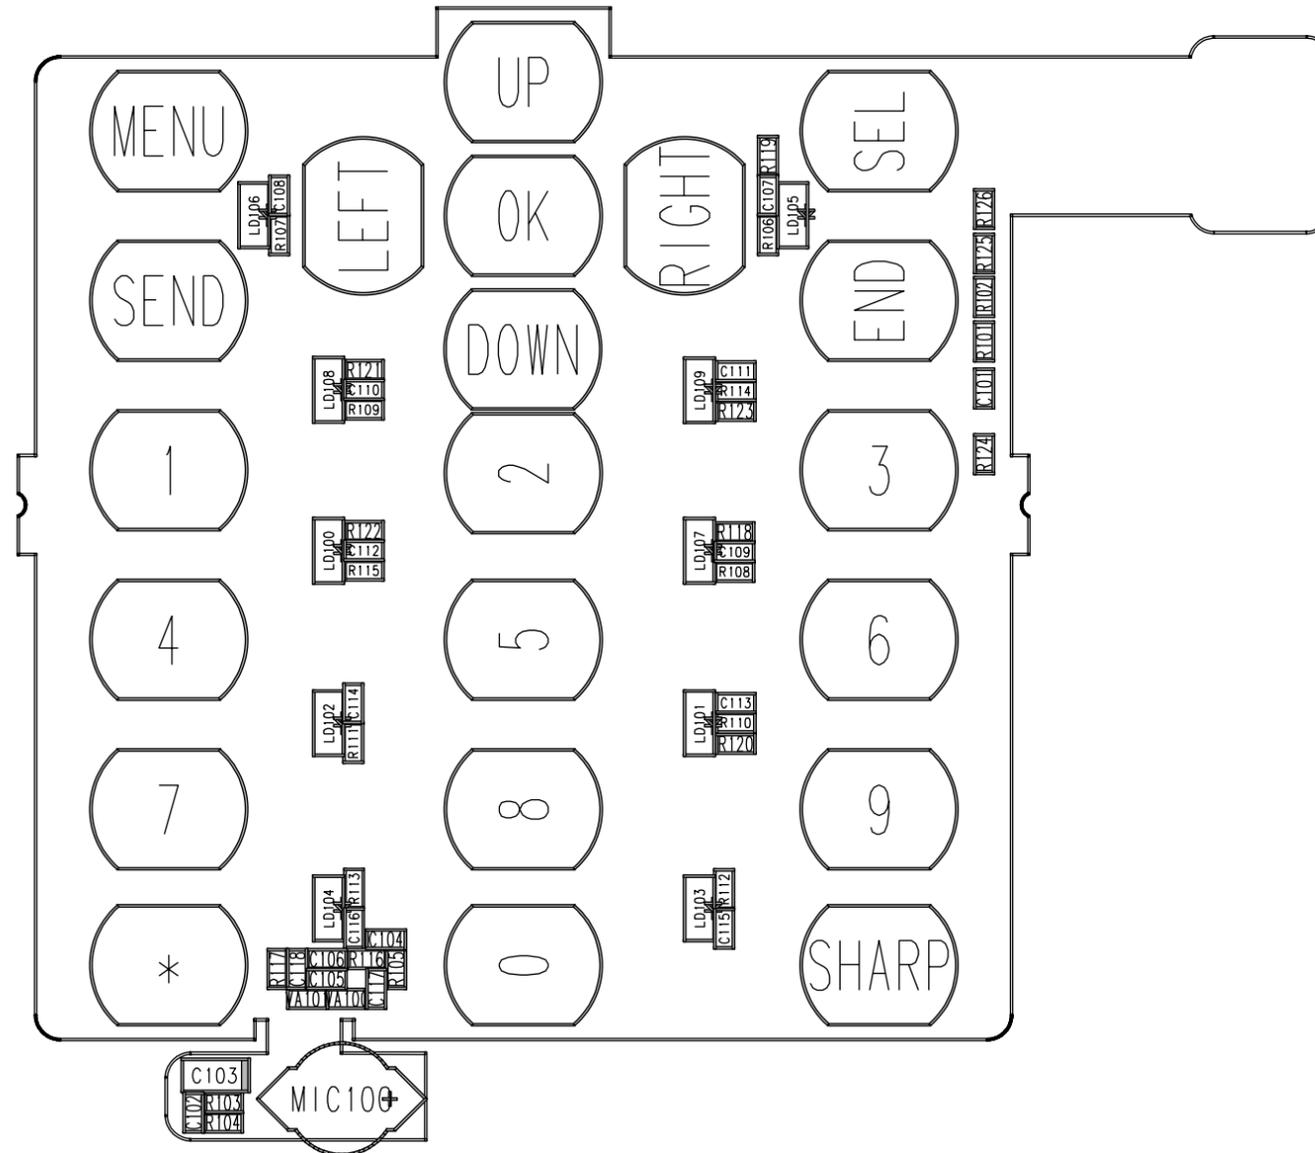


KG320-KEY-FPCB-SPCY0069801-1.0-BTM

8. PCB LAYOUT

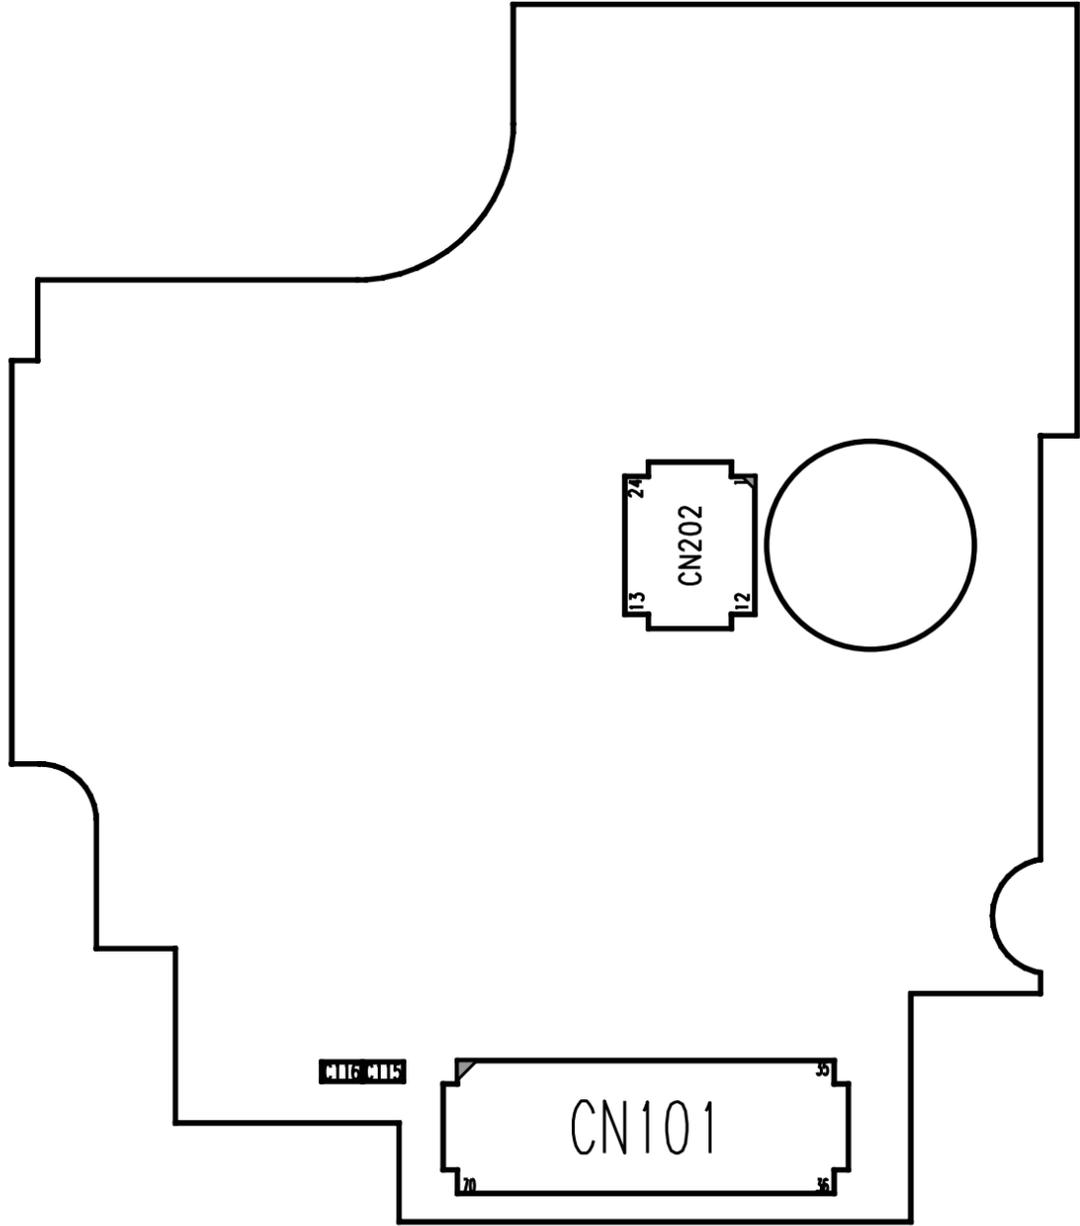

KG320-UPPER-SPJY0024301-1.0-TOP

8. PCB LAYOUT

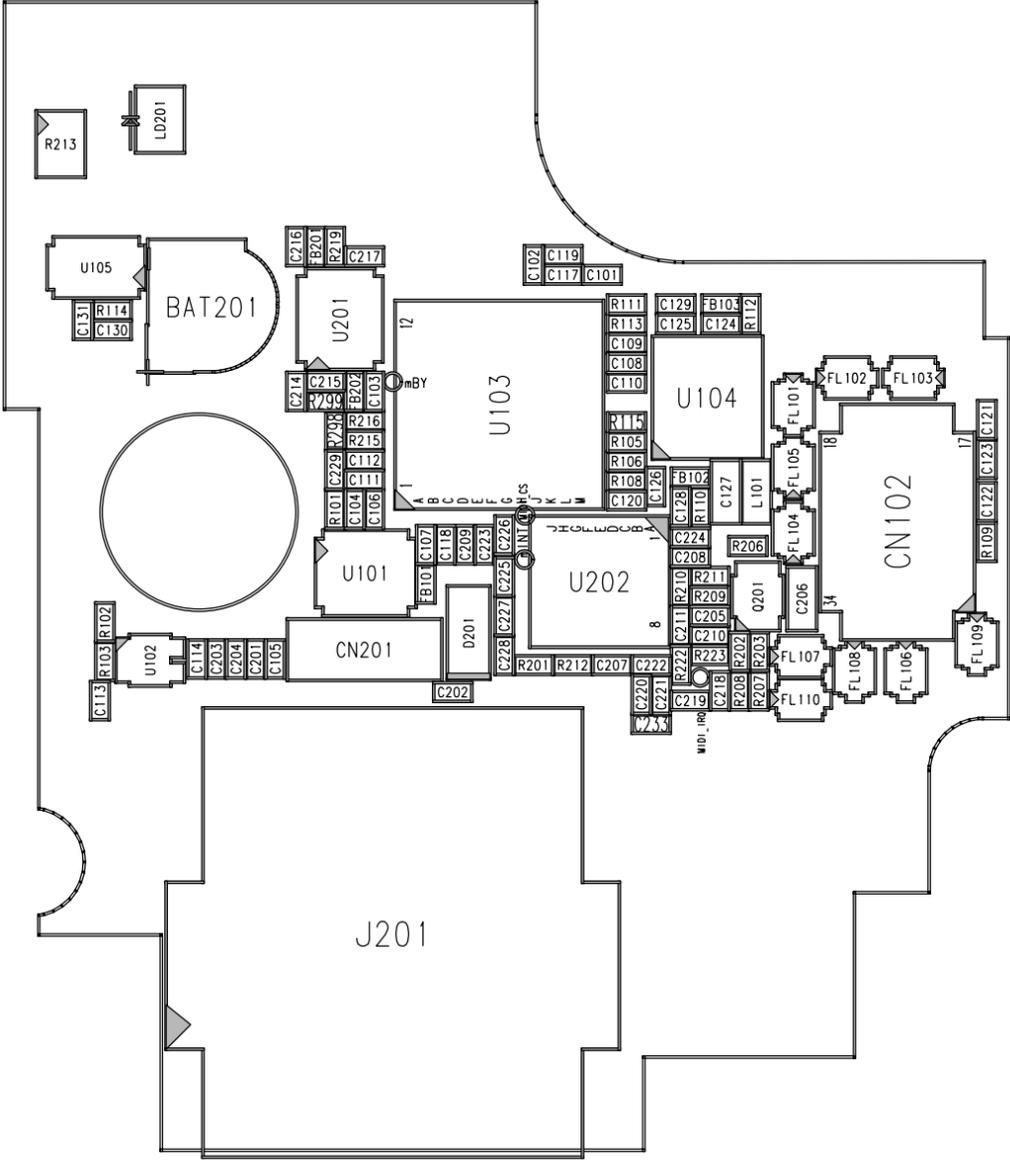

KG320-UPPER-SPJY0024301-1.0-BTM



## 9. ENGINEERING MODE

### A. About Engineering Mode

Engineering mode is designed to allow a service man/engineer to view and test the basic functions provided by a handset.


### B. Access Codes

The key sequence for switching the engineering mode on is 2945##. Pressing END will switch back to non-engineering mode operation.

### C. Key Operation

Use Up and Down key to select a menu and press 'select' key to progress the test. Pressing 'back' key will switch back to the original test menu.

### D. Engineering Mode Menu Tree

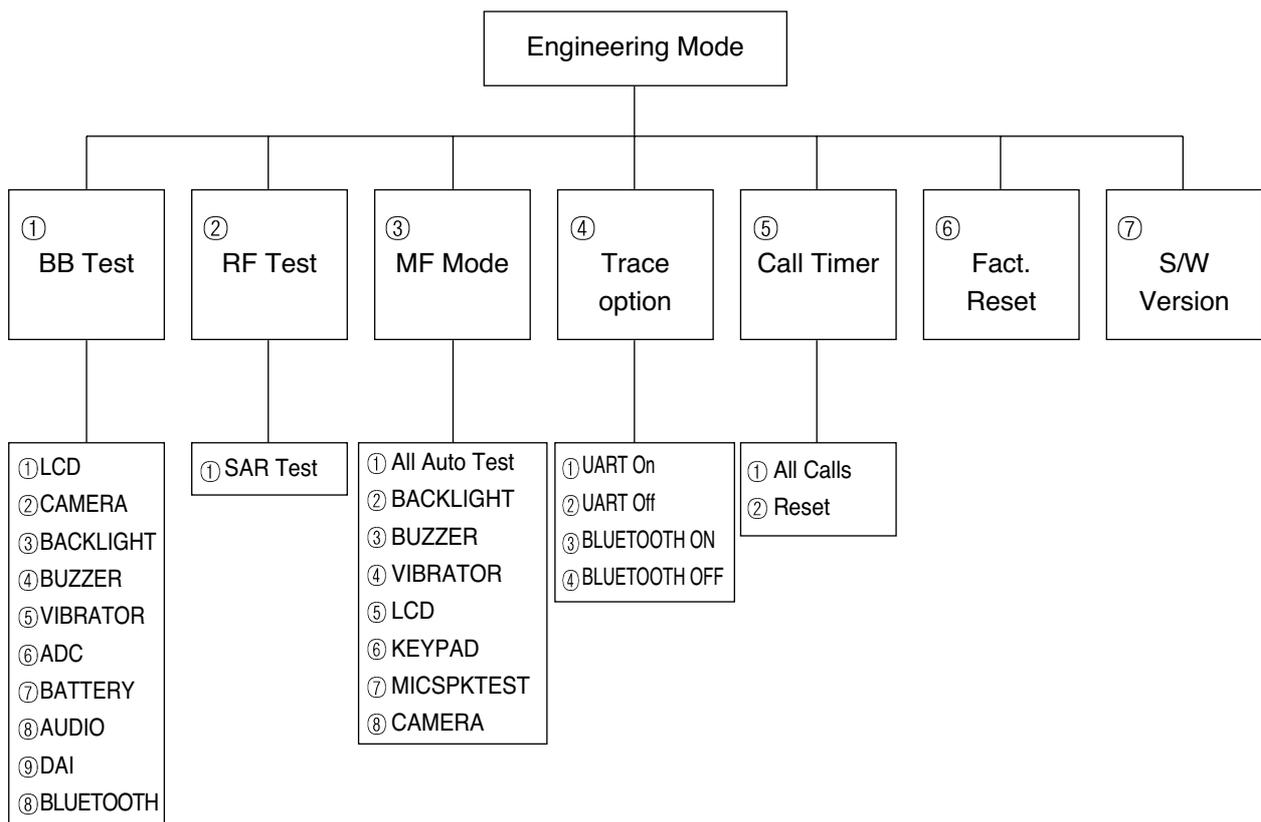

## 9. ENGINEERING MODE

---

### 9.1 BB Test [MENU 1]

#### 9.1.1 LCD

1) COLOUR : WHITE, RED, GREEN, BLUE, BLACK

#### 9.1.2 CAMERA

This menu is to test the Camera.

- 1) Main LCD preview : It shows the picture on Main LCD.
- 2) Flash on : It turns on the Flash LED.
- 3) Flash off : It turns off the Flash LED.

#### 9.1.3 Backlight

- 1) Backlight on : LCD Backlight and Keypad EL Backlight light on at the same time.
- 2) Backlight off : LCD Backlight and Keypad EL Backlight light off at the same time.
- 3) Backlight value : This controls brightness of Backlight. When entering into the menu, the present backlight-value in the phone is displayed. Use Left/Right key to adjust the level of brightness. The value of the brightness set at last will be saved in the NVRAM.

#### 9.1.4 Buzzer

This menu is to test the melody sound.

- 1) Melody on : Melody sound is played through the speaker.
- 2) Melody off : Melody sound is off.

#### 9.1.5 Vibrator

This menu is to test the vibration mode.

- 1) Vibrator on : Vibration mode is on.
- 2) Vibrator off : Vibration mode is off.

### 9.1.6 ADC (Analog to Digital Converter)

This displays the value of each ADC.

- 1) MVBAT ADC : Main Voltage Battery ADC
- 2) AUX ADC : Auxiliary ADC
- 3) TEMPER ADC : Temperature ADC

### 9.1.7 BATTERY

- 1) Bat Cal : This displays the value of Battery Calibration. The following menus are displayed in order :  
BAT\_LEV\_4V, BAT\_LEV\_3\_LIMIT, BAT\_LEV\_2\_LIMIT, BAT\_LEV\_1\_LIMIT,  
BAT\_IDLE\_LIMIT, BAT\_INCALL\_LIMIT, SHUT\_DOWN\_VOLTAGE,  
BAT\_RECHARGE\_LMT
- 2) TEMP Cal : This displays the value of Temperature Calibration. The following menus are displayed  
in order : TEMP\_HIGH\_LIMIT, TEMP\_HIGH\_RECHARGE\_LMT,  
TEMP\_LOW\_RECHARGE\_LMT, TEMP\_LOW\_LIMIT

### 9.1.8 Audio

This is a menu for setting the control register of Voiceband Baseband Codec chip.

Although the actual value can be written over, it returns to default value after switching off and on the phone.

- 1) VbControl1 : VbControl1 bit Register Value Setting
- 2) VbControl2 : VbControl2 bit Register Value Setting
- 3) VbControl3 : VbControl3 bit Register Value Setting
- 4) VbControl4 : VbControl4 bit Register Value Setting
- 5) VbControl5 : VbControl5 bit Register Value Setting
- 6) VbControl6 : VbControl6 bit Register Value Setting

### 9.1.9 DAI (Digital Audio Interface)

This menu is to set the Digital Audio Interface Mode for Speech Transcoder and Acoustic testing.

- 1) DAI AUDIO : DAI audio mode
- 2) DAI UPLINK : Speech encoder test
- 3) DAI DOWNLINK : Speech decoder test
- 4) DAI OFF : DAI mode off

### 9.1.10 Bluetooth

This menu is to test Bluetooth.

- 1) Enter test mode
- 2) Bypass mode On
- 3) Bypass mode Off

## 9. ENGINEERING MODE

---

### 9.2 RF Test [MENU 2]

#### 9.2.1 SAR test

This menu is to test the Specific Absorption Rate.

- 1) SAR test on : Phone continuously process TX only. Call-setup equipment is not required.
- 2) SAR test off : TX process off

### 9.3 MF mode [MENU 3]

This manufacturing mode is designed to do the baseband test automatically. Selecting this menu will process the test automatically, and phone displays the previous menu after completing the test.

#### 9.3.1 All auto test

LCD, Backlight, Vibrator, Buzzer, Key Pad, Mic&Speaker,

#### 9.3.2 Backlight

LCD Backlight is on for about 1.5 seconds at the same time, then off.

#### 9.3.3 Buzzer

This menu is to test the volume of Melody. It rings in the following sequence. Volume 1, Volume 2, Volume 3, Volume 0 (mute), Volume 4, Volume 5.

#### 9.3.4 Vibrator

Vibrator is on for about 1.5 seconds.

#### 9.3.5 LCD

1)LCD

Main LCD screen resolution tests horizontally and vertically one by one and fills the screen.

#### 9.3.6 Key pad

When a pop-up message shows 'Press Any Key', you may press any keys including side keys, but not [Soft2 Key]. If the key is working properly, name of the key is displayed on the screen. Test will be completed in 15 seconds automatically.

### 9.3.7 MicSpk Test

The sound from MIC is recorded for about 3 seconds, then it is replayed on the speaker automatically.

### 9.4 Trace option [MENU 4]

This is NOT a necessary menu to be used by neither engineers nor users.

### 9.5 Call timer [MENU 5]

This menu is to set the Digital Audio Interface Mode for Speech Transcoder and Acoustic testing.

- 1) All calls : This displays total conversation time. User cannot reset this value.
- 2) Reset settings : This resets total conversation time to this, [00:00:00].
- 3) DAI DOWNLINK : Speech decoder test
- 4) DAI OFF : DAI mode off

### 9.6 Fact. Reset [MENU 6]

This Factory Reset menu is to format data block in the flash memory and this procedure set up the default value in data block.

#### **Attention**

- ① Fact. Reset (i.e.Factory Reset) should be only used during the Manufacturing process.
- ② Servicemen should NOT progress this menu, otherwise some of valuable data such as Setting value, RF Calibration data, etc. cannot be restored again.

### 9.7 S/W version

This displays software version stored in the phone.

## 10. STAND ALONE TEST

---

# 10. STAND ALONE TEST

## 10.1 Introduction

This manual explains how to examine the status of RX and TX of the model.

### A. Tx Test

TX test - this is to see if the transmitter of the phones is activating normally.

### B. Rx Test

RX test - this is to see if the receiver of the phones is activating normally.

## 10.2 Setting Method

### A. COM port

- a. Move your mouse on the "Connect" button, then click the right button of the mouse and select "Com setting".
- b. In the "Dialog Menu", select the values as explained below.
  - Port : select a correct COM port
  - Baud rate : 38400
  - Leave the rest as default values

### B. Tx

#### 1. Selecting Channel

- Select one of GSM or DCS Band and input appropriate channel.

#### 2. Selecting APC

- a. Select either Power level or Scaling Factor.
- b. Power level
  - Input appropriate value GSM (between 5~19) or DCS (between 0~15)
- c. Scaling Factor
  - A 'Ramp Factor' appears on the screen.
  - You may adjust the shape of the Ramp or directly input the values.

### C. Rx

#### 1. Selecting Channel

- Select one of GSM or DCS Band and input appropriate channel.


#### 2. Gain Control Index (0~ 26) and RSSI level

- See if the value of RSSI is close to -16dBm when setting the value between 0 ~ 26 in Gain Control Index.
- Normal phone should indicate the value of RSSI close to -16dBm.

### 10.3 Means of Test

- Select a COM port
- Set the values in Tx or Rx
- Select band and channel
- After setting them all above, press connect button.
- Press the start button

**Figure 10-1. HW test program**

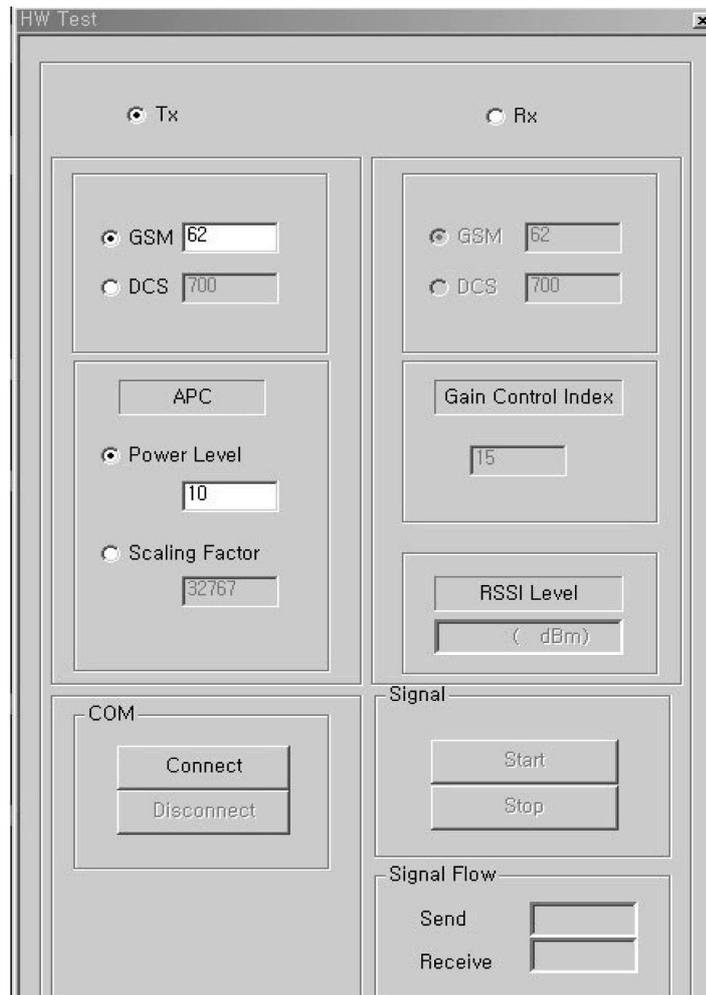

# 10. STAND ALONE TEST

Figure 10-2. HW test setting


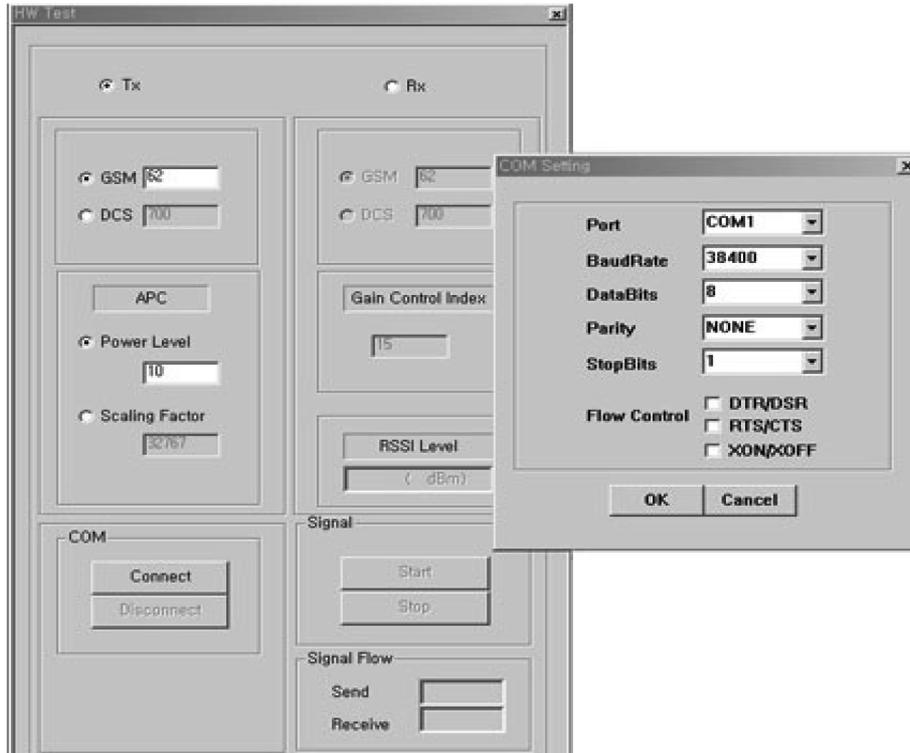


Figure 10-3. Ramping profile

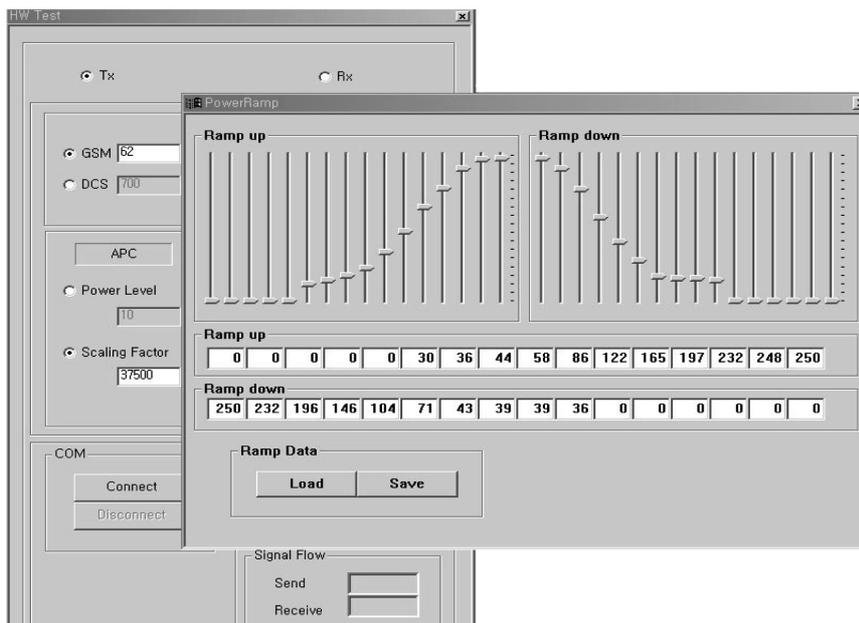

# 11. AUTO CALIBRATION

## 11.1 Calibration

### A. Overview


Auto-cal (Auto Calibration) is the PC side Calibration tool that perform Tx, Rx and Battery Calibration with Agilent 8960(GSM call setting instrument) and Tektronix PS2521G(Programmable Power supply). Auto-cal generates calibration data by communicating with phone and measuring equipment then write it into calibration data block of flash memory in GSM phone.

### B. Equipment List

**Table 11-1. Calibration Equipment List.**


Equipment for Calibration	Type / Model	Brand
Wireless Communication Test Set	HP-8960	Agilent
RS-232 Cable and Test JIG		LG
RF Cable		LG
Power Supply	HP-66311B	Agilent
GPIO interface card	HP-GPIB	Agilent
Calibration & Final test software		LG
Test SIM Card		
PC (for Software Installation)	Pentium II class above 300MHz	

### C. Equipment Setup

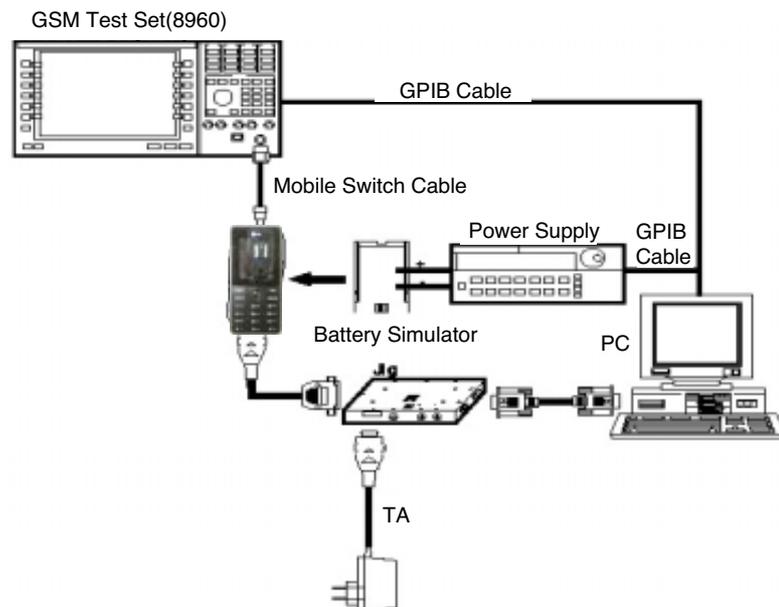

**Figure 11-2. Equipment Setup**

# 11. AUTO CALIBRATION

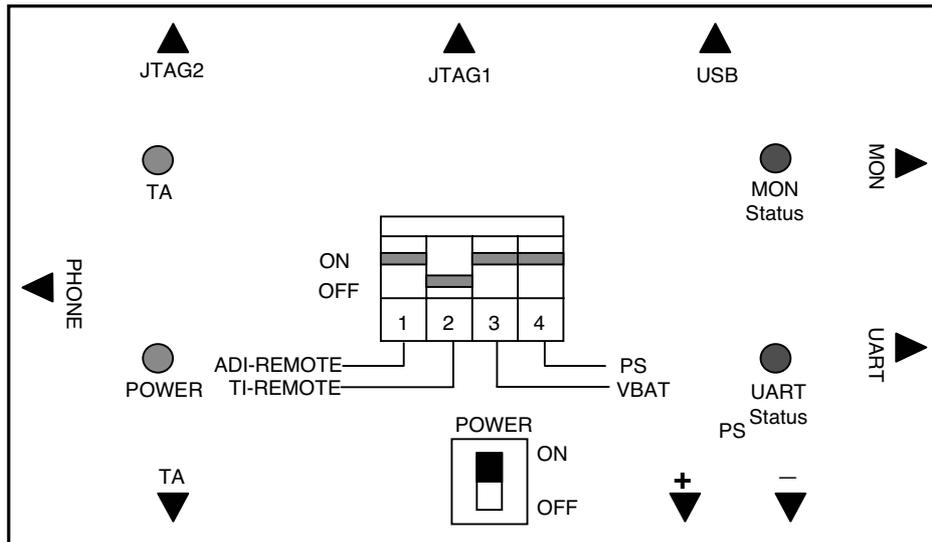

**Figure 11-3 The top view of Test JIG**

## D. Test Jig Operation

Power Source	Description
Power Supply	Usually 4.0V
Travel Adaptor	Use TA, name is TA-20G(24pin)

**Table 11-2 Jig Power**

Switch Number	Name	Description
Switch 1	ADI-REMOTE	In ON state, phone is awaked. It is used ADI chipset.
Switch 2	TI-REMOTE	In ON state, phone is awaked. It is used TI chipset.
Switch 3	VBAT	Power is provided for phone from battery
Switch 4	PS	Power is provided for phone from Power supply

**Table 11-3 Jig DIP Switch**

## 11. AUTO CALIBRATION


LED Number	Name	Description
LED 1	Power	Power is provided for Test Jig
LED 2	TA	Indicate charging state of the phone battery
LED 3	UART	Indicate data transfer state through the UART port
LED 4	MON	Indicate data transfer state through the MON port

**Table 11-4 LED Description**

1. Connect as Fig 11-2(RS232 serial cable is connected between COM port of PC and MON port of TEST JIG, in general)
2. Set the Power Supply 4.0V
3. Set the 3<sup>rd</sup>, 4<sup>th</sup> of DIP SW ON state always
4. Press the Phone power key, if the Remote ON is used, 1<sup>st</sup> ON state


### E. Procedure

1. Connect as Fig 11-2 (RS232 serial cable is connected between COM port of PC and MON port of TEST JIG, in general.)
2. Run **Hot\_Kimchi.exe** to start calibration.
3. From the Calibration Lib menu, Select F3000, then, Press APPLY!

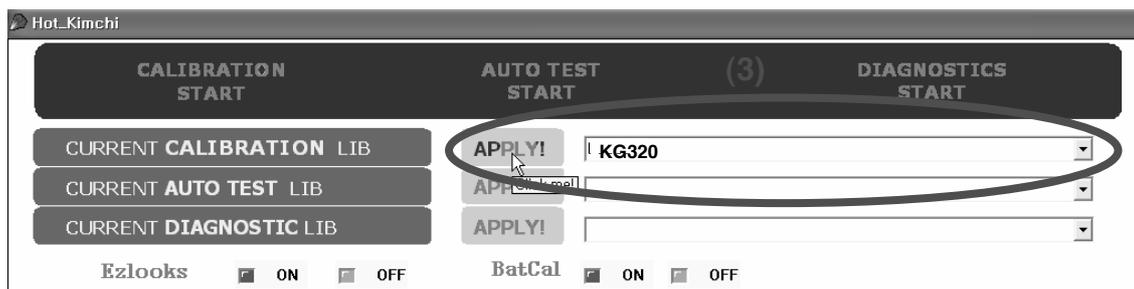


# 11. AUTO CALIBRATION

4. Press Calibration START

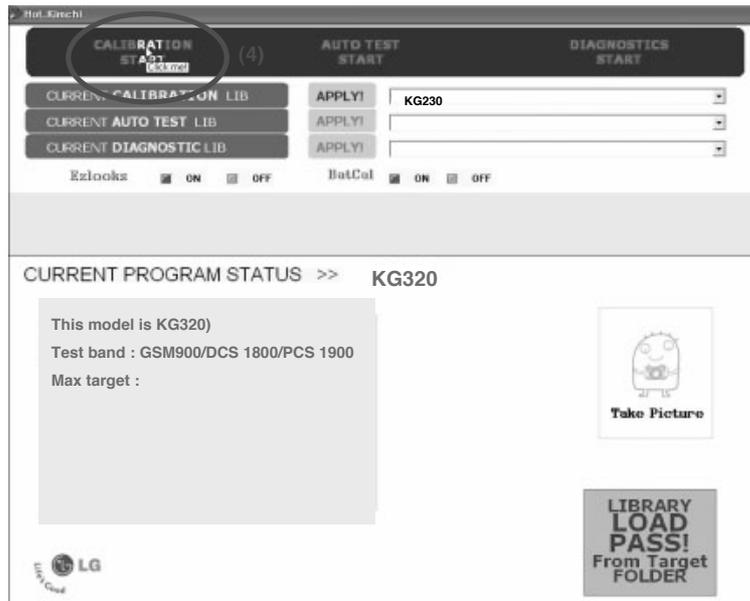

5. Select RF Cable Loss value from the Offset menu

6. Press START to execute calibration

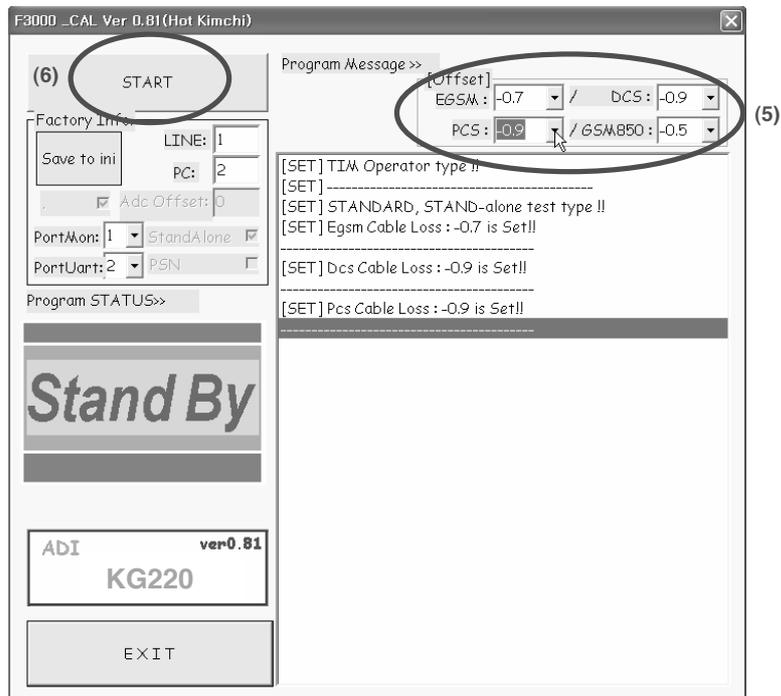

### 11.2 AGC

This procedure is for Rx calibration.

In this procedure, We can get RSSI correction value. Set band EGSM and press Start button the result window will show correction values per every power level and gain code and the same measure is performed per every frequency.

### 11.3 APC

This procedure is for Tx calibration.

In this procedure you can get proper scale factor value and measured power level.

### 11.4 ADC

This procedure is for battery calibration.

You can get main Battery Config Table and temperature Config Table

### 11.5 Setting

check com port and cable loss. Select automatic calibration item. If you uncheck one item calibration will stop from the unchecked item. This is useful when you want to process only one item.


### 11.6 How to do calibration

- B. Connect Ag8960 equipment and Power Supply and phone.
- C. Set correct port and baud rate.
- D. Press Start button. AutoCal process all calibration procedure
  - i. AGC EGSM
  - ii. AGC DCS
  - iii. APC EGSM
  - iv. APC DCS
  - v. ADC
- E. After finished all measurement. The state is return to SETUP.
- F. The Cal file will be generated and then the calibration data will be written into phone and then will be reset.



## 12. EXPLODED VIEW & REPLACEMENT PART LIST

### 12.1 EXPLODED VIEW

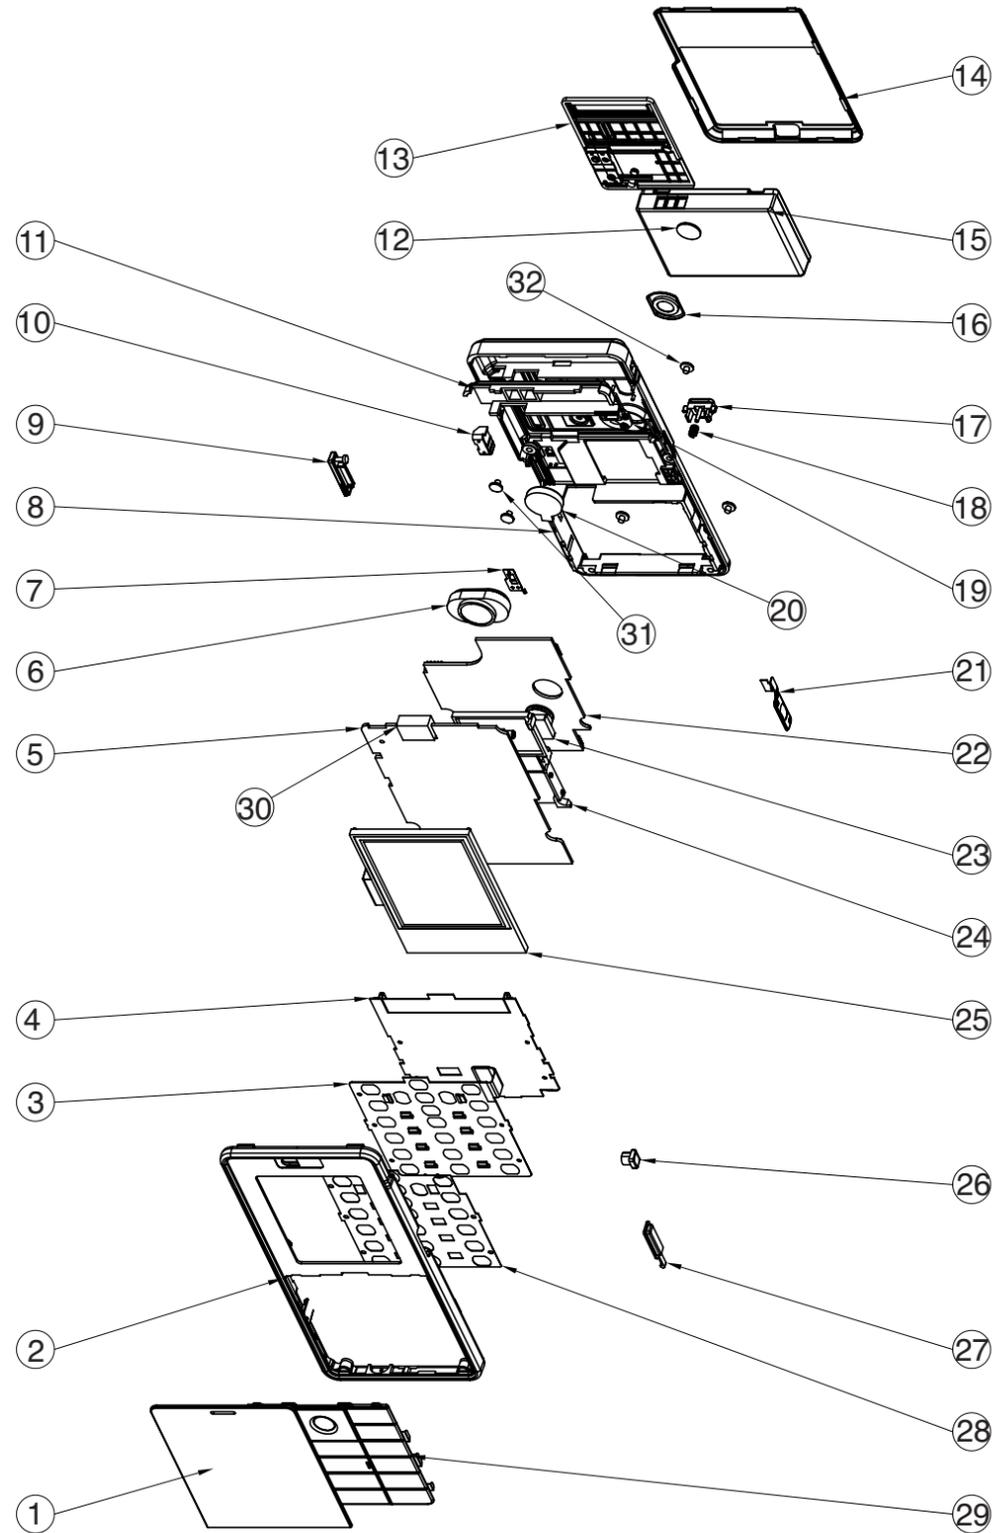

No.	DESCRIPTION	Q'TY	PART NO.	REMARK
1	LCD WINDOW	1	MWAC0065201	
2	COVER FRONT	1	MCJK0055401	
3	KEY F-PCB	1	SPCY0069801	
4	BRACKET ASSY	1	AFBA0004201	
5	PCB ASSY,MAIN	1	SAFF0079520	
6	SPEAKER	1	SUSY0022301	
7	PLATE GROUND	1	MPFD0002901	
8	COVER REAR	1	MCJN0051001	
9	CAP RECEPTACLE	1	MCCE0029401	
10	COVER GUIDE	1	MCJL0002801	
11	ANTENNA	1	SNGF0014701	
12	WINDOW CAMERA	1	MWAE0015301	
13	HINGE ASSY,SLIDE	1	AHFB0000701	
14	COVER BATTERY	1	MCJA0030101	
15	BATTERY PACK	1	SBPL0082801	
16	DECO CAMERA	1	MDAD0020201	
17	BATTERY LOCKER	1	MLEY0002201	
18	SPRING	1	MSDB0001701	
19	WINDOW FLASH	1	MWAH0004901	
20	VIB-MOTOR	1	SJMY0008202	
21	PCB, SIDEKEY	1	SPKY0028501	
22	PCB ASSY,SUB	1	SAJE0010702	
23	CAMERA	1	SVCY0011701	
24	PCB BRACKET ASSY	1	ABFZ0007801	
25	LCD MODULE	1	SVLM0019201	
26	CAP MOBILE SWITCH	1	MCCF0033801	
27	BUTTON CAMERA	1	MBJP0004501	
28	METAL DOME ASSY	1	ADCA0047701	
29	BUTTON DAIL	1	MBJA0020702	
30	RECEIVER	1	SURY0010401	
31	SCREW MACHINE	2	GMZZ0019001	
32	SCREW MACHINE	4	GMZZ0017701	



## 12. EXPLODED VIEW & REPLACEMENT PART LIST

### 12.2 Replacement Parts <Mechanic component>

**Note:** This Chapter is used for reference, Part order is ordered by SBOM standard on GCSC

Level	Location No.	Description	Part Number	Specification	Color	Remark
1	AAAY01	ADDITION	AAAY0167901		Black	
2	ACGA00	COVER ASSY,BATTERY	ACGA0016701		Black	
3	MCJA00	COVER,BATTERY	MCJA0030101	PRESS, STS, 0.3, , , ,	Black	14
3	MLAR00	LABEL,WARNING	MLAR0004601			
3	MTAB00	TAPE,PROTECTION	MTAB0121101	BATT, COVER		
1	APEY00	PHONE	APEY0267502		Black	
2	ACGK00	COVER ASSY,FRONT	ACGK0068402		Black	
3	MBJA00	BUTTON,DIAL	MBJA0020702		Black	29
3	MBJP00	BUTTON,SHUTTER	MBJP0004501	KG320 BUTTON,SHUTTER		27
3	MCJK00	COVER,FRONT	MCJK0055401	KG320 COVER,FRONT	Black	2
3	MFBB00	FILTER,RECEIVER	MFBB0015001	KG320 FILTER,RECEIVER		
3	MGAD00	GASKET,SHIELD FORM	MGAD0113501			
3	MGAD01	GASKET,SHIELD FORM	MGAD0121301	KG320 GASKET,SHIELDFORM(L)	Black	
3	MGAD02	GASKET,SHIELD FORM	MGAD0121401	KG320 GASKET,SHIELDFORM(R)	Black	
3	MPBG00	PAD,LCD	MPBG0042201	KG320 PAD,LCD		
3	MPBH00	PAD,MIKE	MPBH0022201	KG320 PAD,MIKE		
3	MTAB00	TAPE,PROTECTION	MTAB0099201	KG 320 TAPE,PROTECTION (CAMERA KEY)		
3	MTAB01	TAPE,PROTECTION	MTAB0108501	KG320 TAPE_PROTECTON(KEYPAD)		
3	MTAB02	TAPE,PROTECTION	MTAB0108601	KG320 TAPE_PROTECTION_WINDOW		
3	MTAB03	TAPE,PROTECTION	MTAB0121801	TAPE,PROTECTON WINDOW_INNER		
3	MTAD00	TAPE,WINDOW	MTAD0049801	KG320 TAPE,WINDOW		
3	MWAC00	WINDOW,LCD	MWAC0065201	KG320 WINDOW,LCD		1
2	ACGM00	COVER ASSY,REAR	ACGM0069001	KG320 COVER ASSY,REAR	Black	
3	AHFB00	HINGE ASSY,SLIDE	AHFB0000701		Black	13
4	MHFZ00	HINGE	MHFZ0009001	KG320 HINGE,SLIDE		
4	MMAZ00	MAGNET	MMAZ0003501	KG320 MAGNET		
4	MPFF00	PLATE,LOGO	MPFF0008001	KG320 PLATE(Mega Pixel)		
3	GMZZ00	SCREW MACHINE	GMZZ0019001	3.5 mm,1.5 mm,MSWR3 ,N ,+ , - ,NYLOK Coating	Silver	31
3	MCCE00	CAP,RECEPTACLE	MCCE0029401	KG320 CAP,RECEPTACLE	Black	9
3	MCJL00	COVER,GUIDE	MCJL0002801		Black	10
3	MCJN00	COVER,REAR	MCJN0051001	KG320 COVER,REAR	Black	8
3	MDAD00	DECO,CAMERA	MDAD0020201	KG320 DECO,CAMERA		16
3	MGAD00	GASKET,SHIELD FORM	MGAD0113601	KG320 LCD Conn		

## 12. EXPLODED VIEW & REPLACEMENT PART LIST

Level	Location No.	Description	Part Number	Specification	Color	Remark
3	MGAD01	GASKET,SHIELD FORM	MGAD0116401	KG320 GASKET,SHIELD FORM(KEY)		
3	MGAD02	GASKET,SHIELD FORM	MGAD0124201	GASKET,SHIELD FORM(INSET)		
3	MLEY00	LOCKER	MLEY0002201		Black	17
3	MPBJ00	PAD,MOTOR	MPBJ0030401	KG320 PAD,MOTOR		
3	MPBN00	PAD,SPEAKER	MPBN0027801	KG320 FELT,SPEAKER		
3	MPBT00	PAD,CAMERA	MPBT0025801	KG320 PAD,CAMERA		
3	MPBZ00	PAD	MPBZ0117701	KG320 PAD BACK-UP BATT		
3	MPFD00	PLATE,GROUND	MPFD0002901	kg320 plate,ground		7
3	MSDB00	SPRING,COIL	MSDB0001701	G7000	Pearl White	18
3	MTAA00	TAPE,DECO	MTAA0108501	KG320 TAPE,CAMERA DECO		
3	MTAB00	TAPE,PROTECTION	MTAB0116201	KG320 TAPE,PROTECTION(CAMERA WINDOW,B)		
3	MTAD00	TAPE,WINDOW	MTAD0047401	KG320 TAPE,WINDOW(CAMERA LENS)		
3	MTAZ00	TAPE	MTAZ0135301	TAPE_SPEAKER		
3	MWAE00	WINDOW,CAMERA	MWAE0015301	KG320 WINDOW,CAMERA		12
3	MWAH00	WINDOW,FLASH	MWAH0004901	KG320 WINDOW,FLASH		19
3	SNGF00	ANTENNA,GSM,FIXED	SNGF0014701	8.0:1 ,-4.0 dBd, ,GSM900/DCS1800/PCS1900 INTERNAL PIFA TYPE Pb-Free		11
3	SUSY00	SPEAKER	SUSY0022301	ASSY ,8 ohm,88 dB,15 mm,10mm, 4.2T		6
2	GMZZ00	SCREW MACHINE	GMZZ0017701	1.4 mm,3.0 mm,MSWR3 ,N ,+ , - ,	Silver	32
2	MCCF00	CAP,MOBILE SWITCH	MCCF0033801	KG320 CAP,MOBILE SWITCH	Black	26
2	MLAK00	LABEL,MODEL	MLAK0018901	Model Label CIS		
2	SACY00	PCB ASSY,FLEXIBLE	SACY0043601	KG320 EUA_KEY PAD	Black	
3	SACE00	PCB ASSY,FLEXIBLE,SMT	SACE0038301	KG320 EUA_KEY PAD	Black	
4	ABFZ00	BRACKET ASSY	ABFZ0007801			24
5	MBFZ00	BRACKET	MBFZ0025101	KG320 BRACKET(SUS)		
5	MTAZ00	TAPE	MTAZ0118001	KG320 TAPE,SUS BRAKET		
5	MTAZ01	TAPE	MTAZ0118101	KG320 TAPE,MIC		
4	ADCA00	DOME ASSY,METAL	ADCA0047701	KG320 DOME ASSY,METAL		28
4	MGAD00	GASKET,SHIELD FORM	MGAD0123301	GASKET,SHIELD FORM(MAIN)		
4	MIDZ00	INSULATOR	MIDZ0098601	INSULATOR_CAMERA KEY		
4	MPBG00	PAD,LCD	MPBG0042202	PAD LCD DRV		
4	MTAZ00	TAPE	MTAZ0118701	KG320 TAPE,LCD		
6	MFEA00	FRAME,SHIELD	MFEA0010401	KG320 FRAME,SHIELD		
6	MIDZ00	INSULATOR	MIDZ0094601	KG320 INSULATOR(BRACKET)		
6	MIDZ00	INSULATOR	MIDZ0094601	KG320 INSULATOR(BRACKET)		
6	MTAZ00	TAPE	MTAZ0118601	KG320 TAPE,LCD MODULE		
6	MTAZ01	TAPE	MTAZ0146301	COMPLEX, (empty), . . . .		

## 12. EXPLODED VIEW & REPLACEMENT PART LIST

---

Level	Location No.	Description	Part Number	Specification	Color	Remark
5	MIDZ00	INSULATOR	MIDZ0094701	KG320 INSULATOR(SUB PCB)		

## 12. EXPLODED VIEW & REPLACEMENT PART LIST

### <Main component>

**Note:** This Chapter is used for reference, Part order is ordered by SBOM standard on GCSC

Level	Location No.	Description	Part Number	Specification	Color	Remark
4	SACC00	PCB ASSY,FLEXIBLE,SMT BOTTOM	SACC0021701	KG320 EUA_KEY PAD	Black	
5	C101	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
5	C102	CAP,CERAMIC,CHIP	ECCH0000120	39 pF,50V,J,NP0,TC,1005,R/TP		
5	C103	CAP,TANTAL,CHIP	ECTH0001903	22 uF,6.3V ,M ,L _ESR ,1608 ,R/TP		
5	C104	CAP,CERAMIC,CHIP	ECCH0000120	39 pF,50V,J,NP0,TC,1005,R/TP		
5	C105	CAP,CERAMIC,CHIP	ECCH0000120	39 pF,50V,J,NP0,TC,1005,R/TP		
5	C106	CAP,CERAMIC,CHIP	ECCH0000182	0.1 uF,10V ,K ,X5R ,HD ,1005 ,R/TP		
5	C107	CAP,CERAMIC,CHIP	ECCH0000143	1 nF,50V,K,X7R,HD,1005,R/TP		
5	C108	CAP,CERAMIC,CHIP	ECCH0000143	1 nF,50V,K,X7R,HD,1005,R/TP		
5	C109	CAP,CERAMIC,CHIP	ECCH0000143	1 nF,50V,K,X7R,HD,1005,R/TP		
5	C110	CAP,CERAMIC,CHIP	ECCH0000143	1 nF,50V,K,X7R,HD,1005,R/TP		
5	C111	CAP,CERAMIC,CHIP	ECCH0000143	1 nF,50V,K,X7R,HD,1005,R/TP		
5	C112	CAP,CERAMIC,CHIP	ECCH0000143	1 nF,50V,K,X7R,HD,1005,R/TP		
5	C113	CAP,CERAMIC,CHIP	ECCH0000143	1 nF,50V,K,X7R,HD,1005,R/TP		
5	C114	CAP,CERAMIC,CHIP	ECCH0000143	1 nF,50V,K,X7R,HD,1005,R/TP		
5	C115	CAP,CERAMIC,CHIP	ECCH0000143	1 nF,50V,K,X7R,HD,1005,R/TP		
5	C116	CAP,CERAMIC,CHIP	ECCH0000143	1 nF,50V,K,X7R,HD,1005,R/TP		
5	C117	CAP,CERAMIC,CHIP	ECCH0000120	39 pF,50V,J,NP0,TC,1005,R/TP		
5	C118	CAP,CERAMIC,CHIP	ECCH0000120	39 pF,50V,J,NP0,TC,1005,R/TP		
5	LD100	DIODE,LED,CHIP	EDLH0011901	WHITE ,1608 ,R/TP ,PB-FREE(ZENER)		
5	LD101	DIODE,LED,CHIP	EDLH0011901	WHITE ,1608 ,R/TP ,PB-FREE(ZENER)		
5	LD102	DIODE,LED,CHIP	EDLH0011901	WHITE ,1608 ,R/TP ,PB-FREE(ZENER)		
5	LD103	DIODE,LED,CHIP	EDLH0011901	WHITE ,1608 ,R/TP ,PB-FREE(ZENER)		
5	LD104	DIODE,LED,CHIP	EDLH0011901	WHITE ,1608 ,R/TP ,PB-FREE(ZENER)		
5	LD105	DIODE,LED,CHIP	EDLH0011901	WHITE ,1608 ,R/TP ,PB-FREE(ZENER)		
5	LD106	DIODE,LED,CHIP	EDLH0011901	WHITE ,1608 ,R/TP ,PB-FREE(ZENER)		
5	LD107	DIODE,LED,CHIP	EDLH0011901	WHITE ,1608 ,R/TP ,PB-FREE(ZENER)		
5	LD108	DIODE,LED,CHIP	EDLH0011901	WHITE ,1608 ,R/TP ,PB-FREE(ZENER)		
5	LD109	DIODE,LED,CHIP	EDLH0011901	WHITE ,1608 ,R/TP ,PB-FREE(ZENER)		
5	MIC100	MICROPHONE	SUMY0010509	UNIT ,42 dB,4*1.35 ,JFET		
5	R101	RES,CHIP	ERHY0000261	10K ohm,1/16W,J,1005,R/TP		
5	R102	RES,CHIP	ERHY0000237	680 ohm,1/16W,J,1005,R/TP		
5	R103	RES,CHIP	ERHY0000241	1K ohm,1/16W,J,1005,R/TP		

## 12. EXPLODED VIEW & REPLACEMENT PART LIST

Level	Location No.	Description	Part Number	Specification	Color	Remark
5	R104	RES,CHIP	ERHY0000247	2.2K ohm,1/16W,J,1005,R/TP		
5	R105	RES,CHIP	ERHY0000220	100 ohm,1/16W,J,1005,R/TP		
5	R106	RES,CHIP	ERHY0000222	120 ohm,1/16W,J,1005,R/TP		
5	R107	RES,CHIP	ERHY0000222	120 ohm,1/16W,J,1005,R/TP		
5	R108	RES,CHIP	ERHY0000222	120 ohm,1/16W,J,1005,R/TP		
5	R109	RES,CHIP	ERHY0000222	120 ohm,1/16W,J,1005,R/TP		
5	R110	RES,CHIP	ERHY0000222	120 ohm,1/16W,J,1005,R/TP		
5	R111	RES,CHIP	ERHY0000222	120 ohm,1/16W,J,1005,R/TP		
5	R112	RES,CHIP	ERHY0000222	120 ohm,1/16W,J,1005,R/TP		
5	R113	RES,CHIP	ERHY0000222	120 ohm,1/16W,J,1005,R/TP		
5	R114	RES,CHIP	ERHY0000222	120 ohm,1/16W,J,1005,R/TP		
5	R115	RES,CHIP	ERHY0000222	120 ohm,1/16W,J,1005,R/TP		
5	R116	RES,CHIP	ERHY0000220	100 ohm,1/16W,J,1005,R/TP		
5	R117	RES,CHIP	ERHY0000247	2.2K ohm,1/16W,J,1005,R/TP		
5	R118	RES,CHIP	ERHY0000201	0 ohm,1/16W,J,1005,R/TP		
5	R119	RES,CHIP	ERHY0000201	0 ohm,1/16W,J,1005,R/TP		
5	R120	RES,CHIP	ERHY0000201	0 ohm,1/16W,J,1005,R/TP		
5	R121	RES,CHIP	ERHY0000201	0 ohm,1/16W,J,1005,R/TP		
5	R122	RES,CHIP	ERHY0000201	0 ohm,1/16W,J,1005,R/TP		
5	R123	RES,CHIP	ERHY0000201	0 ohm,1/16W,J,1005,R/TP		
5	R124	RES,CHIP	ERHY0000201	0 ohm,1/16W,J,1005,R/TP		
5	R125	RES,CHIP	ERHY0000201	0 ohm,1/16W,J,1005,R/TP		
5	R126	RES,CHIP	ERHY0000201	0 ohm,1/16W,J,1005,R/TP		
5	VA100	VARISTOR	SEVY0001001	14 V , ,SMD ,50pF , 1005		
5	VA101	VARISTOR	SEVY0001001	14 V , ,SMD ,50pF , 1005		
4	SACD00	PCB ASSY,FLEXIBLE,SMT TOP	SACD0031001	KG320 EUA _KEY PAD	Black	
5	CN100	CONNECTOR, BOARD TO BOARD	ENBY0020101	20 PIN,0.4 mm,ETC , ,H=1.5, Header		
4	SPCY00	PCB,FLEXIBLE	SPCY0069801	POLYI ,0.5 mm,MULTI-4 ,		3
2	SAMY00	PCB ASSY,MAIN	SAFY0157520		Black	
3	SAFB00	PCB ASSY,MAIN,INSERT	SAFB0061603			
4	SPKY00	PCB,SIDEKEY	SPKY0028501	POLYI ,0.5 mm,DOUBLE ,		21
4	SURY00	RECEIVER	SURY0010401	ASSY ,102 dB,32 ohm,09*06 ,3.0T		30
4	SVLM00	LCD MODULE	SVLM0019201	MAIN ,176*220 (1.76" ) ,34*50*1.9(t) ,262k ,TFT ,TM ,S1D19105(EPSON) ,Wide-Viewing Angle		25
3	SAFF00	PCB ASSY,MAIN,SMT	SAFF0079520		Black	5
4	MLAB00	LABEL,A/S	MLAB0000601	HUMIDITY STICKER		

## 12. EXPLODED VIEW & REPLACEMENT PART LIST

Level	Location No.	Description	Part Number	Specification	Color	Remark
4	MLAC00	LABEL,BARCODE	MLAC0003301	EZ LOOKS(use for PCB ASSY MAIN(hardware))		
4	SAFC00	PCB ASSY,MAIN,SMT BOTTOM	SAFC0069901	KG320 EUA_MAIN PCB	Black	
5	ANT201	ANTENNA,GSM,FIXED	SNGF0016701	3.0:1 ,0 dBd , ,8x2x1.2 B.T PIFA SMD Pb-Free		
5	C100	CAP,CERAMIC,CHIP	ECCH0002002	47000 pF,10V ,K ,B ,HD ,1005 ,R/TP		
5	C101	CAP,CERAMIC,CHIP	ECCH0000182	0.1 uF,10V ,K ,X5R ,HD ,1005 ,R/TP		
5	C102	CAP,CERAMIC,CHIP	ECCH0000182	0.1 uF,10V ,K ,X5R ,HD ,1005 ,R/TP		
5	C103	CAP,CERAMIC,CHIP	ECCH0000182	0.1 uF,10V ,K ,X5R ,HD ,1005 ,R/TP		
5	C104	CAP,CERAMIC,CHIP	ECCH0000182	0.1 uF,10V ,K ,X5R ,HD ,1005 ,R/TP		
5	C105	CAP,CERAMIC,CHIP	ECCH0000182	0.1 uF,10V ,K ,X5R ,HD ,1005 ,R/TP		
5	C106	CAP,CERAMIC,CHIP	ECCH0002002	47000 pF,10V ,K ,B ,HD ,1005 ,R/TP		
5	C107	CAP,CERAMIC,CHIP	ECCH0002002	47000 pF,10V ,K ,B ,HD ,1005 ,R/TP		
5	C108	CAP,CERAMIC,CHIP	ECCH0002002	47000 pF,10V ,K ,B ,HD ,1005 ,R/TP		
5	C109	CAP,CERAMIC,CHIP	ECCH0000182	0.1 uF,10V ,K ,X5R ,HD ,1005 ,R/TP		
5	C110	CAP,TANTAL,CHIP	ECTH0004101	22 uF,6.3V ,M ,STD ,1608 ,R/TP		
5	C111	CAP,CERAMIC,CHIP	ECCH0000115	22 pF,50V ,J ,NP0 ,TC ,1005 ,R/TP		
5	C112	CAP,CERAMIC,CHIP	ECCH0002002	47000 pF,10V ,K ,B ,HD ,1005 ,R/TP		
5	C113	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
5	C114	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
5	C115	CAP,CERAMIC,CHIP	ECCH0000182	0.1 uF,10V ,K ,X5R ,HD ,1005 ,R/TP		
5	C116	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
5	C117	CAP,CHIP,MAKER	ECZH0001421	2.2 uF,6.3V ,K ,X5R ,HD ,1608 ,R/TP		
5	C118	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
5	C119	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
5	C120	CAP,CERAMIC,CHIP	ECCH0000122	47 pF,50V ,J ,NP0 ,TC ,1005 ,R/TP		
5	C121	CAP,CERAMIC,CHIP	ECCH0000165	68 nF,6.3V ,K ,X5R ,HD ,1005 ,R/TP		
5	C122	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
5	C123	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
5	C124	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
5	C125	CAP,CERAMIC,CHIP	ECCH0000155	10 nF,16V ,K ,X7R ,HD ,1005 ,R/TP		
5	C126	CAP,CHIP,MAKER	ECZH0000813	100 pF,50V ,J ,NP0 ,TC ,1005 ,R/TP		
5	C127	CAP,CHIP,MAKER	ECZH0000813	100 pF,50V ,J ,NP0 ,TC ,1005 ,R/TP		
5	C128	CAP,CERAMIC,CHIP	ECCH0000143	1 nF,50V ,K ,X7R ,HD ,1005 ,R/TP		
5	C130	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
5	C132	CAP,CERAMIC,CHIP	ECCH0000120	39 pF,50V ,J ,NP0 ,TC ,1005 ,R/TP		
5	C133	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
5	C134	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		

## 12. EXPLODED VIEW & REPLACEMENT PART LIST

Level	Location No.	Description	Part Number	Specification	Color	Remark
5	C135	CAP,CERAMIC,CHIP	ECCH0000120	39 pF,50V,J,NP0,TC,1005,R/TP		
5	C136	CAP,CERAMIC,CHIP	ECCH0000120	39 pF,50V,J,NP0,TC,1005,R/TP		
5	C137	CAP,CERAMIC,CHIP	ECCH0000120	39 pF,50V,J,NP0,TC,1005,R/TP		
5	C138	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
5	C139	CAP,CERAMIC,CHIP	ECCH0000122	47 pF,50V,J,NP0,TC,1005,R/TP		
5	C140	CAP,CERAMIC,CHIP	ECCH0000120	39 pF,50V,J,NP0,TC,1005,R/TP		
5	C141	CAP,CHIP,MAKER	ECZH0000826	27 pF,50V ,J ,NP0 ,TC ,1005 ,R/TP		
5	C142	CAP,CERAMIC,CHIP	ECCH0000122	47 pF,50V,J,NP0,TC,1005,R/TP		
5	C143	CAP,CERAMIC,CHIP	ECCH0000120	39 pF,50V,J,NP0,TC,1005,R/TP		
5	C144	CAP,CERAMIC,CHIP	ECCH0000120	39 pF,50V,J,NP0,TC,1005,R/TP		
5	C145	CAP,CERAMIC,CHIP	ECCH0000182	0.1 uF,10V ,K ,X5R ,HD ,1005 ,R/TP		
5	C146	CAP,CERAMIC,CHIP	ECCH0000120	39 pF,50V,J,NP0,TC,1005,R/TP		
5	C147	CAP,CERAMIC,CHIP	ECCH0000120	39 pF,50V,J,NP0,TC,1005,R/TP		
5	C200	CAP,CERAMIC,CHIP	ECCH0000155	10 nF,16V,K,X7R,HD,1005,R/TP		
5	C202	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
5	C203	CAP,CERAMIC,CHIP	ECCH0000182	0.1 uF,10V ,K ,X5R ,HD ,1005 ,R/TP		
5	C204	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
5	C205	CAP,CERAMIC,CHIP	ECCH0000112	15 pF,50V,J,NP0,TC,1005,R/TP		
5	C208	CAP,CERAMIC,CHIP	ECCH0000112	15 pF,50V,J,NP0,TC,1005,R/TP		
5	C209	CAP,CHIP,MAKER	ECZH0001421	2.2 uF,6.3V ,K ,X5R ,HD ,1608 ,R/TP		
5	C210	CAP,CHIP,MAKER	ECZH0001421	2.2 uF,6.3V ,K ,X5R ,HD ,1608 ,R/TP		
5	C211	CAP,CERAMIC,CHIP	ECCH0000182	0.1 uF,10V ,K ,X5R ,HD ,1005 ,R/TP		
5	C212	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
5	C213	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
5	C214	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
5	C215	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
5	C216	CAP,CERAMIC,CHIP	ECCH0000182	0.1 uF,10V ,K ,X5R ,HD ,1005 ,R/TP		
5	C217	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
5	C218	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
5	C219	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
5	C300	CAP,CERAMIC,CHIP	ECCH0000182	0.1 uF,10V ,K ,X5R ,HD ,1005 ,R/TP		
5	C301	CAP,TANTAL,CHIP,MAKER	ECTZ0005201	10 uF,6.3V ,M ,L_ESR ,1608 ,R/TP		
5	C302	CAP,CERAMIC,CHIP	ECCH0000120	39 pF,50V,J,NP0,TC,1005,R/TP		
5	C303	CAP,CERAMIC,CHIP	ECCH0000167	0.1 uF,6.3V,K,X5R,HD,1005,R/TP		
5	C304	CAP,CERAMIC,CHIP	ECCH0000155	10 nF,16V,K,X7R,HD,1005,R/TP		
5	C305	CAP,CERAMIC,CHIP	ECCH0000167	0.1 uF,6.3V,K,X5R,HD,1005,R/TP		
5	C306	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		

## 12. EXPLODED VIEW & REPLACEMENT PART LIST

Level	Location No.	Description	Part Number	Specification	Color	Remark
5	C307	CAP,TANTAL,CHIP,MAKER	ECTZ0004205	33 uF,6.3V ,M ,STD ,2012 ,R/TP		
5	C308	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
5	C309	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
5	C310	CAP,TANTAL,CHIP,MAKER	ECTZ0004205	33 uF,6.3V ,M ,STD ,2012 ,R/TP		
5	C311	CAP,CERAMIC,CHIP	ECCH0000120	39 pF,50V,J,NP0,TC,1005,R/TP		
5	C312	CAP,CERAMIC,CHIP	ECCH0000122	47 pF,50V,J,NP0,TC,1005,R/TP		
5	C313	CAP,CERAMIC,CHIP	ECCH0000122	47 pF,50V,J,NP0,TC,1005,R/TP		
5	C314	CAP,CERAMIC,CHIP	ECCH0000120	39 pF,50V,J,NP0,TC,1005,R/TP		
5	C315	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
5	C316	CAP,CERAMIC,CHIP	ECCH0000122	47 pF,50V,J,NP0,TC,1005,R/TP		
5	C317	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
5	C318	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
5	C319	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
5	C320	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
5	C321	CAP,CERAMIC,CHIP	ECCH0000182	0.1 uF,10V ,K ,X5R ,HD ,1005 ,R/TP		
5	C322	CAP,TANTAL,CHIP,MAKER	ECTZ0004205	33 uF,6.3V ,M ,STD ,2012 ,R/TP		
5	C323	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
5	C377	CAP,CERAMIC,CHIP	ECCH0000182	0.1 uF,10V ,K ,X5R ,HD ,1005 ,R/TP		
5	C400	CAP,CERAMIC,CHIP	ECCH0000393	22 uF,6.3V ,M ,X5R ,HD ,2012 ,R/TP		
5	C401	CAP,CERAMIC,CHIP	ECCH0000155	10 nF,16V,K,X7R,HD,1005,R/TP		
5	C402	CAP,CHIP,MAKER	ECZH0000816	12 pF,50V ,J ,NP0 ,TC ,1005 ,R/TP		
5	C403	CAP,CERAMIC,CHIP	ECCH0000113	18 pF,50V,J,NP0,TC,1005,R/TP		
5	C404	CAP,CHIP,MAKER	ECZH0000830	33 pF,50V ,J ,NP0 ,TC ,1005 ,R/TP		
5	C405	CAP,CERAMIC,CHIP	ECCH0000155	10 nF,16V,K,X7R,HD,1005,R/TP		
5	C406	CAP,CERAMIC,CHIP	ECCH0000120	39 pF,50V,J,NP0,TC,1005,R/TP		
5	C407	CAP,CHIP,MAKER	ECZH0000826	27 pF,50V ,J ,NP0 ,TC ,1005 ,R/TP		
5	C408	CAP,CHIP,MAKER	ECZH0000826	27 pF,50V ,J ,NP0 ,TC ,1005 ,R/TP		
5	C409	CAP,CERAMIC,CHIP	ECCH0000178	1.8 pF,50V ,D ,NP0 ,TC ,1005 ,R/TP		
5	C410	CAP,CERAMIC,CHIP	ECCH0000155	10 nF,16V,K,X7R,HD,1005,R/TP		
5	C411	CAP,CERAMIC,CHIP	ECCH0000110	10 pF,50V,D,NP0,TC,1005,R/TP		
5	C413	CAP,CERAMIC,CHIP	ECCH0000101	.5 pF,50V ,C ,NP0 ,TC ,1005 ,R/TP		
5	C416	CAP,CERAMIC,CHIP	ECCH0000115	22 pF,50V,J,NP0,TC,1005,R/TP		
5	C417	CAP,CERAMIC,CHIP	ECCH0000182	0.1 uF,10V ,K ,X5R ,HD ,1005 ,R/TP		
5	C418	CAP,CHIP,MAKER	ECZH0000813	100 pF,50V ,J ,NP0 ,TC ,1005 ,R/TP		
5	C419	CAP,CERAMIC,CHIP	ECCH0000101	.5 pF,50V ,C ,NP0 ,TC ,1005 ,R/TP		
5	C420	CAP,CHIP,MAKER	ECZH0000830	33 pF,50V ,J ,NP0 ,TC ,1005 ,R/TP		
5	C421	CAP,CERAMIC,CHIP	ECCH0000115	22 pF,50V,J,NP0,TC,1005,R/TP		

## 12. EXPLODED VIEW & REPLACEMENT PART LIST

Level	Location No.	Description	Part Number	Specification	Color	Remark
5	C422	CAP,CHIP,MAKER	ECZH0000826	27 pF,50V ,J ,NP0 ,TC ,1005 ,R/TP		
5	C423	CAP,CERAMIC,CHIP	ECCH0000120	39 pF,50V,J,NP0,TC,1005,R/TP		
5	C424	CAP,CHIP,MAKER	ECZH0000803	2 pF,50V ,C ,NP0 ,TC ,1005 ,R/TP		
5	C425	CAP,CERAMIC,CHIP	ECCH0000178	1.8 pF,50V ,D ,NP0 ,TC ,1005 ,R/TP		
5	C426	CAP,CERAMIC,CHIP	ECCH0000120	39 pF,50V,J,NP0,TC,1005,R/TP		
5	C427	CAP,CERAMIC,CHIP	ECCH0000178	1.8 pF,50V ,D ,NP0 ,TC ,1005 ,R/TP		
5	C428	CAP,CERAMIC,CHIP	ECCH0000178	1.8 pF,50V ,D ,NP0 ,TC ,1005 ,R/TP		
5	C429	CAP,CERAMIC,CHIP	ECCH0000178	1.8 pF,50V ,D ,NP0 ,TC ,1005 ,R/TP		
5	C430	CAP,CHIP,MAKER	ECZH0000826	27 pF,50V ,J ,NP0 ,TC ,1005 ,R/TP		
5	C431	CAP,CHIP,MAKER	ECZH0000826	27 pF,50V ,J ,NP0 ,TC ,1005 ,R/TP		
5	C432	CAP,CHIP,MAKER	ECZH0000826	27 pF,50V ,J ,NP0 ,TC ,1005 ,R/TP		
5	C433	CAP,CERAMIC,CHIP	ECCH0000178	1.8 pF,50V ,D ,NP0 ,TC ,1005 ,R/TP		
5	C434	CAP,CERAMIC,CHIP	ECCH0000115	22 pF,50V,J,NP0,TC,1005,R/TP		
5	C435	CAP,CERAMIC,CHIP	ECCH0000182	0.1 uF,10V ,K ,X5R ,HD ,1005 ,R/TP		
5	C436	CAP,CHIP,MAKER	ECZH0001421	2.2 uF,6.3V ,K ,X5R ,HD ,1608 ,R/TP		
5	C437	CAP,CERAMIC,CHIP	ECCH0000143	1 nF,50V,K,X7R,HD,1005,R/TP		
5	C438	CAP,CERAMIC,CHIP	ECCH0000143	1 nF,50V,K,X7R,HD,1005,R/TP		
5	C439	CAP,CHIP,MAKER	ECZH0001116	270 pF,50V ,K ,X7R ,HD ,1005 ,R/TP		
5	C440	CAP,CHIP,MAKER	ECZH0001116	270 pF,50V ,K ,X7R ,HD ,1005 ,R/TP		
5	C442	CAP,CERAMIC,CHIP	ECCH0000143	1 nF,50V,K,X7R,HD,1005,R/TP		
5	C443	CAP,CHIP,MAKER	ECZH0001421	2.2 uF,6.3V ,K ,X5R ,HD ,1608 ,R/TP		
5	C444	CAP,CERAMIC,CHIP	ECCH0006201	4.7 uF,6.3V ,K ,X5R ,TC ,1608 ,R/TP		
5	C445	CAP,CERAMIC,CHIP	ECCH0000155	10 nF,16V,K,X7R,HD,1005,R/TP		
5	C446	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
5	C447	CAP,CHIP,MAKER	ECZH0000816	12 pF,50V ,J ,NP0 ,TC ,1005 ,R/TP		
5	CN301	CONNECTOR,I/O	ENRY0006401	18 PIN,0.4 mm,ANGLE , ,H=2.5, Reverse Type		
5	CN302	CONNECTOR,ETC	ENZY0016301	3 PIN,3.0 mm,ETC , ,H=2.0		
5	CN303	CONNECTOR, BOARD TO BOARD	ENBY0019501	20 PIN,4 mm,ETC , ,H=1.5, Socket		
5	CN304	CONNECTOR, BOARD TO BOARD	ENBY0033401	70 PIN,0.4 mm,ETC , ,H=2.0, Socket		
5	D100	DIODE,SWITCHING	EDSY0005701	EMT3 ,80 V,4 A,R/TP ,		
5	D101	DIODE,SWITCHING	EDSY0005701	EMT3 ,80 V,4 A,R/TP ,		
5	D301	DIODE,TVS	EDTY0008501	TFSC ,5 V,50 W,R/TP ,small size		
5	D302	DIODE,TVS	EDTY0008501	TFSC ,5 V,50 W,R/TP ,small size		
5	D303	DIODE,TVS	EDTY0008501	TFSC ,5 V,50 W,R/TP ,small size		
5	D304	DIODE,TVS	EDTY0008501	TFSC ,5 V,50 W,R/TP ,small size		
5	D305	DIODE,TVS	EDTY0008501	TFSC ,5 V,50 W,R/TP ,small size		

## 12. EXPLODED VIEW & REPLACEMENT PART LIST

Level	Location No.	Description	Part Number	Specification	Color	Remark
5	FL201	FILTER,CERAMIC	SFCY0000901	2450 MHz,2.00*1.25*0.95 ,SMD ,Bluetooth Band Pass Filter		
5	FL301	FILTER,EMI/POWER	SFEY0007401	SMD ,Coated type , CSP Package , 4-Channel ESD		
5	FL303	FILTER,EMI/POWER	SFEY0010501	SMD ,SMD ,18 V,4ch. EMI_ESD Filter (100Ohm,15pF), Pb-free		
5	FL304	FILTER,EMI/POWER	SFEY0010501	SMD ,SMD ,18 V,4ch. EMI_ESD Filter (100Ohm,15pF), Pb-free		
5	FL305	FILTER,EMI/POWER	SFEY0007401	SMD ,Coated type , CSP Package , 4-Channel ESD		
5	FL306	FILTER,EMI/POWER	SFEY0010501	SMD ,SMD ,18 V,4ch. EMI_ESD Filter (100Ohm,15pF), Pb-free		
5	FL307	FILTER,EMI/POWER	SFEY0010501	SMD ,SMD ,18 V,4ch. EMI_ESD Filter (100Ohm,15pF), Pb-free		
5	FL308	FILTER,EMI/POWER	SFEY0007401	SMD ,Coated type , CSP Package , 4-Channel ESD		
5	FL309	FILTER,EMI/POWER	SFEY0007401	SMD ,Coated type , CSP Package , 4-Channel ESD		
5	FL310	FILTER,EMI/POWER	SFEY0010501	SMD ,SMD ,18 V,4ch. EMI_ESD Filter (100Ohm,15pF), Pb-free		
5	FL311	FILTER,EMI/POWER	SFEY0010501	SMD ,SMD ,18 V,4ch. EMI_ESD Filter (100Ohm,15pF), Pb-free		
5	FL400	FILTER,SEPERATOR	SFAY0005602	900 ,1800.1900 ,2.7 dB,3.0 dB,30 dB,30 dB,ETC .5.6*4.5*1.4, TRIPLE FEM		
5	L200	INDUCTOR,CHIP	ELCH0004711	22 nH,J ,1005 ,R/TP ,		
5	L402	INDUCTOR,CHIP	ELCH0009106	6.2 nH,J ,1005 ,R/TP ,coil type		
5	L403	INDUCTOR,CHIP	ELCH0001408	6.8 nH,J ,1005 ,R/TP ,Pb Free		
5	L404	INDUCTOR,CHIP	ELCH0004711	22 nH,J ,1005 ,R/TP ,		
5	L410	INDUCTOR,CHIP	ELCH0005002	2.7 nH,S ,1005 ,R/TP ,		
5	Q300	TR,BJT,NPN	EQBN0017601	VMT3 ,0.15 W,R/TP ,		
5	R100	RES,CHIP	ERHY0000261	10K ohm,1/16W,J,1005,R/TP		
5	R101	RES,CHIP	ERHY0010201	1.2 Mohm,1/16W ,F ,1005 ,R/TP		
5	R102	RES,CHIP	ERHY0000106	100 ohm,1/16W,F,1005,R/TP		
5	R104	RES,CHIP	ERHY0000220	100 ohm,1/16W,J,1005,R/TP		
5	R105	RES,CHIP	ERHY0000512	10M ohm,1/16W,J,1608,R/TP		
5	R106	RES,CHIP	ERHY0000280	100K ohm,1/16W,J,1005,R/TP		
5	R107	RES,CHIP	ERHY0000152	82K ohm,1/16W,F,1005,R/TP		
5	R108	RES,CHIP	ERHY0000202	4.7 ohm,1/16W,J,1005,R/TP		
5	R109	RES,CHIP	ERHY0000267	24K ohm,1/16W,J,1005,R/TP		
5	R110	RES,CHIP	ERHY0000202	4.7 ohm,1/16W,J,1005,R/TP		
5	R111	RES,CHIP	ERHY0000291	330K ohm,1/16W,J,1005,R/TP		
5	R112	RES,CHIP	ERHY0000261	10K ohm,1/16W,J,1005,R/TP		
5	R113	RES,CHIP	ERHY0000261	10K ohm,1/16W,J,1005,R/TP		
5	R195	RES,CHIP	ERHY0000201	0 ohm,1/16W,J,1005,R/TP		

## 12. EXPLODED VIEW & REPLACEMENT PART LIST

Level	Location No.	Description	Part Number	Specification	Color	Remark
5	R196	RES,CHIP	ERHY0000201	0 ohm,1/16W,J,1005,R/TP		
5	R197	RES,CHIP	ERHY0000261	10K ohm,1/16W,J,1005,R/TP		
5	R202	RES,CHIP	ERHY0000254	4.7K ohm,1/16W,J,1005,R/TP		
5	R203	RES,CHIP	ERHY0000273	47K ohm,1/16W,J,1005,R/TP		
5	R204	RES,CHIP	ERHY0000280	100K ohm,1/16W,J,1005,R/TP		
5	R207	RES,CHIP	ERHY0000261	10K ohm,1/16W,J,1005,R/TP		
5	R208	RES,CHIP	ERHY0000280	100K ohm,1/16W,J,1005,R/TP		
5	R209	RES,CHIP,MAKER	ERHZ0000268	33 Kohm,1/16W ,F ,1005 ,R/TP		
5	R210	RES,CHIP	ERHY0000280	100K ohm,1/16W,J,1005,R/TP		
5	R211	RES,CHIP	ERHY0000261	10K ohm,1/16W,J,1005,R/TP		
5	R212	RES,CHIP	ERHY0000280	100K ohm,1/16W,J,1005,R/TP		
5	R300	RES,CHIP	ERHY0000241	1K ohm,1/16W,J,1005,R/TP		
5	R301	RES,CHIP	ERHY0000220	100 ohm,1/16W,J,1005,R/TP		
5	R302	RES,CHIP	ERHY0000244	1.5K ohm,1/16W,J,1005,R/TP		
5	R303	RES,CHIP	ERHY0000241	1K ohm,1/16W,J,1005,R/TP		
5	R304	RES,CHIP	ERHY0000269	30K ohm,1/16W,J,1005,R/TP		
5	R305	RES,CHIP	ERHY0000220	100 ohm,1/16W,J,1005,R/TP		
5	R306	RES,CHIP	ERHY0000220	100 ohm,1/16W,J,1005,R/TP		
5	R307	RES,CHIP	ERHY0000220	100 ohm,1/16W,J,1005,R/TP		
5	R308	RES,CHIP	ERHY0000269	30K ohm,1/16W,J,1005,R/TP		
5	R309	RES,CHIP	ERHY0000280	100K ohm,1/16W,J,1005,R/TP		
5	R317	RES,CHIP	ERHY0000261	10K ohm,1/16W,J,1005,R/TP		
5	R318	RES,CHIP	ERHY0000262	12K ohm,1/16W,J,1005,R/TP		
5	R319	RES,CHIP	ERHY0000262	12K ohm,1/16W,J,1005,R/TP		
5	R321	RES,CHIP	ERHY0000273	47K ohm,1/16W,J,1005,R/TP		
5	R322	RES,CHIP	ERHY0000280	100K ohm,1/16W,J,1005,R/TP		
5	R323	RES,CHIP	ERHY0000251	3.6K ohm,1/16W,J,1005,R/TP		
5	R326	RES,CHIP	ERHY0000280	100K ohm,1/16W,J,1005,R/TP		
5	R400	RES,CHIP	ERHY0000220	100 ohm,1/16W,J,1005,R/TP		
5	R401	RES,CHIP	ERHY0000220	100 ohm,1/16W,J,1005,R/TP		
5	R402	RES,CHIP	ERHY0000241	1K ohm,1/16W,J,1005,R/TP		
5	R404	RES,CHIP	ERHY0000204	12 ohm,1/16W,J,1005,R/TP		
5	R405	RES,CHIP	ERHY0000232	430 ohm,1/16W,J,1005,R/TP		
5	R406	RES,CHIP	ERHY0000232	430 ohm,1/16W,J,1005,R/TP		
5	R407	RES,CHIP	ERHY0000206	18 ohm,1/16W,J,1005,R/TP		
5	R408	RES,CHIP	ERHY0000229	300 ohm,1/16W,J,1005,R/TP		
5	R409	RES,CHIP	ERHY0000229	300 ohm,1/16W,J,1005,R/TP		

## 12. EXPLODED VIEW & REPLACEMENT PART LIST

Level	Location No.	Description	Part Number	Specification	Color	Remark
5	R410	RES,CHIP	ERHY0000201	0 ohm,1/16W,J,1005,R/TP		
5	R412	RES,CHIP	ERHY0000220	100 ohm,1/16W,J,1005,R/TP		
5	R413	RES,CHIP,MAKER	ERHZ0000205	1 Mohm,1/16W ,F ,1005 ,R/TP		
5	R414	RES,CHIP	ERHY0000220	100 ohm,1/16W,J,1005,R/TP		
5	R415	RES,CHIP	ERHY0000263	15K ohm,1/16W,J,1005,R/TP		
5	R416	RES,CHIP	ERHY0000201	0 ohm,1/16W,J,1005,R/TP		
5	R417	RES,CHIP	ERHY0000280	100K ohm,1/16W,J,1005,R/TP		
5	R418	RES,CHIP	ERHY0000201	0 ohm,1/16W,J,1005,R/TP		
5	SW400	CONN,RF SWITCH	ENWY0002301	ANGLE ,SMD ,0.8 dB,		
5	U100	IC	EUSY0119002	4X3 UCSP / CODE : B12-4 ,10 PIN,R/TP ,DUAL SPDT ANALOG SWITCHES(Pb Free)		
5	U101	IC	EUSY0181601	BGA ,148 PIN,R/TP ,GSM ANALOG BASEBAND, Pb Free		
5	U102	IC	EUSY0181504	CSP BGA ,204 PIN,R/TP ,AD6527 w/USB		
5	U200	IC	EUSY0133901	Micro SMD, 5 Bump Package ,5 PIN,R/TP ,150mA-CMOS-LDO,PBFREE		
5	U201	IC	EUSY0227901	SON5-P-0.35(fSV) ,5 PIN,R/TP ,2-INPUT AND GATE, Pb Free		
5	U202	IC	EUSY0239102	6.9 * 7.9 * 1.5 mm ,28 PIN,R/TP ,Bluetooth Module v1.2, 26MHz, For GSM		
5	U203	IC	EUSY0163901	uCSP ,10 PIN,R/TP ,Dual Analog Switch, 300MHz Bandwidth		
5	U204	IC	EUSY0290601	BGA ,107 PIN,R/TP ,P-FBGA, 128*128*64*1G, 9*12*1.4t, BOTTOM/TOP BOOT ,Pb-Free		
5	U205	IC	EUSY0254701	DFN 3*3*0.9 ,10 PIN,R/TP ,Charger IC, I Max 1A, Wall Adaptor/USB Charger		
5	U300	IC	EUSY0133905	Micro SMD, 5 Bump ,5 PIN,R/TP ,2.6V/150mA LDO Regulator, Pb-Free		
5	U302	IC	EUSY0163901	uCSP ,10 PIN,R/TP ,Dual Analog Switch, 300MHz Bandwidth		
5	U303	DIODE,TVS	EDTY0006501	SC70-6L ,5.25 V,100 W,R/TP ,		
5	U304	IC	EUSY0163901	uCSP ,10 PIN,R/TP ,Dual Analog Switch, 300MHz Bandwidth		
5	U305	IC	EUSY0119002	4X3 UCSP / CODE : B12-4 ,10 PIN,R/TP ,DUAL SPDT ANALOG SWITCHES(Pb Free)		
5	U306	IC	EUSY0218401	UCSP ,10 PIN,R/TP ,Dual Analog switch with shunt switch, Pb Free		
5	U307	IC	EUSY0159101	MICRO FOOT(6 BUMP) ,6 PIN,R/TP ,SPDT ANALOG SWITCH		
5	U400	PAM	SMPY0008301	35 dBm,53 %,0.0000025 A, dBc,50 dB,6.0*6.0*1.2 ,SMD ,FOR QUAD BAND GSM AND GPRS		
5	U401	IC	EUSY0223202	5.0*5.0 ,32 PIN,R/TP ,AERO11 TRANSCEIVER, D Version		
5	U402	IC	EUSY0077201	SC70 ,5 PIN,R/TP ,Inverter Gate, Pb Free		

## 12. EXPLODED VIEW & REPLACEMENT PART LIST

Level	Location No.	Description	Part Number	Specification	Color	Remark
5	U403	IC	EUSY0133901	Micro SMD, 5 Bump Package ,5 PIN,R/TP ,150mA-CMOS-LDO,PBFFREE		
5	VA100	VARISTOR	SEVY0001001	14 V , ,SMD ,50pF, 1005		
5	VA101	VARISTOR	SEVY0001001	14 V , ,SMD ,50pF, 1005		
5	VA201	VARISTOR	SEVY0001001	14 V , ,SMD ,50pF, 1005		
5	VA302	VARISTOR	SEVY0001001	14 V , ,SMD ,50pF, 1005		
5	X100	X-TAL	EXXY0004601	.032768 MHz,20 PPM,7 pF,65000 ohm,SMD ,6.9*1.4*1.3		
5	X400	VCCTXO	EXSK0006601	26 MHz,2.5 PPM,10 pF,SMD ,3.2*2.5*1.2 ,Pb Free		
4	SPFY00	PCB,MAIN	SPFY0122501	FR-4 ,0.8 mm,BUILD-UP 8 ,		
4	WSYY00	SOFTWARE	WSYY0372801	KG320P64-07-V10c-XXX-XX MAY 08 2006 mot@ KG320 CIS S/W		
3	SAJY00	PCB ASSY,SUB	SAJY0017202		Black	
4	SAJB00	PCB ASSY,SUB,INSERT	SAJB0007401	KG320 EUA_SUB PCB	Black	
5	AFBA00	FRAME ASSY,SHIELD	AFBA0004201			4
5	SJMY00	VIBRATOR,MOTOR	SJMY0008202	3 V, .1 A,10*2.0 ,17mm 8040 BLDC Motor		20
5	SVCY00	CAMERA	SVCY0011701	CMOS ,MEGA ,1.3M Micron(SOC1320) 1/4", 8*14*5.4t, BTB (Rotation of 90)		23
4	SAJE00	PCB ASSY,SUB,SMT	SAJE0010702		Black	22
5	SAJC00	PCB ASSY,SUB,SMT BOTTOM	SAJC0009901	KG320 EUA_SUB PCB	Black	
6	BAT201	BATTERY,CELL,LITHIUM	SBCL0001701	2 V,0.5 mAh,CYLINDER ,Reflow type BB, Max T 1.67, phi 4.8, Pb-Free		
6	C101	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
6	C102	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
6	C103	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
6	C104	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
6	C105	CAP,CERAMIC,CHIP	ECCH0000155	10 nF,16V,K,X7R,HD,1005,R/TP		
6	C106	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
6	C107	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
6	C108	CAP,CERAMIC,CHIP	ECCH0000155	10 nF,16V,K,X7R,HD,1005,R/TP		
6	C109	CAP,CERAMIC,CHIP	ECCH0000155	10 nF,16V,K,X7R,HD,1005,R/TP		
6	C110	CAP,CERAMIC,CHIP	ECCH0000182	0.1 uF,10V ,K ,X5R ,HD ,1005 ,R/TP		
6	C111	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
6	C112	CAP,CHIP,MAKER	ECZH0000830	33 pF,50V ,J ,NP0 ,TC ,1005 ,R/TP		
6	C113	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
6	C114	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
6	C117	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
6	C118	CAP,CERAMIC,CHIP	ECCH0000143	1 nF,50V,K,X7R,HD,1005,R/TP		
6	C119	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		

## 12. EXPLODED VIEW & REPLACEMENT PART LIST

Level	Location No.	Description	Part Number	Specification	Color	Remark
6	C120	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
6	C121	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
6	C122	CAP,CERAMIC,CHIP	ECCH0000182	0.1 uF,10V ,K ,X5R ,HD ,1005 ,R/TP		
6	C123	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
6	C124	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
6	C125	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
6	C126	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
6	C127	CAP,CHIP,MAKER	ECZH0001421	2.2 uF,6.3V ,K ,X5R ,HD ,1608 ,R/TP		
6	C128	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
6	C129	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
6	C130	CAP,CERAMIC,CHIP	ECCH0000155	10 nF,16V,K,X7R,HD,1005,R/TP		
6	C131	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
6	C201	CAP,CHIP,MAKER	ECZH0001211	220 nF,10V ,Z ,Y5V ,HD ,1005 ,R/TP		
6	C203	CAP,CERAMIC,CHIP	ECCH0000115	22 pF,50V,J,NP0,TC,1005,R/TP		
6	C204	CAP,CERAMIC,CHIP	ECCH0000143	1 nF,50V,K,X7R,HD,1005,R/TP		
6	C205	CAP,CHIP,MAKER	ECZH0000813	100 pF,50V ,J ,NP0 ,TC ,1005 ,R/TP		
6	C206	CAP,CERAMIC,CHIP	ECCH0006201	4.7 uF,6.3V ,K ,X5R ,TC ,1608 ,R/TP		
6	C207	CAP,CERAMIC,CHIP	ECCH0000143	1 nF,50V,K,X7R,HD,1005,R/TP		
6	C208	CAP,CERAMIC,CHIP	ECCH0002002	47000 pF,10V ,K ,B ,HD ,1005 ,R/TP		
6	C209	RES,CHIP	ERHY0000201	0 ohm,1/16W,J,1005,R/TP		
6	C210	CAP,CERAMIC,CHIP	ECCH0000122	47 pF,50V,J,NP0,TC,1005,R/TP		
6	C211	CAP,CERAMIC,CHIP	ECCH0000122	47 pF,50V,J,NP0,TC,1005,R/TP		
6	C214	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
6	C215	CAP,CERAMIC,CHIP	ECCH0000155	10 nF,16V,K,X7R,HD,1005,R/TP		
6	C216	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
6	C217	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
6	C218	CAP,CERAMIC,CHIP	ECCH0000182	0.1 uF,10V ,K ,X5R ,HD ,1005 ,R/TP		
6	C219	CAP,CERAMIC,CHIP	ECCH0000182	0.1 uF,10V ,K ,X5R ,HD ,1005 ,R/TP		
6	C220	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
6	C221	CAP,CERAMIC,CHIP	ECCH0000182	0.1 uF,10V ,K ,X5R ,HD ,1005 ,R/TP		
6	C222	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
6	C223	CAP,CERAMIC,CHIP	ECCH0000182	0.1 uF,10V ,K ,X5R ,HD ,1005 ,R/TP		
6	C224	CAP,CERAMIC,CHIP	ECCH0000182	0.1 uF,10V ,K ,X5R ,HD ,1005 ,R/TP		
6	C225	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
6	C226	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
6	C227	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
6	C228	CAP,CERAMIC,CHIP	ECCH0000182	0.1 uF,10V ,K ,X5R ,HD ,1005 ,R/TP		

## 12. EXPLODED VIEW & REPLACEMENT PART LIST

Level	Location No.	Description	Part Number	Specification	Color	Remark
6	C229	CAP,CERAMIC,CHIP	ECCH0000182	0.1 uF,10V ,K ,X5R ,HD ,1005 ,R/TP		
6	C233	CAP,CERAMIC,CHIP	ECCH0000143	1 nF,50V,K,X7R,HD,1005,R/TP		
6	CN102	CONNECTOR, BOARD TO BOARD	ENBY0025701	34 PIN,0.4 mm,ETC , ,H=1.5, Socket		
6	CN201	CONNECTOR,ETC	ENZY0016601	2 PIN,1.0 mm,ETC , ,H=1.4		
6	D201	DIODE,SWITCHING	EDSY0012301	1-1E1A ,85 V,1 A,R/TP ,P=200mW, IFM=200mA		
6	FB101	FILTER,BEAD,CHIP	SFBH0007102	10 ohm,1005 ,Ferrite Bead		
6	FB102	FILTER,BEAD,CHIP	SFBH0007102	10 ohm,1005 ,Ferrite Bead		
6	FB103	FILTER,BEAD,CHIP	SFBH0007102	10 ohm,1005 ,Ferrite Bead		
6	FB201	FILTER,BEAD,CHIP	SFBH0007102	10 ohm,1005 ,Ferrite Bead		
6	FB202	FILTER,BEAD,CHIP	SFBH0007102	10 ohm,1005 ,Ferrite Bead		
6	FL101	FILTER,EMI/POWER	SFEY0010501	SMD ,SMD ,18 V,4ch. EMI_ESD Filter (100Ohm,15pF), Pb-free		
6	FL102	FILTER,EMI/POWER	SFEY0010501	SMD ,SMD ,18 V,4ch. EMI_ESD Filter (100Ohm,15pF), Pb-free		
6	FL103	FILTER,EMI/POWER	SFEY0010501	SMD ,SMD ,18 V,4ch. EMI_ESD Filter (100Ohm,15pF), Pb-free		
6	FL104	FILTER,EMI/POWER	SFEY0010501	SMD ,SMD ,18 V,4ch. EMI_ESD Filter (100Ohm,15pF), Pb-free		
6	FL105	FILTER,EMI/POWER	SFEY0010501	SMD ,SMD ,18 V,4ch. EMI_ESD Filter (100Ohm,15pF), Pb-free		
6	FL106	FILTER,EMI/POWER	SFEY0011101	SMD ,4 ch,ESD protection,1608 size,0ohm,18V,30pF		
6	FL107	FILTER,EMI/POWER	SFEY0011101	SMD ,4 ch,ESD protection,1608 size,0ohm,18V,30pF		
6	FL108	FILTER,EMI/POWER	SFEY0011101	SMD ,4 ch,ESD protection,1608 size,0ohm,18V,30pF		
6	FL109	FILTER,EMI/POWER	SFEY0011101	SMD ,4 ch,ESD protection,1608 size,0ohm,18V,30pF		
6	FL110	FILTER,EMI/POWER	SFEY0011101	SMD ,4 ch,ESD protection,1608 size,0ohm,18V,30pF		
6	J201	CONN,SOCKET	ENSY0016501	6 PIN,ETC , ,2.54 mm,H=1.5		
6	L101	INDUCTOR,CHIP	ELCH0003811	1000 nH,K ,1608 ,R/TP ,COIL TYPE		
6	LD201	DIODE,LED,MODULE	EDLM0008501	WHITE ,1 LED,2.0*1.5*0.45 ,R/TP ,pb-free(power LED)		
6	Q201	TR,BJT,ARRAY	EQBA0002701	EMT6 ,150 mW,R/TP ,NPN, PNP, 150 mA		
6	R101	RES,CHIP	ERHY0000280	100K ohm,1/16W,J,1005,R/TP		
6	R102	RES,CHIP	ERHY0000201	0 ohm,1/16W,J,1005,R/TP		
6	R106	RES,CHIP	ERHY0000273	47K ohm,1/16W,J,1005,R/TP		
6	R108	RES,CHIP	ERHY0000276	68K ohm,1/16W,J,1005,R/TP		
6	R109	RES,CHIP	ERHY0000220	100 ohm,1/16W,J,1005,R/TP		
6	R110	RES,CHIP	ERHY0000208	22 ohm,1/16W,J,1005,R/TP		
6	R111	RES,CHIP	ERHY0000244	1.5K ohm,1/16W,J,1005,R/TP		
6	R112	RES,CHIP	ERHY0000280	100K ohm,1/16W,J,1005,R/TP		
6	R113	RES,CHIP	ERHY0000258	7.5K ohm,1/16W,J,1005,R/TP		
6	R114	RES,CHIP	ERHY0000280	100K ohm,1/16W,J,1005,R/TP		

## 12. EXPLODED VIEW & REPLACEMENT PART LIST

Level	Location No.	Description	Part Number	Specification	Color	Remark
6	R115	RES,CHIP	ERHY0000201	0 ohm,1/16W,J,1005,R/TP		
6	R201	RES,CHIP	ERHY0000265	20K ohm,1/16W,J,1005,R/TP		
6	R202	RES,CHIP	ERHY0000201	0 ohm,1/16W,J,1005,R/TP		
6	R203	RES,CHIP	ERHY0000273	47K ohm,1/16W,J,1005,R/TP		
6	R206	RES,CHIP	ERHY0000220	100 ohm,1/16W,J,1005,R/TP		
6	R207	RES,CHIP	ERHY0000244	1.5K ohm,1/16W,J,1005,R/TP		
6	R208	RES,CHIP	ERHY0000261	10K ohm,1/16W,J,1005,R/TP		
6	R209	RES,CHIP	ERHY0000278	82K ohm,1/16W,J,1005,R/TP		
6	R210	RES,CHIP	ERHY0000278	82K ohm,1/16W,J,1005,R/TP		
6	R211	RES,CHIP	ERHY0000268	27K ohm,1/16W,J,1005,R/TP		
6	R212	RES,CHIP	ERHY0000250	3.3K ohm,1/16W,J,1005,R/TP		
6	R213	RES,ARRAY,R	ERNR0003201	10 ohm,10 ohm,8 PIN,J ,1/16W ,SMD ,R/TP		
6	R215	RES,CHIP	ERHY0000254	4.7K ohm,1/16W,J,1005,R/TP		
6	R216	RES,CHIP	ERHY0000254	4.7K ohm,1/16W,J,1005,R/TP		
6	R219	RES,CHIP	ERHY0000201	0 ohm,1/16W,J,1005,R/TP		
6	R222	RES,CHIP	ERHY0000201	0 ohm,1/16W,J,1005,R/TP		
6	R223	RES,CHIP	ERHY0000201	0 ohm,1/16W,J,1005,R/TP		
6	R299	RES,CHIP	ERHY0000280	100K ohm,1/16W,J,1005,R/TP		
6	U101	IC	EUSY0154410	MLF ,10 PIN,R/TP ,Dual(1.8V/150mA,2.8V/300mA) LDO Regulator		
6	U102	IC	EUSY0223003	HVSOF5 ,5 PIN,R/TP ,150mA CMOS LDO WITH OUTPUT CONTROL / 3.3V		
6	U103	IC	EUSY0265202	BGA(8*8) ,140 PIN,R/TP ,3M Camera, TV Out, NAND I/F, Multi Media Chip		
6	U104	IC	EUSY0245401	DFN ,16 PIN,R/TP ,Main 3 LEDs(60mA) + Flash (300mA) Charge pump		
6	U105	IC	EUSY0200301	Leadless chip ,6 PIN,R/TP ,Hall S/W, Pb Free		
6	U201	IC	EUSY0154410	MLF ,10 PIN,R/TP ,Dual(1.8V/150mA,2.8V/300mA) LDO Regulator		
6	U202	IC	EUSY0259801	WLCSP ,67 PIN,R/TP ,WLCSP ,67PIN,R/TP ,MA5Si2(64POLY MIDI / Internal D-AMP)		
5	SAJD00	PCB ASSY,SUB,SMT TOP	SAJD0011601	KG320 EUA_SUB PCB	Black	
6	C115	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
6	C116	CAP,CERAMIC,CHIP	ECCH0004904	1 uF,6.3V ,K ,X5R ,TC ,1005 ,R/TP		
6	CN101	CONNECTOR, BOARD TO BOARD	ENBY0017301	70 PIN,0.4 mm,STRAIGHT ,AU ,MALE		
6	CN202	CONNECTOR, BOARD TO BOARD	ENBY0019101	24 PIN,0.4 mm,STRAIGHT , ,H1.5, MALE		
5	SPJY00	PCB,SUB	SPJY0024301	FR-4 ,0.8 mm,BUILD-UP 8 ,		

## 12. EXPLODED VIEW & REPLACEMENT PART LIST

### 12.3 Accessory

**Note:** This Chapter is used for reference, Part order is ordered by SBOM standard on GCSC

Level	Location No.	Description	Part Number	Specification	Color	Remark
2	ADEY00	DATA KIT	ADEY0001057	KG320 Data kit of English version		
3	MBAZ04	BAG	MBAZ0004701	CD Cover		
3	MCHZ00	COMPACT DISK	MCHZ0016101		Black	
3	MMBA00	MANUAL,INSTALLATION	MMBA0018505	Installation guide for PC Sync		
3	MSFG02	STICKER,SEAL	MSFG0000801	Steaker seal of Data kit case		
2	SBPL00	BATTERY PACK,LI-ION	SBPL0082801	3.7 V,600 mAh,1 CELL,PRISMATIC ,KG320(Aegis) BATT, Pb-Free		15
2	SGDY00	DATA CABLE	SGDY0010901	LG-US03K ,18pin USB DataCable		
2	SGEY00	EAR PHONE/EAR MIKE SET	SGEY0005516	GSM FORDER ,KG320(C2EAR PHONE)		
2	SSAD00	ADAPTOR,AC-DC	SSAD0021304	100-240V ,5060 Hz,4.8 V,0.9 A,CB & CE & GOST ,18pin plug		
2		ADAPTOR,AC-DC	SSAD0021301	100-240V ,5060 Hz,4.8 V,0.9 A,CB & CE & GOST ,		
2		ADAPTOR,AC-DC	SSAD0021302	100-240V ,5060 Hz,4.8 V, .9 A,CB & CE & GOST ,18pin plug		
2		ADAPTOR,AC-DC	SSAD0021303	100-240V ,5060 Hz,4.8 V,0.9 A,CB & CE & GOST ,18pin plug		

## Note

---

